

This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.


We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + Refrain from automated querying Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search


Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at http://books.google.com/



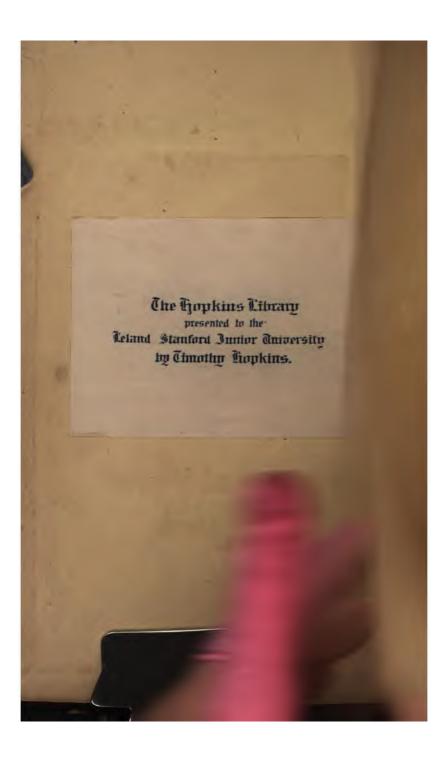





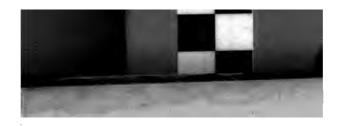


.

•


. . .

.



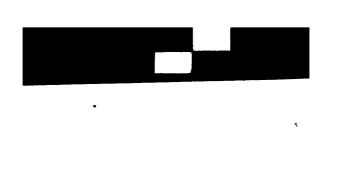

,

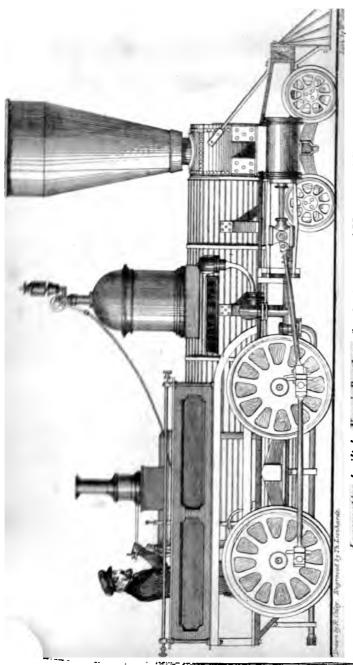

Locomotive built by Norris Anothers for the Syracuse & Viisa Rail Roud 1831. with Septimus Norris Putent Diroct Action Variable Expansion Valves.

NORRIS'S HAND-BOOK

FOR

LOCOMOTIVE ENGINEERS

AND

MACHINISTS:

COMPRISING

THE PROPORTIONS AND CALCULATIONS FOR CONSTRUCTING LOCO-MOTIVES, MANNER OF SETTING VALVES, TABLES OF SQUARES, CUBES, AREAS, &c. &c.

BY SEPTIMUS NORRIS,

CIVIL AND MECHANICAL ENGINEER.

"Knowledge is power."

PHILADELPHIA:

HENRY CAREY BAIRD,

SUCCESSOR TO E. L. CARRY.

1852.

Bred US

. - :.



Entered according to Act of Congress, in the year 1852, by SEPTIMUS NORRIS,

in the Clerk's Office of the District Court of the United States in and for the Eastern District of Pennsylvania.

STEREOTYPED BY L. JOHNSON AND CO.
PHILADELPHIA.
PRINTED BY T. K. AND P. G. COLLINS.

WILLIAM NORRIS, ESQ.

AS A TESTIMONY OF

ESTEEM AND ADMIRATION OF HIS GREAT INTELLECTUAL ATTAINMENTS,

AND OF

HIS SCIENTIFIC AND CLASSICAL KNOWLEDGE;


Chis Bolume,

DESCRIBING THE GREATEST WORK OF MAN,

The Locomotive Steam Engine,

IS APPECTIONATELY INSCRIBED BY HIS BROTHER,

THE AUTHOR.



PREFACE.

In presenting this work to the Engineers of the United States, I beg they will study it with attention, as it is the result of many days' close application and research. I have taken care to present all formulas and rules in the most simple manner, so that there will be no danger of the young student being discouraged by unnecessary display of algebraical formulas, which the sight of frightens the timid. All may understand who are familiar with the simple rules of Arithmetic,—Addition, Subtraction, Multiplication, and Division. I give here the result of my experience after a study of twenty years, and for the last twelve years engaged with my senior brother, William Norris, to whom I am entirely indebted for all the information I have received relating to locomotives. He built the first locomotive in this country, and was the first engineer that ever attempted to surmount the Inclined Plane across the Schuylkill, where there is a rise of 1 in 14, for 1 mile equal to 377 feet ascent. wonderful performance was made amid the shouts of thousands: no one has ever attempted such a feat since. In connection with my brothers. I have constructed and built some five hundred and thirty locomotives; one hundred and seventy of which are now successfully running on roads in England and the Continent, seventeen of which are running on the Birmingham and Gloucester Railway, England. Some builders, or perhaps foremen of the locomotive-shops of this country, may think it unwise in my giving to all mechanics the secrets (which they consider) of the business. My belief is, that all I can teach a man or apprentice, so much the better will be the success of my business; and the million should be learned in all things, as well as the few I give here every thing illiberal-minded.

relating to the construction of locomotives; and I hope my feeble efforts may prove of value to many who seek after this great science, Mechanics. It is the greatest of all sciences, teaches the mind to think correctly, and produces that intellectual enjoyment which no other study can approach.




TABLE OF CONTENTS. -

•	Page
AREAS of Circles, Diameters, and Circumferences	40
Areas of Segments and Zones of a Circle	46
Boiler of Locomotive	288
Cast Iron and Wrought, Elasticity of	206
Conic Sections	102
Connecting Rods of Locomotives	271
Cylinders and Valves of Locomotives	261
Dimensions of Parts of Locomotives	218
Eccentric, and Mode of Setting in Shaft	174
Eccentrics and Rods	278
Feed Pumps of Locomotives	265
Fractional Parts of an Inch	167

	Page
Framing of Locomotives	252
Friction	198
Grades, Resistance per Ton	203
Lever	168
Mechanical Powers	192
Mensuration of Solids	117
Mensuration of Surfaces	104
Miscellaneous Remarks	205
Proportions of Length of Circular Arcs	55
Proportions of Length of Semi-Elliptic Arcs	58
Radius of Curves	190
Railways	151
Reciprocals of Numbers	31
Resistance against Piston	207
Revolutions of Driving Wheels	191
Safety Valve and Lever	178
Safety Valves	257
Setting Valves	280
Shrinkage of Tire Bars	188
Spring Steel	189





TABLE OF CONTENTS.	11
Squares, Cubes, Square Roots, Cube Roots	Page 69
Steam Engine	143
Time of Running One Mile	204
Tractive Power of Locomotives	173
Tubes of Locomotives	249
Valve Motions	275
Weight of Materials	130
Weights and Measures	13
Wheels of Locomotives	267

Same Barries Lane

· .

•

. . .

•

•

٠.





NORRIS'S HAND-BOOK.

TROY WEIGHT.

 $\begin{array}{rcl}
 & grains \\
 & 24 = & 1 \ dwt \\
 & 480 = & 20 = & 1 \ oz \\
 & 5760 = & 240 = & 12 = & 1 \ lb
 \end{array}$

AVOIRDUPOIS WEIGHT.

drachms 16 = 1 oz 256 = 16 = 1 lb 7168 = 448 = 28 = 1 quarter 286782 = 1792 = 112 = 4 = 1 cwt 573440 = 35840 = 2240 = 80 = 20 = 1 ton $1 \text{ lb.} = 14 \text{ oz., } 11 \text{ dwt., } 15\frac{1}{2} \text{ gr. troy.}$ $1 \text{ oz.} = 18 \text{ dwt., } 5\frac{1}{2} \text{ gr. troy.}$

N.B.—7000 troy grains make 1 pound avoirdupois; hence 175 pounds troy are equal to 144 pounds avoirdupois.

APOTHECARIES' WEIGHT.

grains 20 = 1 scruple 60 = 3 = 1 drachm 480 = 24 = 8 = 1 oz 5760 = 288 = 96 = 12 = 1 B

LONG MEASURE.

inches
$$12 = 1 \text{ foot}$$

$$36 = 8 = 1 \text{ yard}$$

$$72 = 6 = 2 = 1 \text{ fathom}$$

$$198 = 16\frac{1}{2} = 5\frac{1}{2} = 2\frac{3}{4} = 1 \text{ pole}$$

$$7920 = 660 = 220 = 110 = 40 = 1 \text{ furlong}$$

$$63360 = 5280 = 1760 = 880 = 320 = 8 = 1 \text{ mile}$$

A mile contains 80 chains, land measure; and a chain contains 100 links, or 22 yards. An inch contains 12 lines.

MEASURE OF THE CIRCLE.

seconds (") 60 = 1 minute (') 360 = 60 = 1 degree (°) 32400 = 5400 = 90 = 1 quadrant 129600 = 21600 = 360 = 4 = 1 circumference

WINE MEASURE.

```
pints
2 = 1 \text{ quart}
8 = 4 = 1 \text{ gallon}
336 = 168 = 42 = 1 \text{ tierce}
504 = 257 = 63 = 1\frac{1}{2} = 1 \text{ hogshead}
672 = 336 = 84 = 2 = 1\frac{1}{2} = 1 \text{ puncheon}
1008 = 504 = 126 = 3 = 2 = 1\frac{1}{2} = 1 \text{ pipe}
2016 = 1008 = 252 = 6 = 4 = 3 = 2 = 1 \text{ tun}
```

2,

ALE AND BEER MEASURE.

pints 2 = 1 quart 8 = 4 = 1 gallon 72 = 36 = 2 = 1 firkin 144 = 72 = 18 = 2 = 1 kilderkin 288 = 144 = 36 = 4 = 2 = 1 barrel $432 = 216 = 54 = 6 = 3 = 1\frac{1}{2} = 1 \text{ hogshead}$ $576 = 288 = 72 = 8 = 4 = 2 = 1\frac{1}{2} = 1 \text{ punch'n}$ $864 = 432 = 108 = 12 = 6 = 3 = 2 = 1\frac{1}{2} = 1 \text{ butt}$

N.B.—The pint, quart, and gallon, for wine, ale, and beer, and grain or corn, measure the same with regard to their magnitude; 8 of these gallons make one bushel; and 1 gallon contains 277.274 cubic inches, or 10 lbs. of distilled water, at 62 degrees Fahrenheit.

DRY MEASURE.

· CLOTH MEASURE.

inches

$$2\frac{1}{4} = 1$$
 nail
 $9 = 4 = 1$ quarter
 $36 = 16 = 4 = 1$ yard
 $27 = 12 = 3 = 1$ Flemish ell
 $45 = 20 = 5 = 1$ English ell
 $54 = 24 = 6 = 1$ French ell

SQUARE MEASURE.

inches

$$\begin{array}{rrrr} 144 = & 1 \ foot \\ 1206 = & 9 = & 1 \ yand \\ 39204 = & 272\frac{1}{4} = & 30\frac{1}{4} = & 1 \ pole \\ 1568160 = 10890 = & 1210 = & 40 = 1 \ rood, \\ 6272640 = & 43560 = & 4840 = & 160 = 4 = & 1 \ acre \end{array}$$

10 square chains make 1 acre; 640 acres make 1 square mile; 30 acres 1 yard of land; and 100 acres 1 hide of land.

SOLID MEASURE.

inches¹ 1728 = 1 foot 46656 = 27 = 1 yard

1 cubic foot = 2200 cylindrical inches = 3300 spherical inches = 6600 conical inches.

MISCELLANEOUS.

1 Acre, Scotch, 1.271 acres Eng-	
lish, or	6084 sq. yards.
1 Acre Irish, 1.638 acres English, or	7840 sq. yards.
1 Barrel, imperial measure	998 1.86 cub. in.
" soap	256 lbs.
1 Bushel, imperial measure	2218·19 cub. in.
" Winchester measure	2150.42 cub. in.
" barley	50 lbs.
" coal	88 lbs.
" flour or salt	56 lbs.
" oats	40 lbs.
" wheat	60 lbs.
1 Chaldron coals, Newcastle	53 cwt.
1 Chain	100 links.
1 Clove of wool	7 lbs.
1 Fodder of lead, Stockton	22 cwt.
at Newcastle	21 cwt.
" at London	19 1 cwt.
1 Gallon, imperial measure	277.27 cub. in.
" distilled water, 62°	
" proof spirit or oil	9.3 lbs.
"former wine measure	231 cubic in.
" former ale measure	282 cubic in.
" Irish measure	217.6 cubic in.
1 Geographical mile	1.15 Eng. miles.
degree	69.12 Eng. miles.
1 Gross	12 dozen.
1 Great gross	12 gross.
1 Hand	4 inches.
1 Hundred of deals	120 in number.
" nails	120 in number.
" salt	7 lasts.
1 Last of salt	18 barrels.

_	•
1 Lan of groupowing	of barrels.
THE PARTY PROPERTY OF THE	DETER
- far ir feathers	II rest
FD3.	
1 Link	Inches.
1 Look of bourds, make	fill some fi
- irasks	ha number.
iat it serv	
_ ime	instels.
- panks we-mak	SM strare ft.
± 50.0€	9: meshels.
- index everyi	in extor feet.
- imber, mieved	to rathe feet.
1 XE	Si chains.
1 Pack of work	240 Ba
1 Para	5 mobes.
1 Pole, Woodland	15 feet.
4 Partation	21 fees.
" Cheskire	
1 Sack of coals	224 lbs.
# wool	364 Bs.
1 Seam of glass	124 lbs.
1 Stan	9 inches.
1 Stone of meat or fish	S lbs.
" horseman's weight	14 lbs.
" glass	5 lbe.
# wool	14 lbs.
1 Thousand of nails	1200.
1 Truss of new hay	60 lbs.
" old hay	56 lbs.
" straw	36 lbs.
1 Tun of vegetable oil	286 gallons.
" animal oil	252 gallons.
1 Tod of wool	28 lbs.
1 Wey of wool	182 lbs.
•	

Relative Value of the Imperial and Old English Measures.

Wine Gallon.						(VI)			
Imp. gallon Old gallon	1 1·200	2 2·401	3 3.601	4 4·801	6.002	6 7·202	7 9-402	8 9-602	9 10·803
Old gallon Imp. gallon	1 0.833	2 1.666	3 2·499	3·332	5 4·166	4.999	7 5·832	8 6-665	9 7·498
Ale Gallon.					191		1		
Imp. gallon Old gallon	1 0-983	2 1.966	3 2.950	4 3.933	5 4.916	6 5-899	7 6.883	8 7·866	9 8-849
Old gallon Imp. gallon	1 1·017	2 2·034	3 3·051	4 4.068	. 5 5.085	6.102	7 7·119	8 8·136	9 9·153
Corn Bushel.					111		13	6.7	
Imp. bushel Old bushel	1 1.031	2 2.063	3 3·095	4.126	5 5·158	6.189	7 7·221	8 8-252	9. 9-284
Old bushel Imp. bushel	0.969	2 1·339	3 2.908	3.878	4.847	6 5-817	7 6-786	8 7·755	9 8-725

N. B.—The foregoing relative values are computed in whole numbers and decimal parts; they exhibit the value of units only, but the value for tens, hundreds, thousands, &c. may be found by changing as many of the decimals into integers as there are ciphers in the numbers sought.

EXAMPLE.—Required the number of imperial gallons in 4743 old wine gallons:—

$$4000 = 3332$$

$$700 = 583 \cdot 2$$

$$40 = 33 \cdot 32$$

$$3 = 2 \cdot 490$$

3951.019 imperial gallons.

-277	WEIGHT.	V	OIRDUPOIS VEIGHT. parts of a cwt.	1	PARTS of a lb.		-	H MON	100
Ozs. 11 10 9 8 7 6 5	Decimals916666 -830303 -75 -666666 -5830303 -5 -416666 -833303 -25	Qrs. 3 2 1 1 Lbs. 27 26	Decimals. '75 '5 '25 Decimals. '241071 '232142	0zs. 15 14 13 12 11 10 9 8 7	Decimals9375 -875 -8125 -75 -6875 -625 -5625 -54375	SA. 19 18 17 16 15 14 19 12	Dec. 95 9 85 8 75 7 65 6 55	8A. 9 8 7 6 5 4 3 2	Dec. 45 4 35 3 25 2 15 1 05
2 1 Duts.	*166666 *088333	25 24 23 22 21 20	·22:3214 ·2112:6 ·205357 ·196428 ·187:500 ·178572	5 4 3 2 1	*875 *3125 *25 *1875 *125 *0625	10 Per	-5 ire. 1	Decin -045 -041	sals. 833 666
19 18 17 16 15 14 13 12	079166 075 070533 066666 0625 058333 054160 05	19 18 17 16 15 14 13 12 11	169643 160714 151785 142856 133328 125 116071 107143	Drs. 15 14 13 12 11	Decimals058593 -054686 -050780 -046874 -042088		9 8 7 6 5 4 3 2	-037 -033 -029 -025 -020 -016 -012 -008 -004	333 166 833 663 5 333
10 9 8 7 6 5 4	·041666 ·0375 ·033333 ·029166 ·025 ·020833 ·016666 ·0125	10 9 8 7 6 5 4	-089286 -080357 -071428 -0625 -053571 -044643 -035714 -026786	10 9 8 7 6 5 4	-039062 -035156 -03125 -027348 -023437 -019531 -015625 -011718		3 2 1	Decim -0031 -0020 -0010	25 823 410
1	·008333 ·004166	1	-017857 -008928	1	-007812 -003906		_	arts of	
Grs. 15 14	Decimals. -002604 -002430	0ms. 15 14	Decimals. -008370 -007812	MI	LONG EASURE.	1	0 9	Decim 916 833 75	666 333
13 12 11 10 9 8 7	002257 002083 001910 001736 001562 001389 001215 001042	13 12 11 10 9 8 7 6	*007254 *006696 *006138 *005580 *005022 *004464 *003906 *003348	Ins. 11 10 9 8 7 6	Decimals, 910606 833383 75 606666 583333 5		8 7 6 5 4 3 2	·6666 ·5833 ·5 ·4166 ·3333 ·25 ·1666 ·0833	333 666 333 666
5 4 3 2 1	-003868 -000094 -000521 -000347 -000173	5 4 3 2 1	*002790 *002232 *001674 *001116 *000558	5 4 3 2 1	416666 4333338 425 166666 4083333		ing. 3 2	Decim •062 •041 •0208	5 666



Relative Value of British and French Weights and Measures.

RENCH DECIMAL, OR MODERN SYSTEM.

WEI	GUTS.	MEASURE	8—OF LENGTH.
French.	British.	French.	British.
GRAMME	15.434 grains.	METRE	39.371 inches.
Decigramme	1.5434 "	Decimetre	3.9371 "
Centigramme		Centimetre.	0.3937 inch.
Milligramme		Millimetre .	
Decagramme	154.34 "	Decametre .	32.809 feet.
Hectogramme.	3.2154 oz. troy:	Hectometre	328.09 "
or	3.527 oz. avoir.	Kilometre	1093.6 yards.
. Kilogramme	2.6795 lb. troy.		6.2138 miles.
	2·2048 lb. avoir.		•
Myriagramme	26·795 lb. troy.	OF SU	PERFICIES.
or	22.048 lb. avoir.	ARE†	119.60 sq. yards.
Quintal	1 cwt. 3 qrs. 241	Deciare	
1	lb.	Centiare	10.764 sq. feet.
Millier or Bar	9 tones & cwt. 3		155.00 sq. inch.
	qr lb.	Decare	1196.0 sq. yards.
1		Hestare	2.4712 acres.
MEASURES-	OF CAPACITY.		
LITER*	61.028 cubic in.	OF 8	OLIDITY.
	1·761 imp. p int.	STERET	35·317 cub. feet.
	6·1028 cubic in.	Decistere	
Centilitre		Centistere	610.28 cubic in.
Millilitre		Millistere	
Decalitre	610.28 "	Decastere	13.080 cubic yds.
	2.2 imp. gallons.	Hectostere .	130.80 "
	3.5317 cubic feet	<u></u>	
or or	2.75 imp. bush.	*The Litre	a cubic decimetre.
	85.317 cubic feet		
Myrialitre	353.17 "	‡ The Stere -	square decimetre. a cubic metre.
LI	[

Note.—The decimetre, centimetre, and millimetre are respectively formed by dividing the metre by 10, 100, and 1000; and the decametre, hectometre, kilometre, and myriametre, by multiplying the metre by 10, 100, 1000, and 10,000: the other measures and weights of the decimal system are formed in a like manner from their respective units.



THE OLD SYSTEM, OR SYSTEME USUEL.

WEIG	HTS.	MEASURES OF	тн.
French.	British.	French.	British.
Grain Gros (72 grains) Once (8 gros) Livre (16 onces)	60.285 grains. 1.1024 oz. avoir.	Ligne Pouce (12 lignes) Pied (12 pouces) Aune (33 pieds) Toise (6 pieds)	1.093 "
MEASURES OF CAPACITY. Litron		The Livre is = 500	grammes. 12-5 litres.

British and Foreign Weights and Measures.

BELATIVE VALUE OF BRITISH AND FOREIGN COMMERCIAL WEIGHTS.

Country or Place.	W	No. equal to 1 cwt. British.
Aleppo Alexandria Amsterdam Algiers Barcelona Berlin Berlin Cairo Cologne Constantinople Copenhagen Cyprus Damascus Dantsic Florence Frankfort Geneva	Oke	40·10 119·84 50·79 94·12 126·97 108·42 101·95 117·89 84·00 108·64 39·53 101·55 21·35 28·44 108·42 149·61 101·59 108·73 92·25
Genoa Hamburgh	Pound, heavy Pound	145·69 104·86

Relative Value of British and Foreign Commercial Weights—continued.

Country or Place.	Weight.	No. equal to : cwt, British.
Hanover	Pound	104.37
Konigsberg		108.42
Japan		86.15
Leghorn		149-61
Leipsic		108.79
Lubec		104.82
Madeira		110.79
Malta		64.17
Milan		50.79
Naples		56.99
Nuremberg		99-61
Persia		88-31
Poland		125.72
Portugal		110-68
Prussia	Pound	108-60
Riga	Pound	121.51
Rome		149.79
Rostock		99.84
Rotterdam		102.82
Russia		124.08
Sardinia	Pound	128.00
Sicily		160.00
Smyrna		89.53
Spain		110-40
Sweden		149.32
Trieste		90.75
Tripoli		100.00
Tunis		100.85
Venice		50.79
Vienna		1 2 2 2 2
Zurich		

Relative Value of British and Foreign Corn or Dry Measures.

Country or Place.	Name of Measure.	gerequal to 1 quarter, or 8 bush. English.
Alexandria	rebebe	1.85
Algiers	zarrie	14.54
Amsterdam	mudde	2.61
Ancona	rubbio	1.01
Antwerp	mudde	2.91
Barcelona	quartera	4.25
Berlin	scheffel	5.58
Bruges	hoed	1.74
Cologne	malter	1.79
Constantinople	killow	8.77
Copenhagen	toende	2.09
Cyprus	medimno	3.87
Dan tzie	scheffel	5.32
Dunkirk	rasiere	2.18
Embden	tonne	1.51
Florence	staja	11.95
France	boisseau	23.32
Frankfort	malter	2.69
Genoa	mina	2.40
Groningen	mudde	3.19
Hague	sack	2.71
Hamburgh	scheffel	2.76
Hanover	himten	9.85
Leghorn	sacco	4.00
Leipsic	scheffel	2.09
Lisbon	alquiere	21.50
Lubec	scheffel	8.70
Majorca	quartera	4.13
Malaga	fanega	5.16
Malta	salma	1.00
Munich	scheffel	0.80
	zomolo	5.69
Naples Netherlands	'	2.91
Persia	mudde	4.42
Poland	artaba	5.69
	korzecstrick	2.72
Prague		5.29
Prussia	scheffel	4.26
Riga	loop	0.98
Rome	rubbio	0.00

Relative Value of British and Foreign Corn or Dry Measures—continued.

Country or Place.	Name of Measure.	No. equal to I quarter or 8 bush. English.
Rostock	scheffel	7.48
Rotterdam	sack	2.80
Russia		1.88
Sardinia		5.94
Sicily		1.05
Smyrna		5-67
Spain		5.1
Sweden		1.98
Texel		4.64
		4.79
Tunis		
		0.55
Venice	, , , , , , , , , , , , , , , , , , , ,	9-6 8
Vienna		4.73
Utrecht		8.22
Wirtemberg		1.61
Zante	misura	13.84
Zealand	sack	8.89
Zurich	mutt	8.51

Relative Value of British and Foreign Wine or Liquid Measures.

Country or Place.	Name of Measure.	Content in British Impi Gallons.
Amsterdam	wine stekan	4.27
Antwerp	stoop	0.60
Barcelona	carga	27.24
Berlin		8.24
Bordeaux		1.58
Burgundy		22-63
Canaries		8-58
Champagne		19.82
Cognac		1.60
Cologne		1.81
Constantinople	slmud	1.15

Relative Value of British and Foreign Wine or Liquid Measures—continued.

Country or Place.	Name of Measure.	Content in British Imp Gallons.
Copenhagen	viertel	1.70
Cyprus	cass	1.04
Dantzie	ohm	32.96
Dresden	eimer	14.88
Florence	wine barile	10.03
France	setier	1.63
Frankfort	viertel	1.60
Geneva	setier	9.95
Genoa	wine barile	16.83
Hamburgh	ahm	31.86
Hanover	ahm	34.23
Heidelberg	maas	0.51
Leghorn	wine barile	10.03
Leipsic	eimer	16.74
Lisbon	almude	3-64
Lucca	oil coppo	21.97
Malaga	arroba	2.49
Malta	oil caffiso	4.58
Marseilles	millerolle	14-15
Naples	wine barile	9.17
Netherlands	vat	22.01
Oporto	almude	5-61
Poland	garniec	0.35
Prussia	eimer	15.12
Riga	anker	8-61
Rome	wine barile	12.84
Rostock	anker	7.96
Rotterdam	ahm	33.32
Rouen	barrique	43.06
Russia	vedro	2.09
Spain	wine arroba	8.53
Strasburg	ohm	10.14
Sweden	kann	0.57
Trieste	eimer	12.45
Venice	secchio	2.37
	eimer	12.42
Vienna	barile	14.68
Zante Zurich	maas	0.86

BRITISH AND FOREIGN MEASURES.

Relative Value of British and Foreign Measures of Length.

Country or Place.	Name of Measure.	No. of each equal to 100 English Feet
Amsterdam	Foot	107.71
Antwerp	Foot	106.76
Augsburg	Foot	103.00
Berlin	Foot	98.44
Berne	Foot	103.98
Bremen	Foot	105-44
Brunswick	Foot	106.85
Carrara	Palmo	125-13
China	Foot	94.41
	Foot	110-80
Cologne	Foot	97.16
Copenhagen	Foot	85.53
Cracow		106-19
Dantzic	Foot	107.71
Dresden	Foot	91.46
France	Foot	2.7.7.7.
Frankfort	Foot	106.38
Geneva	Foot	62.46
Genoa	Palmo	128-45
Gottingen	Foot	104.80
Hamburg	Foot	106.38
Hanover	Foot	104-80
Leipsic	Foot	108-01
Leyden	Foot	97.24
Liege	Foot	106.00
Lisbon	Foot	92.78
Malta	Foot	107.52
Mecklenburg	Foot	104.80
Milan	Foot	76.82
Moscow	Foot	91.11
Munich	Foot	105.54
Naples	Palmo	115-60
Neufchatel	Foot	101-60
Nuremberg	Foot	100.83
Padua	Foot	86.14
Pisa	Palmo	102-21
Prague	Foot	101.52
Prussia	Foot	97.16
Riga	Foot	111-21



Relative Value of British and Foreign Measures of Length—continued.

Country or Place.	Name of Measure.	No. of each equal to 100 English Feet.
Rome	Foot	102.38
Rostock		105.44
Russia		87.27
Sardinia		122-69
Sicily		125.91
Spain		107-91
Sweden		102.78
Venice		87.71
Vienna		96.88
Ulm		105.85
Wirtemberg		196.57
Zurich	Foot	101-60

Relative Value of British and Foreign Square and Cubic Measures.

Country or Place.	Square Foot in English Sq. Inches.	Cubic Foot in Eng- lish Cubic Inches.
Amsterdam	124-255	1385-070
Antwitte	126-337	1420-027
Augsberg		1581-161
Berlin	148-693	1813-162
Berne	133-287	1538.798
Bremen	129.504	1473.755
Cologne	117·298	· 1270·229
Dantzic	127-690	1442-897
Dresden	124.099	1382463
France	163.558	2091.743
Geneya	869-024	7088-951
Hamburg	127.441	1438-684
Hanover	181-194	1502-696
Leipsic	123.432	1871-829
Liege	128-142	1450-577
Lisbon	167.547	2168.728
Milan	248.984	8811-030

Relative Value of British and Foreign Square and Cubic Measures—continued.

Country or Place.	Square Foot in' English Sq. Inches.	Cubic Foot in Eng lish Cubic Inches.
Munich	129-890	1471-811
Nuremberg		1710-770
Prussia		1886-890
Rhineland	152-670	1886-890
Riga	116-424	1256.215
Rome		1609.885
Spain		1378-002
Sweden		1595-041
Venice	187-142	2560.102
Vienna	155.002	1929-774
Zurich		1647-211

Relative Value of British and Foreign Land Measures.

Country or Place.	Name of Measure.	English Square Yards.	No. of each equal to 10 English Acres
Amsterdam	Morgen	9722	4.978
Berlin	Great Morgen	6786	F182
Dantzio	Morgen	6650	7-278
France	Hectare	11960	4-046
Geneva	Arpent	6179	7.838
Hamburg	Morgen	11545	4.192
Hanover	Morgen	8100	15.618
Naples	Moggia	8998	12.106
Portugal	Geira	6970	6.944
Prussia	Morgen	8053	15.858
Rhineland		10185	4.752
Rome	Pezza	8158	15.196
Russia	Dessetina	13066	8.704
Saxony	Acre	6590	7.844
Spain	Fanegada	5500	8.800
Sweden	Tunneland	500 0	8.208
Switzerland	Faux	7655	6.161
Vienna	Jock	6889	7.025
Zurich	Common Acre	8875	12.488

Relative Value of British and Foreign Road Measures.

Country or Place.	Name of Messure.	Reglish Tarja	No. of each equal to 100 English Miles.
Arabia	Mile	2148	81-986
Brabeat	League	6077	28-966
China		622	278-481
Denmark	Mile	8244	21-348
Ylanders	League	6864	25-641
France	League of 2000 Toises	4263	41-285
Germany		10126	17-881
Hamburg	Mile	8244	21-348
Hanover		11559	15-226
Holland		8103	21-725
Hungary		9118	19-812
Netherlands	Mile, metrical	1093	161-024
Persis		6086	28-918
Poland		8103	21.725
Portugal	League	6760	26-035
Prussia	Mile	8287	21-367
Rome	Mile	1628	108-106
Russia		1067	150-814
Spain		7416	23.732
Sweden	Mile	11700	15-042
Switzerland	Mile	9153	19-228
Turkey		1826	96-885

A TABLE

Of the Reciprocals of Numbers; or the Decimal Fractions corresponding to Vulgar Fractions of which the Numerator is unity or 1.

[In the following tables, the decimal fractions are reciprocals of the denominators of those opposite to them; and their product is = unity.

To find the decimal corresponding to a fraction having a higher numerator than 1, multiply the decimal opposite to the given denominator, by the given numerator. Thus, the decimal corresponding to $\frac{1}{4}$ being $\cdot 015625$, the decimal to $\frac{1}{4}$ will be $\cdot 015625 \times 15 = \cdot 234375.$

Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.
1/2	-5	1/20	-05	1/38	-026815789
1/3	-833833333	1/21	-047619048	1/39	-025641026
1/4	.25	1/22	.045454545	1/40	.025
1/5	-2	1/23	.043478261	1/41	-024390244
1/6	-166666667	1/24	-041666667	1/42	-023809524
1/7	·142857143	1/25	-04	1/43	-023255814
1/8	-125	1/26	.038461538	1/44	-022727273
1/9	-1111111111	1/27	-037037037	1/45	.02222222
1/10	·1	1/28	-035714286	1/46	.02173913
1/11	-090909091	1/29	-034482759	1/77	-0212766
1/12	-083333333	1/30	-033333333	1/48	-020833333
1/13	-076923077	1/31	.032258065	1/49	-020408163
1/14	-071428571	1/32	-03125	1/50	-02
1/15	-066666667	1/33	.030303030	1/51	-019607843
1/16	-0625	1/34	.029411765	1/52	-019230769
1/17	.058823529	1/35	.028571429	1/58	-018867925
1/18	-05555556	1/36	-027777778	1/54	-018518519
1/19	-052631579	1/37	-027027027	1/55	-018181818

Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.
1/56	-017857148	1/98	-010204082	1/140	.007142857
1/57	-01754886	1/99	·01010101	1/141	.007092199
1/58	-017241879	1/100	·01	1/142	-007042254
1/59	-016949158	1/101	·00990099	1/148	.006998007
1/60	-016666667	1/102	.009803922	1/144	.006944444
1/61	·016898448	1/108	-009708788	1/145	-006896552
1/62	-016129082	1/104	· 0 09615385	1/146	-006849815
1/68	-015878016	1/105	-00952881	1/147	.006802721
1/64	·015625	1/106	.009488962	1/148	-006756757
1/65	·01538 46 15	1/107	·00984579 4	1/149	.006711409
1/66	-015151515	1/108	-009259259	1/150	-006666667
1/67	-014925878	1/109	-009174812	1/151	-006622517
1/68	-014705882	1/110	-009090909	1/152	.006578947
1/69	-014492754	1/111	·009009009	1/158	-006585948
1/70	-014285714	1/112	·008928571	1/154	006498506
1/71	·014084517	1/118	.008849558	1/155	-006451618
1/72	-018888889	1/114	-00877198	1/156	-006410256
1/78	-01869868	1/115	·008695652	1/157	·006369427
1/74	-018518514	1/116	-00802069	1/158	·006329114
1/75	·018888888	1/117	-008547009	1/159	·006289808
1/76	-018157895	1/118	-008474576	1/160	·00625
1/77	-012987018	1/119	·008403861	1/161	-00621118
1/78	012820518	1/120	.008888888	1/162	·0061728 1
1/79	-012658228	1/121	-008264463	1/168	·006134969
1/80	-0125	1/122	-008196721	1/164	·006097561
1/81	-012845679	1/128	-008180081	1/165	-00 6060606
1/82	-012195122	1/124	·008064516	1/166	-00 6024096
1/88	012048198	1/125	-008	1/167	·005988024
1/84	-011904762	1/126	-007936508	1/168	005952881
1/85	·011764706	1/127	·00787 4 016	1/169	· 00 591716
1/86	-011627907	1/128	-0078125	1/170	·00 5 882853
1/87	·011494253	1/129	-007751988	1/171	· 0 05847953
1/88	-011868686	1/180	-007692808	1/172	-005818958
1/89	.011285955	1/181	-007688588	1/178	-005780347
1/90	-011111111	1/182	-007575758	1/174	·005747126
1/91	·010989011	1/188	·007518797	1/175	.005714286
1/92	010869565	1/184	·007462687	1/176	·005681818
1/98	·010752688	1/185	.007407407	1/177	005649718
1/94	·010688298	1/186	-007852941	1/178	-005617978
1/95	·010526816	1/137	.00729927	1/179	-005586592
1/96	010416667	1/188	·007246877	1/180	-005555556
1/97	010309278	1/189	-007194245	1/181	-005524862

Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.
1/182	.005494505	1/224	· 0 04464286	1/266	.008759898
1/188	·005464481	1/225	·004444444	1/267	-003745818
1/184	-005484783	1/226	004424779	1/268	.003731343
1/185	·005405405 ·	1/227	·004405286	1/269	-008717472
1/186	·005876844	1/228	-004385965	1/270	·003703704
1/187	.005847594	1/229	.004366812	1/271	.003690037
1/188	.005819149	1/230	-004347826	1/272	.003676471
1/189	·005291005	1/231	·004329004	1/278	-003663004
1/190	-005263158	1/232	-004310345	1/274	-003649685
1/191	·005235602	1/233	·004291845	1/275	·003636864
1/192	·005208333	1/234	·004273504	1/276	-003623188
1/198	-005181847	1/285	-004255819	1/277	·003610108
1/194	·005154639	1/286	.004237288	1/278	·003597122
1/195	·005128205	1/237	004219409	1/279	.003584229
1/196	·005102041	1/238	·004201681	1/280	.003571429
1/197	.005076142	1/289	·0041841	1/281	-003558719
1/198	·005050505	1/240	·004166667	1/282	.003546099
1/199	·005025126	1/241	-004149378	1/288	.003533569
1/200	·005 ·	1/242	.004132281	1/284	·003522127
1/201	-004975124	1/248	·004115226	1/285	1003508772
1/202	·004950 4 95	1/244	·004098361	1/286	.003496503
1/203	-004926108	1/245	·004081688	1/287	-003484821
1/204	·004901961	1/246	·004065041	1/288	.003472222
1/205	·0048780 1 9	1/247	·004048588	1/289	·003460208
1/206	·004854869	1/248	-004032258	1/290	.003448276
1/207	-004830918	1/249	·004016064	1/291	·008486426
1/208	004807692	1/250	.004	1/292	003424658
1/209	004784689	1/251	-003984064	1/298	·003412969
1/210	·004761905	1/252	-008968254	1/294	·003401 2 61
1/211	-004789886	1/258	.003952569	1/295	-003389831
1/212	004716981	1/254	.003937008	1/296	.003378378
1/218	-0046948 86	1/255	·003921569	1/297	.003367003
1/214	-004672897	1/256	-00390625	1/298	.008355705
1/215	004651168	1/257	.003891051	1/299	-008844482
1/216	-00462968	1/258	.003875969	1/800	-003883838
1/217	·004608295	1/259	-003861004	1/801	-003322259
1/218	·004587156	1/260	-003846154	1/302	-003811258
1/219	-00456621	1/261	-003831418	1/808	-00380188
1/220	·004545455	1/262	-008816794	1/304	.008289474
1/221	.004524887	1/268	.003802281	1/805	·003278689 ·008267974
1/222	-004504505	1/264	-003787879	1/806	-008257829
1/228	-004484805	1/265	-003773585	1/807	**************************************

f i	;	η .			
Pronting or Numb	Imaimai or Mariprocal.	resolion or Numb.	Decimal or Meciprocal.	Practica or Numb.	Decimal or Reciprocal.
1/2/18	-008246758	1/350	-002857148	1/892	.00255102
1/2/14	-003236246	1/851	-002849008	1/898	-002544529
1/310	4008225H(K)	1/852	-002840909	1/894	-002538071
1.811	·008215484	1/358	-002882861	1/895	-002581646
1/312	-008205128	1/854	-002824859	1/896	-002525258
1/818	-008194888	1/355	-002816901	1/897	-002518892
1/314	008184718	1/856	-002808989	1/898	-002512563
1/315	-003174603	1/857	·00280112	1/899	-002506266
1/816	-008164557	1/858	-002798296	1/400	-0025
1/317	400154674	1/359	-002785515	1/401	.002498766
1/318	403144664	1/860	.002777778	1/402	-002487562
1/819	40081847505	1/361	-002770088	1/408	·00248139
1/370	008125	1/862	.002762481	1/404	·002475248
1/321	008116265	1/863	-002754821	1/405	-002469186
1/322	00310559	1/864	-002747258	1/406	-002463054
1/323	-002095975	1/865	.002789726	1/407	.002457002
1/324	100304642	1/866	·00273224	1/408	-00245098
1/825	100:4070:028	1/867	-002724796	1/409	-002444988
1/324	10000007446	1/868	·002717891	1/410	.002489024
1/8%7	4003068104	1/869	.002710027	1/411	-00243309
1/828	-00804878	1/870	-002702708	1/412	·002427184
1/829	4003030614	1/871	-002095418	1/413	.002421808
1/880)	4008080808	1/872	-002688172	1/414	.002415459
1/881	-008021148	1/878	·002680965	1/415	·002409689
1/882	·003012048	1/874	.002678797	1/416	-002406846
1/338	100343038003	1/875	-00266667	1/417	-002898082
1/224	-002994012	1/876	.002650574	1/418	-002892844
1/886	1002985075	1/877	-00265252	1/419	-002886685
1/884;	4M7297619	1/878	·002645508	1/420	·002380952
1/337	1002967859	1/879	-002688521	1/421	002375297
1/884	487295858	1/880	-002681579	1/422	-002369668
1/889	402949858	1/381	-002624672	1/428	-002864066
1/840	·002941176	1/882	·002617801	1/424	-002858491
1/841	4002982561	1/888	·002610966	1/425	·002852941
1/842	-002928977	1/384	·002604167	1/426	-002847418
1/848	-002915452	1/385	-002597408	1/427	-00234192
1/344	-002906977	1/886	·002590674	1/428	·002886449
1/345	-002898551	1/887	-002588979	1/429	·002331002
1/846	-002890178	1/888	-00257782	1/480	-002825581
1/347	-002881844	1/889	-002570694	1/481	·002820186
1/348	-002878568	1/890	.002564108	1/482	·002314815
1/349	-00286588	1/891	·002557 54 5	1/488	-002809469

Fraction or Numb	Decimal or Reciprocal.	Practica or Numb.	Decimal or Reciprocal.	Practica or Numb.	Decimal or Reciprocal.
1/484	-002804147	1/476	-00210084	1/518	-001980502
1/485	-00229885T	1/477	-002096486	1/519	-001926782
1/486	-002293578	1/478	-00209205	1/520	-001928077
1/487	-00228888	1/479	-002087688	1/521	-001919886
1/488	-002288105	1/480	-002088888	1/522	-001915709
1/489	-002277904	1/481	-002079002	1/528	-001912046
1/440	-002272727	1/482	-002074689	1/524	-001908897
1/441	-002267574	1/488	-002070898	1/525	-001904762
1/442	-002262448	1/484	-002066116	1/526	-001901141
1/448	-002257886	1/485	-002061856	1/527	-001897588
1/444	-002252252	1/486	-002057618	1/528	-001898989
1/445	-002247191	1/487	-002058888	1/529	-001890859
1/446	-002242152	1/488	-00204918	1/580	-001886792
1/447	-002237186	1/489	-00204499	1/581	-001888289
1/448	-002232148	1/490	-002040816	1/582	-001879699
1/449	-002227171	1/491	-00208666	1/588	-001876178
1/450	-002222222	- 1/492	-00208252	1/584	-001872659
1/451	-002217295	1/498	-002028898	1/585	-001869159
1/452	-002212889	1/494	-002024291	1/586	-001865672
1/458	-002207506	1/495	-002020202	1/587	-001862197
1/454	-002202648	1/496	-002016129	1/588	-001858786
1/455	-002197802	1/497	-002012072	1/589	-001855288
1/456	-002192982	1/498	-002008082	1/540	-001851852
1/457	-002188184	1/499	-002004008	1/541	-001848429
1/458	-002188406	1/500	-002	1/542	-001845018
1/459	-002178649	1/501	-001996008	1/548	-001841621
1/460	-002178918	1/502	-001992082	1/544	-001888285
1/461	-002169197	1/508	-001988072	1/545	-001884862
1/462	-002164502	1/504	-001984127	1/546	-001881502
1/468	-002159827	1/505	-001980198	1/547	-001828154
1/464	-002155172	1/506	-001976285	1/548	-001824818
1/465	-002150588	1/507	-001972887	1/549	-001821494
1/466	-002145928	1/508	-001968504	1/550	·001818182
1/467	-002141828	1/509	-001964687	1/551	-001814882
1/468	-002186752	1/510	-001960784	1/552	-001811594
1/469	-002182196	1/511	-001956947	1/558	-001808818
1/470	-00212766	1/512	-001958125	1/554	-001805054
1/471	-002128142	1/518	-001949818	1/555	-001801802
1/472	-002118644	1/514	-001945525	1/556	-001798561
1/478	-002114165	1/515	-001941748	1/557	-001795882
1/474	-002109705	1/516	-001937984	1/558	-001792115
1/475	-002105268	1/517	-001984286	1/559	-00178890 9

I memory to I was	Section of Legistration	Committee or Filmo.	Secretary of Secretary of	Francos is Suma	Dec mal or Bet percoal
1.5%	94 1750714	63.2	FRC1 561 13	1.644	-001552795
	• • • • • • • • • • • • • • • • • • • •	71	9.15	1 645	001550388
		1 (i). 😼	000 00029	1 445	·\$\)1547988
	44 1777 PM	* 1.45	25.3	1 547	4001 54 559 5
7.4	48.177.00	1.006	50y 1 660 196	548	00154321
	500759912		4900347446	. 43	001540332
in.	9907.8754	10.5	0.1544737	1 50	001538462
	100 7000	100	991542935	1 551	001535098
	9017-0565	1 910	-001-513-544	1 552	001583742
7.	6017574	1:11	10016-661	1 553	001531394
1 379	-017543%	1512	*(0) (5.13 (6.7	1 654	001529052
1 571	491751313	1 513	001331321	1 555	001526718
1 572	991745252	1 314	001508564	Loso	00152439
1 573	991745291	1 615	4001626016	1 657	-00152207
1 571	O)174216	1 515	901628377	1 658	-001519751
1 575	00173913	1 517 1 518	0.01620746	1 659	001517451
1 576	001736111		001618123	1 650	001515152
1 577	001733102	1 619	-001615509	1 661	-001512859
1 578	001730104	1 620	-001612903	1 662	-001510574
1,579	001727116	1 621	-001610306	1 663 :	
1,580	001724138	1 622	001607717	1 664	-001506024
1,681	00172117	1 623	-001605186	1,000:	001503759
1/582	001718218	1.624	· ·001602 564 · ·0016		-001501502
1/:383	001715266	1,625	0016	1,668	00149925
1/4/81	001712329		001594896	1,000	001497006
1/1015	001709102	1/627		1/670	
1/1,845	-001706485	1/628	·001592857 ·001589825	1/671	·001492537 ·001490318
1/687		1/629	-001587802	1/672	001488095
1/1,1114	(8)170068	1/630	001584786	1/678	001485884
1/1/15/9	-001697798	1/631	001584786	1/674	-00148368
1/4,00	001694915 001692047	1/682 1/683	-001579779	1/675	00148308
1/4/01	001080189	1/634	·001577287	1/676	-00147929
1/693	(N)TUNUSHIT	1/635	-001574808	1/677	001477105
1/4/14	001083502	1,636	-001572327	1/678	001474926
1/601	001090672	1/637	-001569859	1/679	001472754
1,5600	001047862	1,037	-001567398	1/680	001470588
1 aum	001077802	1 030	-001564945	1/681	001470000
1 407	00107 2341	1 0 10	-0015625	1/682	001466276
1 3 1 1 1	101107 7311 1011000 140	1 311	-001560062	1,688	001464129
1 1 11111	100110000000000000000000000000000000000	1 012	-001557632	1/684	-001461988
1 1 11 11 11	LUREDONERUA	14148	00155521	1 685	-001459854
1 1.3461	INSTITUTION	1 43444	AMILIANO I	1 1,000	ANT ERRORS

Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.
1/686	-001457726	1/728	-001878626	1/770	-001298701
1/687	-001455604	1/729	-001871742	1/771	-001297017
1/688	·00145848 8	1/780	-001369863	1/772	-001295337
1/689	-001451879	1/781	001367989	1/778	-001293661
1/690	-001449275	1/782	-00186612	1/774	-00129199
1/691	-001447178	1/788	-001364256	1/775	-001290828
1/692	-001445087	1/784	-001362898	1/776	-00128866
1/698	-001448001	1/735	-001360544	1/777	-001287001
1/694	.001440922	1/786	-001358696	1/778	-001285847
1/695	-001488849	1/787	.001856852	1/779	-001288697
1/696	-001486782	1/738	-001355014	1/780	-001282051
1/697	-00148472	1/789	-00135818	1/781	.00128041
1/698	-001432665	1/740	-001351851	1/782	-001278772
1/699	-001430615	1/741	-001849528	1/783	-001277189
1/700	-001428571	1/742	-001347709	1/784	-00127551
1/701	-001426584	1/748	-001345895	1/785	-001278885
1/702	-001424501	1/744	-001344086	1/786	-001272265
1/708	-001422475	1/745	-001342282	1/787	-001270648
1/704	-001420455	1/746	-001840488	1/788	-001269086
1/705	-00141844	1/747	001340463	1/789	001267427
1/706	-001416431	1/748	-001336898	1/790	-001265828
1/707	-001414427	1/749	-001835118	1/791	-001264228
1/708	-001412429	1/750	-001338888	1/792	-001262626
1/709	-001412425	1/751	-001331558		
1/710		1/752		1/798	-001261084
1/711	-001408451	1/758	001329787	1/794	001259446
	· 0 0140647		-001828021	1/795	-001257862
1/712	-001404494	1/754	-00182626	1/796	-001256281
1/718	-001402525	1/755	•001824503	1/797	.001254705
1/714	•00140056	1/756	•001822751	1/798	-001258188
1/715	-001898601	1/757	.001821004	1/799	-001251864
1/716	-001896648	1/758	-001819261	1/800	-00125
1/717	-0018947	1/759	-001817528	1/801	-001248439
1/718	-001892758	1/760	-001815789	1/802	-001246888
1/719	-001890821	1/761	-00181406	1/808	-00124588
1/720	-001888889	1/762	-001812886	1/804	-001248781
1/721	-001386968	1/768	-001810616	1/805	-001242286
1/722	•001385042	1/764	-001308901	1/806	-001240695
1/728	001888126	1/765	-00180719	1/807	-001289157
1/724	-001381215	1/766	.001805488	1/808	-001287624
1/725	-00187981	1/767	-001303781	1/809	·001286094
1/726	-00187741	1/768	.001302083	1/810	-001 284 568
1/727	-001875516	1/769	-00130039	1/811	-001288046

Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.
1/812	-001231527	1/854	-00117096	1/896	-001116071
1/818	-001230012	1/855	-001169591	1/897	-001114827
1/814	-001228501	1/856	-001168224	1/898	·001118586
1/815	-001226994	1/857	-001166861	1/899	-001112847
1/816	-001225499	1/858	-001165501	1/900	•0011111111
1/817	-00122899	1/859	-001164144	1/901	-001109878
1/818	-001222494	1/860	-001162791	1/902	-001108647
1/819	-001221001	1/861	.00116144	1/908	.00110742
1/820	.001219512	1/862	·001160098	1/904	.001106195
1/821	-001218027	1/863	.001158749	1/905	-001104972
1/822	-001216545	1/864	·001157407	1/906	-001103758
1/828	·001215067	1/865	-001156069	1/907	-001102536
1/824	001218592	1/866	001154784	1/908	.001101822
1/825	-001212121	1/867	001158408	1/909	-00110011
1/826	.001210654	1/868	-001152074	1/910	·001098901
1/827	•00120919	1/869	-001150748	1/911	·001091695
1/828	-001207729	1/870	-001149425	1/912	·001096491
1/829	-001206278	1/871	-001148106	1/918	-00109529
1/880	.001204819	1/872	-001146789	1/914	.001094092
1/881	-001208869	1/878	001145475	1/915	-001092896
1/882	-001201928	1/874	001144165	1/916	.001091708
1/838	-00120048	1/875	-001142857	1/917	-001090518
1/884	-001199041	1/876	-001141558	1/918	-001089325
1/885	001197605	1/877	001140251	1/919	-001088189
1/886	001106172	1/878	-001138952	1/920	-091086957
1/887	001194748	1/879	-001137656	1/921	.001085776
1/888	-001198817	1/880	-001136864	1/922	-001084599
1/889 1/840	001191895	1/881	-001185074	1/923	-001083428
1/841	·001190476 ·001189 0 61	1/882	.001188787	1/924	.001082251
1/842	-001187648	1/884	.001132503	1/925	001081081
1/843	-00118624		-001181222 -001129944	1/926	.001079914
1/844	-001184884	1/885 1/886	001128668	1/927	-001078749
1/845	-001188482			1/928	001077586
1/846	-001182088	1/887 1/888	•001127896 •001126126	1/929	.001076426
1/847	-001180638	1/889	·001126126	1/980	-001075269
1/848	-001179245	1/890	001124859	1/981	-001074114
1/849	-001177856	1/891	-001128896	1/982 1/988	-001072961
1/850	001176471	1/892	-001122884	1/984	-001071811
1/851	-001175088	1/898	·001121076	1/985	-001070664
1/852	-001178709	1/894	-001118568	1/936	·001069519 ·001068876
1/858	001172888	1/895	-001117818		
1/000		1/020		1/987	-001067286

Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.	Fraction or Numb.	Decimal or Reciprocal.
1/938	-001066098	1/959	-001042758	1/980	-001020408
1/989	-001064968	1/960	·001041667	1/981	·001019168
1/940	-00106888	1/961	·001040588	1/982	-00101833
1/941	001062699	1/962	-001089501	1/988	-001017294
1/942	-001061571	1/968	-001088422	1/984	-00101626
1/948	·001060445	1/964	·001087844	1/985	-001015228
1/944	-001059822	1/965	-001086269	1/986	-001014199
1/945	-001058201	1/966	-001085197	1/987	-001018171
1/946	-001057082	1/967	-091084126	1/988	-001012146
1/947	-001055966	1/968	-001088058	1/989	-001011122
1/948	-001054852	1/969	·001081992	1/990	-0010101 01
1/949	-001053741	1/970	-001030928	1/991	-001009082
1/950	·001052632	1/971	-001029866	1/992	-001008065
1/951	-001051525	1/972	-001028807	1/998	-001007049
1/952	-00105042	1/978	-001027749	1/994	-001006086
1/958	-001049818	1/974	-001026694	1/995	-001005025
1/954	-001048218	1/975	-001025641	1/996	-001004016
1/955	-00104712	1/976	·00102459	1/997	-001003009
1/956	-001046025	1/977	-001023541	1/998	-001002004
1/957	001044982	1/978	·001022495	1/999	-001001001
1/958	-001043841	1/979	-00102145	1/1000	-001

TABLE

Of the Diameters, Circumferences, and Areas of Circles, in Inches.

11	Obsessin Service in Inches.	Area in Square Inches		Obsessed in Backer.	Arm is		Chrom- favore in Inches.	Area in Square Inches
10	1963	-00306	4	12-566	12.566	9	28-274	.63-617
11	•3927	-01227	1	12-959	13.364	1	28-667	65.396
16	-5890	-02761	ł	13.351	14.186	ł	29-059	67-200
1	-7854	-04909		13.744	15.038	1	29-452	69-029
15	-9817	-07670	1	14.137	15.904	<u>}</u> '	29.845	70.882
	1.1781	11044		14.529	16.800	1 •	80.237	72-759
18	1.3744	15033	2	14·922 15·315	17·720 18·665	2	30.630 31.023	74-662
	1			19-319	10.000		91.029	76-588
1	1.5708	•19635	5	15,708	19-635	10	81.416	78-540
18	1.7671	•24850	ĭ	16.100	20.629	i	31.808	80.515
1 1	1.9635	-30680	i	16-493	21.647	į.	32-201	82.516
114	2.1598	•37122	i	16.886	22.690	i i	32.594	84.540
1	2.3562	•44172	į	17:278	23.758	į	32-986	86-590
18	2.5525	•51849		17.671	24.850	1	33.379	88-664
1.7	2.7489	-60132	ŧ	18-064	25.967	1	83.772	90.762
18	2.9452	-6 908 0	ŧ	18-457	27.108	1	34.164	92-885
1	8.141	•785	6	18-849	28-274	11	34-557	95-033
1	3.534	-994	1	19.242	29.464	1	34.950	97.205
1	3.927	1.227	ł	19.635	30.679	ł	35.843	99.402
1 2	4.319	1.484	1	20.027	31.919	1	85.735	101-623
Į į	4.712	1.767	į	20.420	83-183	1	36.128	103-869
1	5.105	2·073 2·405		20.813	84.471	1	36.521	106.139
1	5·497 5·890	2.405		21·205 21·598	35.784	ŧ	36.913	108-434
*		3.141	7	21.991	37.122	3	37.306	110.753
2	6·283 6·675	3.141	1	21.991	38·484 39·871	12	37·699 38·091	113.097
1	7.068	3.976	į	22.776	41.282	1	38.484	115·466 117·859
	7.461	4.430	1	23.169	42.718	1	38.877	120.276
	7.854	4-908	į	23.562	44.178	į	39.270	122.718
	8.246	5.411	i i	23.954	45.663	l i	39.662	125.184
l ž	8.639	5.939	1	24.347	47.173	Ž	40.055	127-676
1	9.032	6-491	1	24.740	48.707	1	40.448	130-192
8	9.424	7.068	8	25.132	50.265	13	40.840	132-732
1	9.817	7.669	ł	25.525	51.848	1	41.233	135-297
1	10.210	8.295	8	25.918	53.456	1 1	41.626	137.886
	10.602	8-946	1	26.310	55-088	1	42.018	140.500
1	10-995	9.621	1 2	26.703	56-745	1	42.411	143-139
	11.388	10.320	1	27.096	58-426	1	42.804	145.802
🛊	11·781 12·173	11·044 11·793	1	27·489 27·881	60·132 61·862	2	43.197	148·489 151·201
	12.112	11.1A9	1 8	27.991	01.902	1 8	43.589	191.201



CIRCUMFERENCES AND AREAS OF CIRCLES. 41

Diam.	Circum.	Area.	Diam.	Olevana.	Apre.	Diam.	Chroma.	Area.
14	43-98	153-93	20	62.83	814-16	26	81.68	530-93
1	44.37	156-69	1	63.22	818-09	1	82-07	536.04
1	44.76	159.48	ł	63-61	322-06	ł	82-46	541-18
4	45-16	162-29	8	64.01	326-05	8	82-85	546.85
1	· 45·55	165-13	1	64.40	330-06	4	83-25	551.54
	45.94	167.98	-	64.79	334.10		83.64	556-76
2	46.33	170-87	2	65.18	338-16		84-03	562-00
3	46.73	173.78	3	65.58	342-25	*	84.43	567-26
15	47-12	176-71	21	65.97	346-36	27	84.82	572-55
1	47.51	179-67	1 1	66.36	350.49	1	85.21	577-87
ł	47.90	182-65	ł	66.75	354-65	ł	85-60	583-20
8	48-30	185-66	4	67·15	358-84	1 B	86-60	588-57
1	48.69	188-69	1	8 7·54	863-0 5	1	86.39	593-95
ŧ	49.08	191-74		67-93	867-28		86-78	599-37
1	49.48	194-82	4	68·3 2	371.54	2	87-17	604-80
	49.87	197-93	3	68.72	375-82	1	87.57	610 -2 6
16	50.26	201-06	22	69-11	380-13	28	87-96	615-75
i i	50-65	204-21	1	69-50	384-46	1	88-35	621-26
ŀ	51-05	207-89	Ĭ	69-90	388-82	Ĭ	88-75	626-79
	51-44	210-59	ă i	70-29	393-20	4	89-14	632-85
1 1	51.83	213.82	ij	70.68	397-60	1	89-53	637-94
ŧ	52-22	217-97	i i	71.07	402-03		89-92	643-54
2 3	52-62	220-35	1	71-47	406-49	2	90-32	649-18
*	53-01	223-65	1	71.86	410-97	1	90-71	654-83
17	53.40	226-98	23	72-25	415-47	29	91-10	660-52
ł	53-79	230.33	1	72.64	420-00	1	91-49	666-22
ł	54-19	233-70	l i	73-04	424.55	ł	91-89	671-95
1 1	54.58	237-10		73.43	429-13	1	92-28	677-71
į	54-97	240.52	į	73-82	433.73	1	92-67	683-49
1	55.37	243-97		74.21	438-36	i	93-06	689-29
1	55-76	247.45	2	74-61	443-11	#	93.46	695-12
ě	56-15	250-94	Ī	75-00	447-69	1	93-85	700-98
18	56-54	254-46	24	75:39	452-89	30	94.24	706-86
1	56-94	258-91	1	75-79	457-11	1 1	94-64	712-76
Į į	57-38	261.58	i	76-18	461-86	∥ į i	95:03	718-69
1	57-72	265-18	1 1	76.57	466-63	a	95-42	724-64
1	58-11	268-80	1	76.96	471-43	1	95.81	730-61
1	68.51	272-44		77:36 -	476-25	1	96-21	736-61
1	58-90	276-11	4	77.75	481-10	2	96.60	742-64
ŧ	59-29	279-81	1	78.14	485 -9 7	1	86.99	748-69
19	59-69	283-52	25	78-53	490-87	31	97-38	754-76
1	60-08	287-27	1	78-93	495.79	1	97-78	760-86
Įį	80-47	291-03	į	79-32	500.74	į	98-17	766-99
1	60.86	294-83	1	79.71	505.71	1	98-56	773-14
1	61-26	298-64	1	80.10	510.70	1	98-96	779-31
1	61.65	302-4 8	ł	80-50	515-72		99-35	785-51
ŧ	62-04	306-35	1	80-89	520.76	ŧ	99.74	791-73
l	62-43	310·24	1	81.28	525.83	1 2	100.13	797-97

42 CIRCUMPERENCES AND AREAS OF CIRCLES.

<u> </u>	Carren			Chroma.	_	240		-
32	100-5	894-24		119-3	1134-11		138-2	1520-53
* 1	100-9	810-54		119-7	1141-59	i 🔒 i	138-6	1529-18
- \$ {	101-3				· 1149 -0 8	1	139-6	1537-86
	101-7		ነ 🛊		: 1156-61	. 8	139-4	1546-55
1	102-1	829-57	j 🛊 -		1164-15	1	139-8	1555-28
•	102-4	835-97			1171-73		140-1	1564-03
	102-8	842-39	1 🛊	121.7	1179-32	¦¦ ફ †	140-5	1572-81
- 7	103-2	848-83	1 4	122-1	; 115 6-94	1	140-9	1581-61
33	103-6	855-30	39		1194-59	45	141-3	1590-43
•	104-0	661-79	1	122-9	1202-26	i 🛊 .	141.7	1599-28
- t	104-4	868-30	1	123-3	1209-95	η <u>.</u>	142-1	1608-15
	104-8	874-84		123-7	1217-67	Ě	142-5	1617-04
- 1	105-2	881-41	1	124-0	1225-42	: i	142-9	1625-97
	105-6	888-00		124-4	1233-18	1 🛊	143-3	1634-92
4	106-0	894-61	*	124-8	, 1 240-9 8	. 2	143-7	1643-89
i i	106-4	901-25	1	125-2	1248-79	: I	144.1	1652-88
34	106.8	907-92	40	125-6	1256-64	46	144-5	1661-90
*	107-2	914-61	1	126-0	1264-50	1	144-9	1670-95
ł	107-5	921-32		126.4	1272-39	1	145-2	1680-01
•	107-9	928-06			1280-31	ì	145-6	1689-10
· •	108-3	934-82		127-2	1288-25	1	146-0	1698-23
1	108-7	941-60		127-6	1296-21		146-4	1707:37
*	109-1	948-41		128-	1304-20		146-8	1716-54
	109-5	955-25		128-4	1312-21	i i	147-2	1725-73
35	109-9	962-11	41	128-8	1320-25	47	147-6	1734-94
1	110.3	968-99	1 1	129-1	1328-32	1	148-0	1744-18
1	110-7	975-90	l i l	129-5	1336-40	Ī	148-4	1753-45
	111.1	982-84	1	129-9	1344-51	l ă	148-8	1762-73
1	111.2	989-80	1	130-3	1352-65	ľi	149-2	1772-05
1	111-9	996-78		130.7	1360-81		149-6	1781-39
ŧ	112.3	1003-71	2	131-1	1369-00	l ě	150-0	1790-76
- 1	112.7	1010-81	3	131.5	1377-21	1	150-4	1800-14
86	113.0	1017-87	42	131.9	1385-44	48	150-7	1809-56
1	113.4	1024-95	1	132.3	1393-70	ì	151-1	1818-99
I I	113-8	1032-06	l i	132.7	1401-98	į	151.5	1828-46
- 1	114-2	1039-19	l i	133-1	1410-29	1	151-9	1837-93
1	114.6	1046-39	į	133-5	1418-62	Įį	152.3	1847-45
I	115.0	1053-52	•	133.9	1426-98	i i	152.7	1856-99
#	115.4	1060-73	1	134.3	1435-36	Į Ž	153-1	1866-55
- 1	116.8	1067-95	1	134.6	1443.77	3	153.5	1876-13
87	116.2	1075-21	43	135.0	1452-20	49	153-9	1885-74
1	116.6	1082.48	1	135.4	1460-65	i	154.3	1895-37
- i	117.0	1089-79	I I	135.8	1469-13	į	154.7	1905-03
Ť	117.4	1097-11		136.2	1477-63	ì	155-1	1914-70
- 1	117.8	1104.46	1	136-6	1486-17	ı ı	155-5	1924-42
	118-2	11111-84	-	137.0	1494.72		155-9	1934-15
- ≰ ∣	118.5	1119-24		137.4	1503:30	Į į	156.2	1943-91
- 4 I	118-9	1126-66	1 1 1	137.8	1511-90	l	156-6	1958-69



Diam. Inches	Circum. Inches.	Area In Square Inches.	Area in Square l'eet.	Diam. Inches.	Cfreum. Inches.	Area in Square Inches.	Area in Square Feet
50	157.0	1963.5	13.63	61	191.6	2922-4	20-29
1	157.8	1983:1	13.77	1	192.4	2946-4	20.46
1	158-6	2002.9	13.90	1 1	193.2	2970-5	20.62
2	159-4	2022-8	14.04	2	193-9	2994.7	20.79
51	160-2	2042-8	14-18	62	194.7	3019-0	20-96
1	161.0	2062-9	14.32	1	195.5	3043.4	21.13
3	161.7	2083-0 -	14.46	3	196.3	3067-9	21.20
2	162.5	2103-3	14.60	2	197-1	3092.5	21.47
52	163.3	2123.7	14.74	63	197.9	3117-2	21.64
4	164.1	2144.1	14.89	1	198.7	3142-0	21.81
+	164.9	2164.7	15.03	3	199.4	3166-9	21.98
2	165.7	2185.4	15.17	#	200.2	3191-9	22-16
53	166.5	2206-1	15.32	64	201-0	3216-9	22.34
1	167.2	2227.0	15.46	1	201-8	3242.1	22.51
	168-0	2248.0	15.61	1	202.6	3267.4	22.68
2	168-8	2269.0	15.75	1	203.4	3292.8	22.86
54	169.6	2290.2	15-90	65	204.2	3318-3	23.04
1	170.4	2311.4	16.05	1	204.9	3343-8	23.22
1	171.2	2332.8	16.20	1 4	205.7	3369-5	23.39
4	172.0	2354.2	16.34	4	206.5	3395-3	23.57
55	172.7	2375-8	16.49	66	207.3	3421-2	23.75
4	173.5	2397.4	16.64	1	208-1	3447-1	23.93
4	174.3	2419.2	16.80	1	208.9	3473-2	24.11
2	175.1	2441.0	16.95	4	209.7	3499-3	24.30
56	175-9	2463.0	17.10	67	210.4	3525-6 -	24-48
4	176-7	2485-0	17.25	1	211.2	3552-0	24.66
3	177-5	2507-1	17.41	1 2	212.0	3578-4	24.84
4	178-2	2529.4	17.56	2	212.8	3605-0	25.03
57	179-0	2551.7	17.72	68	213.6	3631-6	25.22
1	179.8	2574.1	17.87	1	214.4	3658-4	25.40
1	180.6	2596.7	18.03	1	215.1	3685.2	25.59
2	181.4	2619.3	18.19	#	215-9	3712-2	25.77
58	182.2	2642.0	18.34	69	216.7	3739-2	25.96
1	182.9	2664-9	18.50	1	217.5	3766-4	26.15
1	183.7	2687-8	18.68	1 1	218-3	3793-6	26.34
2	184.5	2710.8	18.82	2	219.1	3821.0	26.53
59	185.3	2733-9	18.98	70	219-9	3848-4	26.72
4	186.1	2757-1	19.14	1	220.6	3875-9	26.91
2	186-9	2780-5	19.30	1 1	221.4	3903-6	27.10
2.	187.7	2803.9	19.47	2	222-2	3931.3	27.30
60	188-4	2827-4	19.63	71	223.0	3959-2	27.49
1	189.2	2851-0	19-79	1	223.8	3987-1	27.68
1	190-0	2874-7	19-98	1 1	224.6	4015.1	27.87
2	190-8	2893-5	20.12	2	225.4	4043-2	28.07

44 CIRCUMFERENCES AND AREAS OF CIRCLES.

Diam. Inches.	Circum. Inches.	Area in Square Inches.	Ares in Square Feet.	Diam. Inches	Circum. Inches.	Area in Square Inches.	Area in Square Feet.
72	226·1 226·9 227·7 228·5	4071-5 4099-8 4128-2 4156-7	28·27 28·47 28·66 28·86	83	260·7 261·5 262·3 263·1	5410-6 5443-2 5476-0 5508-8	37·57 37·79 38·02 38·25
73	229·3 230·1 230·9 231·6	4185·3 4214·1 4242·9 4271·8	29.06 29.26 29.46 29.66	84	263·8 264·6 265·4 266·2	5541.7 5574.8 5607.9 5641.1	38·48 38·71 38·94 39·07
74	232·4 233·2 234·0 234·8	4300·8 4329·9 4359·1 4388·4	29.86 30.06 30.26 30.47	85 1 1	267-8 268-6 269-3	5674·5 5707·9 5741·4 5775·0	39·40 39·63 39·87 40·10
75	235·6 236·4 237·1 237·9	4417-8 4447-3 4476-9 4506-6	30.67 30.88 31.09 31.30	86 1	270·1 270·9 271·7 272·5	5808·8 5842·6 5876·5 5910·5	40·33 40·57 40·80 41·04
76	238·7 239·5 240·3 241·1	4536·4 4566·3 4596·3 4626·4	31·50 31·71 31·91 32·12	87	273·3 274·1 274·8 275·6	5944·6 5978·9 6013·2 6047·6	41.28 41.52 41.75 41.99
77	241.9 242.6 243.4 244.2	4656-6 4686-9 4717-3 4747-7	32·33 32·54 32·75 32·96	88	276·4 277·2 278·0 278·8	6082-1 6116-7 6151-4 6186-2	42·23 42·47 42·71 42·95
78	245.8 245.8 246.6 247.4	4778·3 4809·0 4839·8 4870·7	33·18 33·39 33·60 33·81	89 1	279·6 280·3 281·1 281·9	6221·1 6256·1 6291·2 6326·4	43·20 43·44 43·68 43·92
79	248·1 248·9 249·7 250·5	4901-6 4932-7 4963-9 4995-1	34·03 34·24 34·46 34·68	90 1 1	282·7 283·5 284·3 285·1	6361·7 6397·1 6432·6 6468·2	44·17 44·42 44·66 44·81
80 1	251·3 252·1 252·8 253·6	5026·5 5058·0 5089·5 5121·2	34·90 35·12 35·34 35·56	91	285·8 286·6 287·4 288·2	6503-8 6539-6 6575-5 6611-5	45·16 45·41 45·66 45·91
81 1 1 2	254·4 255·2 256·0 256·8	5153-0 5184-8 5216-8 5248-8	35·78 36·00 36·22 36·44	92	289.0 289.8 290.5 291.3	6647-6 6683-8 6720-0 6756-4	46·16 46·41 46·66 46·91
82	257.6 258.3 259:1 259.9	5281-0 5313-2 5345-6 5378-0	36.67 36.90 27.12 37.34	93	292·1 292·9 293·7 294·5	6792-9 6829-4 6866-1 6902-9	47·17 47·43 47·68 47·93

Dism. Inches.	Circum. Inches.	Ares in Square Inches.	Area in Square Feet.	Diam.	Circum. Inches.	Area in Square Inches.	Area in Square Feet
94	295.3	6939-7	48-19	121	380-1	11499-0	79-85
1	296.0	6976.7	48.45	122	383-2	11689-9	81.18
4	296.8	7013-8	48-70	123	386.4	11882-3	82.51
2	297.6	7050-9	48-96	124	389.5	12076-3	83.86
95	298.4	7088-2	49-22	125	392.7	12271.8	85.22
1	299.2	7125-5	49-48	126			
1	300-0	7163-0	49.64		395-8	12469-0	86-59
2	300.8	7200.5	50-00	127	398-9	12667-7	87-97
96	10033 70	0.0000000000000000000000000000000000000	1550.051	128	402.1	12867-9	89-36
7.7	301-5	7238-2	50.26	130	405.2	13069-8	90.76
4	302.3	7275-9	50-52	130	408-4	13273-2	92.17
3	303.1	7313-8	50.78	131	411-5	13478-2	93-59
4	303.9	7351.7	51.05	132	414.6	13684-8	95.03
97	304.7	7389-8	51.31	133	417-8	13892-9	96.47
1	305.5	7427-9	51.57	134	420.9	14102-6	97-93
4	306-3	7466-2	51.84	135	424.1	14313-9	99.40
2	307-0	7504-5	52-11	136	10000	0.000	
98	C. C. C.	1 0000000	7.7.		427.2	14526-7	100.88
	307.8	7542-9	52.38	137	430.3	14741-1	102.36
4	308.6	7581-5	52.65	138	433.5	14957-1	103.87
2	309.4	7620-1	52.91	139	436.6	15174-7	105.37
4	310.2	7658-8	53.18	140	439.8	15393.8	106-90
99	311.0	7697-7	53.45	141	442-9	15614-5	108-43
1	311.8	7736-6	53.72	142	446-1	15836-8	109-97
1	312.5	7775-6	53.99	143	449-2	16060-6	111.53
4	313.3	7814-7	54.26	144	452.3	16286-0	113-09
100	314.1	7854.0	54.54	145	455-5	16513-0	114.67
101	317.3	8011-7	55.63	146	458-6	16741-5	116-26
102	320.4	8091-2	56.74	147	461.8	16971-7	117.86
103	323.5	8332-3	57.86	148	464-9	17203-4	119.46
104	326.7	8494-9	58-99	149	468-0	17436-6	121.08
105	329.8	8659-0	60-13	150	471.2	17671-5	122.71
106	333.0	8824-7	61.28	151	474-3	17907-9	124-36
107	336.1	8992-0	62.44	152	477.5	18145-9	126.01
108	339-2	9160-9	63-61	153	480-6	18385.4	127-67
109	342-4	9331-1	64.80	154	483.8	18626-5	129-35
110	345.5	9503-3	65-99	155	486-9	18869-2	131.03
111	348-7	9676-9	67.20	156	490-0	19113-5	132-73
112	351.8	9852-0	68.41	157	493-2	19359-3	134.44
113	355.0	10028-7	69.64	158	496.3	19606-7	136-15
114	358-1	10207-0	70.88	159	499.5	19855-7	137.88
115	361.2	10386-9	72.13	160	502.6	20106-2	139-62
116	364-4	10568-3	73-39	161	505-7	20358-3	141.37
117	367.5	10751.3	74.66	162	508-9	20612.0	143-13
118	370-7	10935-9	75.94	163	512-0	20867-3	144-91
119	373.8	11122-0	77.23	164	515.2	21124-1	146-69
120	376-6	11309-7	78-54	165	518-3	21382.5	148.48

Areas of the Segments and Zones of a Circle, of which the DIAMETER is Unity, and supposed to be divided into 1000 equal parts.

Height.	Area of Segment.	Area of Zone.	Height.	Area of Segment.	Area of Zone.
-001	·000042	-001000	-036	-009008	-035969
-002	-000119	-002000	-037	-009383	-036967
-003	-000219	-003000	-038	-009763	-037965
-004	-000337	-004000	-089	-010148	-038962
-005	-000470	-005000	-040	-010537	-039958
-006	-000618	-006000	-041	-010931	-040954
-007	-000779	-007000	-042	-011330	-041951
.008	-000951	.008000	-043	-011784	-042947
-009	-001185	-009000	-044	-012142	-043944
-010	.001329	-010000	-045	-012554	-044940
-011	-001533	-011000	-046	-012971	.045935
-012	-001746	-011999	-047	-013392	.046931
-013	-001968	-012999	-048	-013818	-047927
-014	-002199	-013998	-049	-014247	·048922
-015	·002438	-014998	∙050	-014681	.049917
-016	-002685	-015997	-051	-015119	-050912
-017	.002940	-016997	.052	-015561	-051906
.018	.003202	-017996	-053	-016007	-052901
-019	-003471	·018996	-054	-016457	-053895
·020	.003748	-019995	-055	-016911	054890
-021	.004031	-020994	-056	-017869	-055883
.022	.004322	-021993	-057	.017831	-056877
.023	-004618	-022992	-058	-018296	-057870
.024	-004921	. 023991	-059	-018766	-058863
-025	.005230	-024990	-060	.019239	-059856
-026	-005546	-025989	-061	-019716	-060849
-027	.005867	-026987	.062	-020196	-061841
-028	-006194	-027986	-063	-020680	-062833
-029	-006527	-028984	-064	-021168	-063825
-030	-006865	-029982	-065	-021659	-064817
-031	-007209	-030980	-066	-022154	-065807
.032	-007558	-031978	-067	022652	-066799
-033	.007913	-032976	-068	-023154	-067790
.034	-008273	-033974	-069	.023659	-068782
.035	-008638	. 034972	-070	-024168	-069771

Height.	Area of Segment.	Area of Zone.	Height.	Area of Segment.	Area of Zone.
-071	-024680	-070761	-111	-047632	·110082
.072	.025195	-071751	-112	-048262	·111057
-073	-025714	-072740	-113	.048894	·112031
.074	.026236	-073729	.114	-049528	·113005
-075	-026761	-074718	·115	-050167	·113978
-076	-027289	-075707	-116	-050801	-114951
-077	-027821	-076695	117	.051446	·115924
-078	-028356	.077683	·118	-052090	·116896
-079	-028894	-078670	119	-052736	-117867
-080	·029435	-079658	·120	-053385	·118838
-081	.029979	-080645	-121	-054036	-119809
-082	-030526	-081631	122	.054689	·120779
.083	-031076	-082618	123	-055345	·121748
-084	-031629	-083604	124	.056003	.122717
-085	-032186	-084589	·125	.056663	·123686
-086	-032745	085574	-126	-057826	-124654
-087	-033307	.086559	·127	-057991	·125621
-088	.033872	-087544	128	.058658	·126588
-089	-084441	-088528	129	.059327	·127555
.090	-035011	·089512	·130	-059999	·128521
-091	-085585	-090496	-131	-060672	129486
.092	-036162	-091479	-132	-061348	·130451
-098	.036741	-092461	-133	-062026	·131415
-094	-037323	-093444	-134	-062707	·132379
.095	.037909	-094426	.135	-063389	·133342
-096	-038496	-095407	.136	-064074	-134304
-097	-039087	-096388	137	.064760	135266
-098	.039680	-097869	·138	-065449	-136228
-099	-040276	-098350	.139	-066140	·137189
·100	-040875	-099330	·140	.066833	·138149
·101	-041476	-100309	-141	-067528	-189109
102	-042080	·101288	.142	-068225	·140068
103	-042687	·102267	143	-068924	·141026
104	-043296	·103246	144	-069625	-141984
.105	-043908	·104223	-145	-070328	-142942
106	-044522	-105201	·146	-071033	-143898
107	-045139	·106178	.147	-071741	144854
108	.045759	·107155	·148	-072450	·145810
109	-046381	·108131	149	-073161	-146765
110	-047005	·109107	150	.073874	-147719

Height.	Area of Segment.	Area of Zone.	Height.	Area of Segment.	Area of Zone.
-151	-074589	·148673	-191	-104685	·186248
.152	-075306	·149625	192	-105472	-187172
-153	-076026	.150578	-198	-106261	-188094
.154	-076747	.151530	-194	-107051	-189016
155	-077469	-152481	-195	-107842	189938
-156	-078194	-153431	-196	-108636	-190858
.157	-078921	-154381	-197	-109430	·191777
-158	-079649	-155330	-198	-110226	-192696
-159	-080380	-156278	-199	-111024	-193614
.160	-081112	-157226	-200.	-111823	·194531
-161	-081846	-158178	-201	-112624	-195447
-162	-082582	.159119	-202	113426	-196362
-163	-083320	-160065	-203	-114230	-197277
-164	.084059	-161010	-204	-115035	-198190
.165	-084801	·161954	-205	-115842	·199103
.166	-085544	-162898	-206	116650	-200015
.167	-086289	-163841	-207	-117460	-200924
.168	-087036	164784	-208	·118271	-201835
.169	.087785	·165725	-209	-119083	-202744
-170	-088535	·166666	-210	·119897	·203652
-171	-089287	-167606	-211	120712	-201559
.172	-090041	168549	-212	-121529	-205465
.173	-090797	·160484	-213	-122347	-206370
174	-091554	-170422	-214	-123167	-207274
·175	-092313	·171359	-215	-123988	-208178
.176	-093074	·172295	-216	124810	-209080
.177	-093836	-173231	-217	-125634	.209981
·178	-094601	·174166	-218	126459	210882
179	-095366	-175100	219	127285	-211782
·180	·096134	·176033	-220	-128113	- 212680
-181	-096903	-176966	-221	128942	-213577
.182	-097674	177897	-222	129773	-214474
-183	-098447	·178828	.223	.130605	-215369
·184	.099221	-179759	-224	-131438	-216264
.185	-099997	-180688	-225	-132272	-217157
-186	-100774	-181617	-226	-133108	·218050
-187	·101553	-182545	.227	.133945	-218941
.188	·102334	·183472	-228	-134784	-219832
.189	. 103116	184398	-229	·135624	-220721
.190	103900	185323	-230	136465	-221610

Height.	Area of Segment,	Area of Zone.	Height.	Area of Segment.	Area of Zone.
-231	·137307	-222497	-271	-171978	-257075
-232	.138150	-223354	-272	172867	257915
.233	138995	-224269	-278	.173758	-258754
-234	.139841	-225158	-274	174649	-259591
.235	·140688	-226036	-275	175542	260427
-236	·141537	-226919	-276	176435	-261261
.237	.142387	.227800	-277	177830	·262094
.238	·143238	228680	.278	178225	-262926
-239	·144091	-229559	.279	.179122	-263757
240	·144944	·230439	•280	·180019	264586
-241	·145799	·231313	•281	180918	-265414
.242	-146655	232189	.282	-181817	·266240
.243	147512	233063	-283	.182718	·267065
-244	·148371	·233937	.284	183619	-267889
-245	·149230	·234809	.285	184521	-268711
.246	·150091	-235680	-286	185425	-269532
.247	·150953	.236550	-287	186329	·270252
.248	·151816	.237419	•288	187234	-271170
249	.152680	-238287	-289	188140	·271987
.250	·153546	.239153	-290	189047	-272802
-251	154412	·240019	-291	189955	-273616
.252	·155280	240883	-292	·190864	.274428
.253	·156149	·241746	•293	-191775	275239
.254	·157019	.242608	•294	192684	-276049
255	·157890	·243469	•295	·193596	-276857
.256	158762	-244328	-296	194509	-277664
.257	-159636	-245187	•297	195422	278469
258	·160510	·246044	-298	·196337	•279278
.259	·161386	·246900	•299	197252	·280075
.260	-162263	247755	-300	198168	.28087€
261	·163140	-248608	·301	-199085	-281675
.262	.164019	-249461	-302	.200003	-282478
.263	·164899	.250212	-303	200922	283269
.264	165780	.251162	⋅304	•201841	•284068
.265	·166663	·252011	-305	202761	-284857
.266	·167546	-252851	-306	·203683	-285648
.267	·168430	253704	⋅307	204605	-286438
.268	-169315	-254549	-308	205527	-287227
269	170202	·255392	-309	206451	-288014
270	171089	-256235	310	207376	-288799

Height.	Area of Segment.	Area of Zone.	Height.	Area of Segment.	Area of Zone.
·811	·208801	·289588	-351	·245934	·819588
·812	·209227	•290865	·852	·246889	·320249
·818	·210154	·291146	·858	·247845	·320958
·81 4	·211082	·291925	·854	·248801	·821666
·815	·212011	·292702	∙355	·249757	·822871
·816	·212940	·293478	-856	·250715	·828075
·817	·213871	294252	•357	·251678	·828775
·818	2 14802	•295025	·358	·25 26 81	·824474
· ·319	·215733	·295796	∙859	·253590	·325171
∙820	·216666	•296565	·860	·254550	·825866
·821	·217599	297333	∙861	·255510	-826559
·822	·218533	298098	·862	·256471	·327250
·828	·219468	·298863	-863	·257488	:82798 9
·824	·220404	-299625	·864	·258395	·828625
· 82 5	221840	·800888	-865	·259857	·829 810
826	·222277	·301145	•866	-260820	·329992
·327	·228215	⋅301902	∙867	·261284	·880678
·828	·224154	·302658	∙868	·2622 4 8	381851
· 82 9	•225093	803412	·369	·263 2 18	·882027
· •880	·226088	·304164	∙870	·264178	∙882700
∙881	·226974	-304914	∙371	-265144	·38 3 872
·882	•227915	·305663	⋅372	·266111	·334041
·888	·228858	·306410	·373	·267078	·334708
·834	·229801	∙307155	•374	·268045	·385878
· 8 35	230745	·807898	∙375	·269013	·336086
·886	·281689	·808640	·876	·269982	·88669 6
·837	282684	·309379	·377	·270951	·337854
-888	·238580	-810117	· ·378	·271920	·838010
-889	-234526	·310853	.879	·272890	·838668
·8 4 0	·285478	·311588	∙880	·273861	·83931 4
·841	·286421	·812319	∙381	·274882	·339963
·842	∙287869	·813050	.882	·275803	·840609
·843	·288318	··313778	·383	·276775	341258
·84 4	239268	• 814 505	·884	·277748	·841895
·8 4 5	·2 4 0218	-81523 0	-385	·278721	·342534
·846	·241169	• 8159 52	-386	·279694	·848171
·847	·242121	·816673	∙887	280668	·343805
·848	·243074	·317393	∙388	281642	·844487
·849	·244026	·318110	.889	·282617	·845067
·850	-244 980	·318 82 5	·890	·288592	·345694

Height.	Area of Segment.	Area of Zone.	Height.	Area of Segment.	Area of Zone.
-391	-284568	-346318	-431	-323918	-369040
:892	.285544	·346940	-432	824909	-869545
4898	.286521	.847560	.433	-325900	-870047
-394	287498	-348177	.434	-826892	-370545
-395	-288476	-348791	-435	-327882	-371040
-396	289453	-849403	•436	328874	-871581
-397	-290432	-350012	-437	·329866	·372019
-398	291411	-350619	·438	-830858	·372503
-399	292390	-351223	•439	-831850	-372988
-400	293369	·351824	·440	·832848	-373460
-401	-294349	-352423	-441	-333836	-873938
-402	.295330	.353019	•442	-334829	.874408
·403	·296311	853612	-443	·335822	.374868
.404	.297292	-354202	-444	-336816	.875330
·405	·298273	-854790	·445	-837810	-375788
-406	-299255	-355376	.446	-338804	-876242
-407	·300238	·355958	.447	·339798	•376692
-408	-301220	·356537	-448	·840793	·377138
409	·302203	-357114	-449	·341787	-377580
·410	·303187	-357688	·450	·342782	-378018
-411	-804171	-358258	-451	-343777	-378452
.412	·305155	·858827	452	344772	-878881
.413	.306140	·359392	·453	-345768	-379307
-414	-307125	-359954	.454	346764	-379728
415	-308110	-360513	.455	·347759	-380145
-416	-309095	·361070	-456	348755	·380557
-417	-310081	-361623	-457	.349752	.380965
·418	-311068	·362173	.458	.350748	-381369
·419	·312054	·362720	459	-351745	-381768
·420	·313041	·363264	-460	*352742	-382162
•421	·314029	·363805	-461	.353739	-382551
422	-315016	-364343	-462	-354786	·382936
.423	-316004	-364878	•463	·355732	-383316
.424	·316992	·365410	-464	-356730	-383691
.425	-317981	•865989	·465	*857727	-384061
·426	-318970	-366463	•466	-358725	-384426
·427	-819959	-366985	-467	-359723	-384786
-428	·320948	-367504	-468	-360721	-385144
·429	·321938	-368019	•469	-361719	-385490
·430	-322928	-368531	-470	-362717	-385834

Height.	Area of Sugment.	Area of Zone.	Height.	Area of Segment.	Area of Zone.
471	·\$63715	-386172	486	-378701	·390500
472	·364713	386505	487	-379700	-390730
473	-\$65712	-386832	-458	·3S0700	·890953
474	-366710	-387153	489	-381699	-391166
475	-367709	-387469	490	-382699	·391370
476	-368708	-387778	. 4 91 '	-383699	·391564
477	-369707	388081	492	-384409	-391748
478	67 0706	·388377	493	-385599	-391920
479	·371704	-388669	494	-386699	·392081
-4 80	·372704	-388951	495	· 3 87699	-392229
481	·373703	-389228	- 496	-388699	· 3923 62
·482	·374702	·389497	497	-389699	·392480
483	-375702	·389759	-498	-390699	·392580
-484	-376702	·390014	499	-391699	·392657
·485·	·377701	·390261	-500	·392699	-392699

To find the Area of the Segment of a Circle.

RULE.—Divide the height, or versed sine, by the diameter of the circle, and find the quotient in the column of heights.

Then take out the corresponding area, in the column of areas, and multiply it by the square of the diameter; this will give the area of the segment.

EXAMPLE.—Required the area of a segment of a circle, whose height is 31 feet, and the diameter of the circle 50 feet.

31 = 3.25; and $3.25 \div 50 = .065$.

·065, as per Table, = ·021659; and ·021659 \times 50° = 54·147500, the area required.

To find the Area of a Circular Zone.

RULE 1.—When the zone is less than a semicircle, divide the height by the longest chord, and seek the quotient in the column of heights. Take out the corresponding area, in the next column on the right hand and multiply it by the square of the longest chord; the product will be the area of the zone.

EXAMPLE.—Required the area of a zone whose longest chord is 50, and height 15.

 $15 \div 50 = 300$; and 300, as per Table, = 280876. Hence $280876 \times 50^2 = 702 \cdot 19$, the area of the zone.

RULE 2.—When the zone is greater than a semicircle, take the height on each side of the diameter of the circle, and find, by Rule 1, their respective areas; the areas of these two portions, added together, will be the area of the zone.

EXAMPLE.—Required the area of a zone, the diameter of the circle being 50, and the height of the zone on each side of the line which passes through the diameter of the circle 20 and 15 respectively.



 $20 \div 50 = 400$; 400, as per Table, = 351824; and $351824 \times 50^2 = 879.56$.

 $15 \div 50 = .800$; .300, as per Table, = .280876; and .280876 $\times 50^3 = 702.19$.

Hence 879.56 + 702.19 = 1581.75.

Approximating Rule to find the Area of a Segment of a Circle.

RULE.—Multiply the chord of the segment by the versed sine, divide the product by 3, and multiply the remainder by 2.

Cube the height, or versed sine, and how often twice the length of the chord is contained in it, and add the quotient to the former product: this will give the area of the segment very nearly.

EXAMPLE.—Required the area of the segment of a circle, the chord being 12, and the versed sine 2.

$$12 \times 2 = 24$$
; $\frac{24}{3} = 8$; and $8 \times 2 = 16$.

$$2^3 \div 24 \ (12 \times 2) = \cdot 3333.$$

Hence 16 + .3333 = 16.3333, the area of the segment very nearly.

TABLE V.

Proportions of the Lengths of Circular Arcs.

Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.
·100	1.02645	·185	1.04792	.170	1.07587	-205	1.10855
101	1-02698	186	1.04862	.171	1.07624	.206	1.10958
.102	1 02752	·187	1.04982	.172	1.07711	-207	1.11062
108	1.02806	138	1.05008	.178	1.07799	.208	1.11165
104	1.02860	·189	1.05075	.174	1.07888	•209	1.11269
105	1.02914	·140	1.05147	·175	1.07977	·210	1.11874
.106	1.02970	·141	1-05220	·176	1.08066	-211	1.11479
.107	1-03026	·142	1.05293	.177	1.08156	.212	1.11584
108	1-03082	143	1.05867	·178	1.08246	.213	1.11692
·109	1.08189	•144	1.05441	179	1.08337	.214	1.11796
·110	1.03196	·145	1.05516	180	1.08428	·215	1.11904
·111	1-08254	·146	1.05591	∙181	1.08519	·216	1.12011
1112	1.08812	·147	1-05667	·182	1.08611	·217	1.12118
-118	1-03371	·148	1.05748	·183	1.08704	.218	1.12225
·114	1-08480	·149	1.05819	·184	1.08797	·219	1.12834
·115	1-08490	·150	1.05896	·185	1.08890	·220	1.12445
116	1.08551	·151	1.05978	·186	1.08984	·221	1.12556
·117	1-08611	152	1-06051	∙187	1.09079	.222	1.12668
118	1-08672	·158	1.06130	⋅188	1.09174	.223	1.12774
119	1-08784	·154	1.06209	·189	1-09269	·224	1.12885
-120	1.08797	155	1-06288	·190	1.09365	•225	1.12997
·121	1.03860	·156	1.06368	·191	1.09461	.226	1.13108
.122	1-03928	·157	1.06449	.192	1.09557	.227	1.13219
.123	1.03987	158	1.06530	⋅198	1.09654	.228	1.18831
·124	1.04051	·159	1.06611	·194	1.09752	.229	1.18444
125	1.04116	160	1.06698	·195	1.09850	·230	-1.18557
·126	1.04181	•161	1.06775	·196	1.09949	·231	1.13671
·127	1.04247	·162	1.06858	197	1.10048	•232	1.18786
·128	1.04818	·163	1.06941	∙198	1.10147	•283	1.18903
·129	1.04880	·164	1.07025	∙199	1.10247	·234	1.14020
.180	1.04447	·165	1.07109	•200	1.10348	·235	1.14186
`.181	1.04515	·166	1-07194	·201	1.10447	⋅286	1.14247
182	1-04584	·167	1.07279	.202	1.10548	.237	1.14368
·188	1.04652	⋅168	1-07865	·208	1.10650	.288	1.14480
·184	1.04722	.169	1.07451	.204	1.10752	-289	1.14597

Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Are.
-240	1.14714	-283	1.20146	-326	1.26286	-369	1.83069
-241	1.14831	-284	1.20282	-327	1.26437	-370	1.33234
.242	1.14949	.285	1.20419	-328	1.26588	-371	1.83399
-243	1.15067	-286	1.20558	-329	1.26740	-372	1.33564
.244	1.15186	-287	1.20696	-330	1.26892	-373	1.83730
.245	1.15308	-288	1.20828	-331	1.27044	-374	1.33896
.246	1.15429	-289	1.20967	-332	1.27196	-375	1.34063
.247	1.15549	-290	1.21202	-333	1.27349	376	1.84229
.248	1.15670	-291	1.21239	-334	1.27502	-877	1.34396
-249	1.15791	-292	1.21381	-335	1.27656	-878	1.84568
.250	1.15912	-293	1.21520	-836	1.27810	-379	1.84731
.251	1.16033	-294	1.21658	-337	1.27864	-380	1.84899
.252	1.16157	-295	1.21794	-338	1.28118	-381	1.35068
.258	1.16279	-296	1.21926	-339	1.28273	-382	1.35237
.254	1.16402	-297	1.22061	-340	1.28428	-383	1.85406
.255	1.16526	-298	1.22203	-341	1.28583	-384	1.35575
.256	1.16649	-299	1.22347	-342	1.28739	-885	1.85744
.257	1.16774	-300	1.22495	-343	1.28895	-386	1.35914
258	1.16899	-801	1.22635	-844	1.29052	-387	1.86084
259	1.17024	-302	1.22776	-845	1.29209	388	1.86254
260	1.17150	-303	1.22918	-346	1.29366	-389	1.36425
.261	1.17275	-304	1.28061	-347	1.29528	-390	1.86596
262	1.17401	-305	1.23205	-348	1.29681	-891	1.36767
-263	1.17527	-306	1.23349	-349	1.29839	-392	1.36939
-264	1.17655	-307	1.23494	-350	1.29997	-898	1.37111
265	1.17784	-308	1.23636	-851	1.30156	-894	1.37283
266	1.17912	-309	1.23780	-352	1.80815	-395	1.87455
267	1.18040	-310	1.23925	-853	1.30474	-396	1.37628
268	1.18162	-311	1.24070	-354	1.30634	-897	1.37801
269	1.18294	-312	1.24216	-355	1.30794	398	1.37974
.270	1.18428	-313	1.24360	-356	1.30954	-899	1.38148
-271	1.18557	-314	1.24506	-357	1.31115	-400	1.38322
272	1.18688	-315	1.24654	-358	1.31276	-401	1.38496
278	1:18819	-316	1.24801	-359	1.31437	-402	1.38671
274	1.18969	-317	1.24946	-360	1.81599	.403	1.38846
275	1.19082	-318	1.25095	361	1.31761	404	1.39021
276	1.19214	-319	1.25243	-362	1.31923	-405	1.39196
277	1.19214	-319	1.25391	-363	1.32086	406	1.39196
278	1.19345	-320	1.25539	-364	1.32249	·406 ·407	1.39548
278		-321	1.25686	-365	1.32418	732	1.39548
280	1.19610	-822	1.25836	-366	1.82577	·408 ·409	1.89724
·280 ·281				-367			
281	1·19887 1·20011	-324	1.25987 1.26187	-368	1.82741	·410 ·411	1·40077 1·40254

Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.
· 4 12	1.40432	·435	1.44589	·457	1.48699	-479	1.52931
· 4 13	1.40610	·436	1.44778	·458	1.48889	·480	1.58126
-414	1.40788	·437	1.44957	·459	1.49079	-481	1.53322
·415	1.40966	·488	1.45142	·460	1.49269	.482	1.53518
·416	1.41145	·489	1.45327	·461	1.49460	-483	1.58714
·417	1.41324	·440	1.45512	·462	1.49651	.484	1.58910
-418	1.41503	·441	1.45697	·463	1.49842	·485	1.54106
·419	1.41682	·442	1.45888	·464	1.50033	·486	1.54302
-420	1.41861	.443	1.46069	·465	1.50224	·487	1.54499
· 42 1	1.42041	·444	1.46255	· 4 66	1.50416	·488	1.54696
·422	1.42222	·445	1.46441	·467	1.50608	·489	1.54893
•428	1.42402	·446	1.46628	·468	1.50300	· 490	1.55090
·424	1.42588	447	1.46815	·469	1.50992	·491	1.55288
·425	1.42764	·448	1.47002	•470	1.51185	·492	1.55486
·426	1.42945	•449	1.47189	·471	1.51378	·498	1.55685
·427	1.43127	·450	1.47877	·472	1.51571	·494	1.55854
•428	1.43809	·451	1.47565	·478	1.51764	·495	1.56088
·429	1.43491	·452	1.47758	·474	1.51958	•496	1.56282
·430	1.43678	.458	1.47942	.475	1.52152	·497	1.56481
· 4 31	1.43856	·454	1.48131	·476	1.52346	·498	1.56680
•432	1.44039	·455	1.48320	·477	1.52541	·499	1.56879
·438	1.44222	456	1.48509	·478	1.52786	∙500	1.57079
•434	1.44405						

TABLE VI.

Proportions of the Lengths of Semi-Elliptic Area.

Height of Arc.	Leagth of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Are.
-100	1-04162	-135	1-07726	-170	1.11569	.205	1.15602
101	1.04262	-136	1.07831	-171	1.11682	206	1.15720
-102	1.04362	-137	1-07937	.172	1.11795	-207	1.15838
.103	1.04462	.138	1.08043	.173	1-11908	.208	1.15957
-104	1.04562	.139	1.08149	.174	1.12021	. 209	1.16076
105	1.04662	140	1.08255	.175	1.12134	-210	1-16196
.106	1.04762	.141	1.08362	-176	1.12247	-211	1-16316
.107	1.04862	142	1.08469	.177	1-12360	-212	1.16436
-108	1.04962	-143	1.08576	.178	1.12473	-213	1.16557
.109	1.05063	.144	1.08684	-179	1.12586	-214	1.16678
-110	1.05164	145	1.08792	-180	1.12699	-215	1.16799
-111	1.05265	-146	1.08901	.181	1-12813	-216	1.16920
.112	1.05866	-147	1-09010	182	1.12927	-217	1.17041
.113	1.05467	.148	1-09119	·183	1.13041	-218	1.17163
.114	1.05568	149	1.09228	-184	1.13155	.219	1.17285
.115	1.05669	-150	1.09330	.185	1.18269	-220	1.17407
.116	1-05770	-151	1-09448	.186	1.13383	-221	1.17529
-117	1.05872	.152	1.09558	-187	1.13497	.222	1.17651
-118	1.05974	.153	1.09669	188	1.13611	.223	1.17774
.119	1-06076	.154	1.09780	.189	1.13726	-224	1.17897
.120	1.06178	.155	1.09891	.190	1.13841	-225	1.18020
.121	1.06280	.156	1.10002	-191	1.13956	.226	1-18143
.122	1.06382	.157	1.10118	.192	1.14071	-227	1.18266
.123	1.06484	-158	1.10224	-193	1-14186	-228	1.18390
.124	1.06586	.159	1.10335	.194	1.14301	.229	1.18514
.125	1.06689	.160	1.10447	.195	1.14416	.230	1.18638
·126	1.06792	-161	1.10560	196	1.14531	231	1.18762
-127	1.06895	.162	1.10672	-197	1.14646	.232	1.18886
-128	1.06998	.163	1.10784	.198	1.14762	.233	1.19010
.129	1.07001	.164	1.10896	-199	1.14888	.234	1.19134
.130	1.07204	.165	1.11008	•200	1.15014	-235	1.19258
.131	1.07308	.166	1.11120	-201	1.15131	.236	1.19382
.132	1.07412	.167	1.11232	.202	1.15248	.237	1.19506
.133	1.07516	.168	1.11344	.203	1.15366	.238	1.19630
.134	1.07621	.169	1.11456	•204	1.15484	.239	1.19755

Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.
.240	1.19880	-283	1.25406	-326	1.31198	-369	1.37268
-241	1.20005	-284	1.25538	-327	1.31335	-370	1.87414
.242	1.20130	.285	1.25670	-328	1.31472	-371	1.37662
.243	1.20255	-286	1.25803	-329	1.31610	-372	1.37708
.244	1.20380	-287	1.25936	-330	1.31748	-373	1-37854
.245	1.20506	-288	1.26069	-331	1.31886	-374	1.38000
.246	1.20632	.289	1.26202	-332	1.32024	-375	1.38146
.247	1.20758	-290	1.26335	.333	1.32162	-376	1.38292
.248	1.20884	-291	1.26468	-334	1.32300	-377	1.38439
.249	1.21010	-292	1.26601	-335	1.32438	-378	1.38585
.250	1.21136	-293	1.26734	-336	1.82576	-379	1.88782
.251	1.21263	-294	1.26867	-337	1.32715	-880	1.38879
.252	1.21390	.295	1.27000	-338	1.32854	-381	1-39024
.253	1.21517	.296	1.27133	-339	1.32998	-382	1.39169
.254	1.21644	.297	1.27267	.340	1.33132	-383	1.39314
.255	1.21772	-298	1.27401	-341	1.83272	-384	1.89459
.256	1.21900	-299	1.27535	.342	1.33412	-385	1.39608
.257	1.22028	-300	1.27669	-343	1.83552	-886	1.39751
.258	1.22156	-301	1.27803	-344	1.83692	-387	1.39897
.259	1.22284	-302	1.27987	-845	1.33833	-888	1.40048
.260	1.22412	-303	1.28071	-346	1.33974	-389	1.40189
.261	1.22541	-304	1.28205	-347	1.34115	-390	1.40338
.262	1.22670	-305	1.28339	-348	1.34256	-391	1.40481
.263	1.22799	-306	1.28474	-349	1.84397	-392	1.40627
.264	1.22928	-307	1.28609	-850	1.34539	-393	1.40778
.265	1.23057	-308	1.28744	-351	1.34681	-394	1.40919
.266	1.23186	-309	1.28879	-852	1.34823	-395	1.4106
-267	1.23315	-310	1.29014	-353	1.34965	-396	1.41211
.268	1.23445	-311	1.29149	-354	1.35108	-397	1.41357
.269	1.23575	-312	1.29285	-855	1.85251	-398	1.41504
.270	1.23705	·313	1.29421	-356	1.35394	-399	1.4165
.271	1.23835	-314	1.29557	.357	1.35537	-400	1.41798
.272	1.23966	-315	1.29603	-358	1.35680	-401	1.41946
.278	1.24097	-316	1.29829	.359	1.35823	-402	1.42092
.274	1.24228	-317	1.29965	-360	1.35967	-403	1.42239
.275	1.24359	-318	1.30102	-361	1.36111	-404	1.42386
.276	1.24480	-319	1.30239	-362	1.36255	-405	1.42538
.277	1.24612	-320	1.30376	-363	1.36399	-406	1.42681
.278	1.24744	-321	1.80513	.364	1.36543	-407	1.42829
.279	1.24876	-322	1.30650	-365	1.36688	-408	1.42977
.280	1.25010	-323	1.30787	-366	1.36833	.409	1.4312
.281	1.25142	324	1.30924	-367	1.36978	-410	1.43278
282	1.25274	825	1.31061	-368	1.37123	-411	1.43421

Height of Arc.	Length of Arc.	Height of Arc.	Length of Are.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.
-412	1.43569	-455	1.50077	-498	1.56763	-541	1.63465
-413	1.43718	.456	1.50230	-499	1.56921	.542	1.63623
414	1.43867	-457	1.50388	-500	1.57089	-543	1.63780
.415	1.44016	-458	1.50536	.501	1.57234	-544	1.63937
416	1-44165	459	1.50689	-502	1.57389	-545.	1.64094
-417	1.44314	·460	1.50842	-503	1.57544	-546	1.64251
418	1.44463	-461	1.50996	-504	1.57699	-547	1.64408
419	1.44613	.462	1.51150	.505	1.57854	-548	1.64565
-420	1.44763	.463	1.51304	-506	1.58009	-549	1.64722
.421	1.44913	-464	1.51458	-507	1.58164	-550	1.64879
.422	1.45064	.465	1.51612	.508	1.58319	-551	1.65036
.423	1.45214	-466	1.51766	.509	1.58474	-552	1.65198
.424	1.45364	-467	1.51920	-510	1.58629	-553	1.65350
·425	1.45515	-468	1.52074	-511	1.58784	.554	1.65507
-426	1.45665	-469	1.52229	-512	1.58940	.555	1.65665
.427	1.45815	-470	1.52384	-513	1.59096	-556	1.65828
-428	1.45966	-471	1.52539	-514	1.59252	-557	1.65981
.429	1.46167	.472	1.52691	.515	1.59408	-558	1.66139
·430	1.46268	.473	1.52849	-516	1.59564	-559	1.66297
·431	1.46419	-474	1.58004	-517	1.59720	-560	1.6645
432	1.46570	.475	1.53159	-518	1.59876	-561	1.66618
433	1-46721	-476	1.53314	-519	1.60032	-562	1.66771
.434	1.46872	-477	1.53469	-520	1.60188	-563	1.66929
435	1.47023	478	1.53625	-521	1.60344	-564	1.67087
.436	1.47174	.479	1.53781	522	1.60500	-565	1.6724
-437	1.47326	·480	1.53937	-523	1.60656	-566	1.67408
.438	1.47478	-481	1.54093	-524	1.60812	-567	1.67561
·439	1.47630	482	1.54249	-525	1.60968	-568	1.67719
.440	1 47782	-483	1.54405	-526	1.61124	-569	1-67877
-441	1.47934	.484	1.54561	.527	1.61280	-570	1.68036
.442	1.48086	-485	1.54718	.528	1.61436	-571	1.68195
.443	1.48288	-486	1.54875	.529	1.61592	.572	1.68354
.444	1.48391	-487	1.55032	.530	1.61748	-573	1.68518
.445	1.48544	-488	1.55189	-531	1.61904	-574	1.68672
·446	1.48697	.489	1.55346	.532	1.62060	-575	1.68831
.447	1.48850	-490	1.55503	.533	1.62216	-576	1.68990
· 4 48	1.49003	.491	1.55660	-584	1.62372	-577	1.69149
-449	1.49157	.492	1.55817	-535	1.62528	478	1.69308
450	1.49311	•493	1.55974	-536	1.62684	.579	1.69467
451	1.49465	-494	1.56131	-537	1.62840	-580	1.69626
.452	1.49618	-495	1.56289	.538	1.62996	-581	1.69785
453	1.49771	.496	1.56447	•539	1.63152	-582	1:69945
454	1.49924	-497	1.56605	-540	1.63309	-583	1.70105

Height of Arc.	Length of Arc.	Height of Are.	Length of Arc.	Height of Arc.	Length of Are.	Height of Arc.	Length of Arc.
-584	1.70264	-627	1.77197	-670	1.84226	-713	1.91355
.585	1.70424	-628	1.77359	-671	1.84391	.714	1.91528
.586	1.70584	-629	1.77521	-672	1.84556	-715	1.91691
-587	1.70745	-630	1.77684	-673	1.84720	-716	1.91859
.588	1.70905	-631	1.77847	-674	1.84885	-717	1.92027
.589	1.71065	-632	1.78009	-675	1.85050	-718	1.92195
.590	1.71225	-633	1.78172	-676	1.85215	.719	1.92363
.591	1.71286	634	1.78335	-677	1.85879	.720	1.92531
.592	1.71546	-635	1.78498	-678	1.85544	.721	1.92700
.593	1.71707	.636	1.78660	-679	1.85709	.722	1.92868
.594	1.71868	-637	1.78823	-680	1.85874	.728	1.93036
.595	1.72029	-638	1.78986	-681	1.86039	-724	1.93204
-596	1.72190	.639	1.79149	-682	1.86205	.725	1.93373
.597	1.72350	-640	1.79312	-683	1.86370	-726	1.93541
.598	1.72511	-641	1.79475	.684	1.86535	.727	1.93710
.599	1.72672	-642	1.79638	-685	1.86700	.728	1.93878
.600	1.72833	-643	1.79801	-686	1.86866	.729	1.94046
-601	1.72994	-644	1.79964	-687	1.87031	-730	1.94215
-602	1.73155	-645	1.80127	-688	1.87196	-731	1.94388
.603	1.73316	646	1.80290	-689	1.87362	.732	1.94552
.604	1.73477	-647	1.80454	-690	1.87527	-738	1.94721
.605	1.73638	-648	1.80617	-691	1.87693	.734	1.94890
.606	1.73799	-649	1.80780	-692	1.87859	.735	1.95059
-607	1.73960	-650	1.80943	-693	1.8804	.736	1.95228
-608	1.74121	-651	1.81107	-694	1.88190	.737	1.95397
.609	1.74283	-652	1.81271	-695	1.88356	.738	1.95566
.610	1.74444	-653	1.81435	-696	1.88522	.739	1.95735
·611	1.74605	.654	1.81599	-697	1.88688	-740	1.95994
612	1.74767	-655	1-81763	-638	1.88854	.741	1.96074
-613	1.74929	-656	1.81928	-699	1.89020	.742	1.96244
614	1.75091	.657	1.82091	.700	1.89186	.743	1.96414
-615	1.75252	-658	1.82255	.701	1.89352	.744	1.96588
·616	1.75414	.659	1.82419	.702	1.89519	.745	1.96758
-617	1.75576	-660	1.82583	.703	1.89685	.746	1.96923
618	1.75738	-661	1.82747	.704	1.89851	-747	1.97093
619	1.75900	.662	1.82911	.705	1.90017	.748	1.97262
-620	1.76062	-663	1.83075	.706	1.90184	-749	1.97432
.621	1.76224	-664	1.83240	-707	1.90350	-750	1.97602
.622	1.76386	-665	1.83404	-708	1.90517	.751	1.97772
.623	1.76548	-666	1.83568	-709	1.90684	.752	1.97948
624	1. 10	-667	1.83733	.710	1.90852	.753	1.98118
625	7 .72	-668	1.83897	.711	1.91019	-754	1.98288
626	84	-669	1.84061	.712	1.91187	-755	1.98458

Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.
-756	1.98623	-799	2.06027	-842	2.13618	-885	2.21388
-757	1-98794	-800	2.06202	-848	2.18797	-886	2.21571
.758	1.98964	-801	2.06377	-844	2.13976	-887	2.21754
.759	1.99134	-802	2.06552	-845	2.14155	-888	2.21937
.760	1.99305	-803	2.06727	-846	2-14384	-889	2.22120
-761	1.99476	-804	2-06901	-847	2.14513	-890	2.22303
.762	1.99647	-805	2-07076	-848	2.14692	-891	2.22486
.763	1.99818	-806	2.07251	-849	2.14871	-892	2.22670
-764	1.99989	-807	2-07427	-850	2.15050	-893	2.22854
-765	2.00160	-808	2.07602	-851	2.15229	-894	2.23038
-766	2.00331	-809	2.07777	-852	2.15409	-895	2.23222
-767	2.00502	-810	2.07953	-853	2.15589	-896	2.23406
.768	2.00678	-811	2.08128	-854	2.15770	-897	2.23590
.769	2.00844	-812	2.08304	-855	2.15950	-898	2.23774
-770	2.01016	-813	2.08480	-856	2-16130	-899	2-23958
.771	2.01187	-814	2.08656	-857	2.16309	-900	2.24142
.772	2.01359	-815	2.08882	-858	2.16489	-901	2.24325
.778	2.01531	-816	2.09008	-859	2.16668	.902	2.24508
.774	2.01702	-817	2.09198	-860	2.16848	.903	2.24691
.775	2.01874	-818	2.09360	-861	2.17028	-904	2-24874
.776	2.02045	-819	2.09586	-862	2.17209	-905	2.25057
.777	2.02217	-820	2.09712	-863	2.17889	-906	2.25240
-778	2.02389	-821	2.09888	-864	2.17570	-907	2-25423
.779	2.02561	.822	2.10065	-865	2.17751	-908	2.25606
.780	2.02733	-823	2-10242	·866	2.17932	-909	2.25789
-781	2.02907	-824	2-10419	-867	2.18113	-910	2.25972
.782	2.03080	-825	2.10596	-868	2.18294	-911	2.26155
.783	2.03252	-826	2.10773	-869	2.18475	-912	2.26338
.784	2.03425	-827	2.10950	-870	2.18656	-913	2.26521
-785	2.03598	-828	2.11127	-871	2.18837	-914	2.26704
.786	2.03771	829	2.11304	-872	2.19018	-915	2.26888
-787	2.03944	·830	2.11481	-873	2.19200	-916	2.27071
.788	2.04117	·831	2.11659	-874	2.19382	-917	2.27254
.789	2.04290	-832	2-11837	.875	2.19564	.918	2.27437
.790	2.04462	.833	2.12015	-876	2.19746	-919	2.27620
.791	2.04635	.834	2.12193	-877	2.19928	-920	2.27803
.792	2.04809	-835	2.12371	-878	2.20110	.921	2-27987
.793	2.04983	.836	2.12549	-879	2.20292	-922	2.28170
.794	2.05157	-837	2.12727	-880	2.20474	-923	2.28354
.795	2.05331	.838	2.12905	-881	2.20656	-924	2-28537
.796	2.05505	-839	2.13083	-882	2.20839	.925	2.28720
.797	2.05679	-840	2.13261	-883	2.21022	.926	2.28903
.798	2.05853	-841	2-13439	-884	2.21205	.927	2.29086

Height of Arc.	Length of Arc.	Height ôf Arc.	Length of Arc.	Height of Arc.	Length of Arc.	Height of Arc.	Length of Arc.
·928	2.29270	.947	2.32785	·965	2.36191	•983	2.89631
·929	2.29458	-948	2.32972	.966	2.36881	-984	2.39823
·930	$2 \cdot 29686$.949	2.83160	.967	2.36571	∙985	2.40016
.931	2.29820	•950	2.33348	∙968	2.36762	•986	2.40208
.932	2.30004	•951	2.88537	•969	2.36952	∙987	2.40400
.933	2.80188	.952	2.38726	∙970	2.37148	•988	2.40592
-934	2.30373	953	2.88915	.971	2.87834	-989	2.40784
·985	2.30557	∙954	2.34104	.972	2.37525	·990	2.40976
.936	2.80741	•955	2.84293	•973	2.37716	•991	2.41169
.937	2.30926	∙956	2.34483	.974	2.37908	.992	2.41862
·938	2.81111	957	2.34678	.975	2.38100	•998	2.41556
-989	2.31295	•958	2:84862	976	2.88291	.994	2.41749
·940	2.81479	.959	2.85051	977	2.88482	•995	2.41948
·941	2.81666	•960	2.85241	.978	2.88673	.996	2.42136
.942	2.81852	961	2.85481	979	2.38864	·997	2.42329
·948	2.82038	.962	2.85621	-980	2.39055	-998	2.42522
.944	2.82224	968	2.85810	-981	2.89247	-999	2.42715
.945	2.32411	.964	2.36000	-982	2.39439	1.000	2.42908
·946	2.82598	•		1 1			

To find the Length of an Arc of a Circle, or the Curve of a Right Semi-Ellipse.

RULE.—Divide the height by the base, and the quotient will be the height of an arc of which the base is unity. Seek, in the Table of Circular or Semi-elliptical arcs, as the case may be, for a number corresponding to this quotient, and take the length of the arc from the next right-hand column. Multiply the number thus taken out by the base of the arc, and the product will be the length of the arc or curve required.

EXAMPLE 1.—In Southwark Bridge, London, the profiles of the arches are the arcs of circles; the

64 RULES FOR FINDING THE LENGTHS OF ARCS.

span of the middle arch is 240 feet, and the height 24 feet; required the length of the arc.

 $24 \div 240 = \cdot 100$; and $\cdot 100$, as per Table V., is 1.02645.

Hence $1.02645 \times 240 = 246.34800$ feet, the length required.

EXAMPLE 2.—The profiles of the arches of Waterloo Bridge are all equal and similar semi-ellipses; the span of each is 120 feet, and the rise 28 feet; required the length of the curve.

 $28 \div 120 = .233$; and .233, as per Table VI., is 1.19040.


Hence $1.19010 \times 120 = 142.81200$ feet, the length required.

In this example there is, in the division of 28 by 120, a remainder of 40, or one-third part of the divisor; consequently the answer, 142.81200, is rather less than the truth. But this difference, in even so large an arch, is little more than half an inch; therefore, except where extreme accuracy is required, it is not worth computing.

These Tables are equally useful in estimating works which may be carried into practice, and the quantity of work to be executed from drawings to a scale.

As the Tables do not afford the means of finding the lengths of the curves of elliptic arcs which are less than half of the entire figure, the following geometrical method is given to supply the defect.

Let the curve, of which the length is required to be found, be A B C.

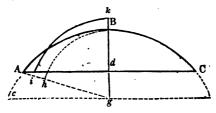

Produce the height line, B d, to meet the centre of the curve, in g. Draw the right line, A g, and from the centre, g, with the distance, g B, describe an arc, B h, meeting A g in h. Bisect A h in i, and from the centre, g, with the radius, g i, describe the arc i k, meeting d B, produced to k; then i k is half the arc A B C.

The following TABLES of Areas and Solidities will be found considerably to diminish the labour of calculation.

The numbers in the *first* column after the names represent the areas or solidities, when the length of the side or edge is 1, or unity; and the numbers in the other columns are multiples of those in the first, by the unit over each.

To find, therefore, the area of a Polygon, take the square of the length of the side, and seek in the proper columns the multipliers, which are to be ranged under each other as in common multiplication. The sum of these will be the area required.

EXAMPLE.—To find the area of a Pentagon, whose side is 18 inches, the multiplier being the square of 18 = 324.

The number in the Table under 4 is 6.8 8 1 9

" " 2" 3.4 4 0 9

" " 3" 5.1 6 1.4

Answer, the last four figures being decimals - - - - (the Area,) 5 5 7.4 3 0 9.

The same RULE is applicable to Table X., of the Solidities of Regular Bodies, using the *cube* instead of the square.

To find the Areas of Regular Polygons.

RULE.—Square the length of side of the Polygon, and take the products from the subjoined Table, as

-	a	က	*	10	ဖ	-	©	Ø
-4880	.8660	1.2990	1.7820	2.1661	2.5981	8.0811	8-4641	8-8971
.7204	8.4409	5.1614	6-8819	8.6024	10.8229	12-0488	18.7688	15.4848
2.5981	5.1961	7.7942	10.8928	12.9908	16.5884	18-1865	20.7846	23.8826
6889	7.2678	10.9017	14.5356	18.1695	21.8085	25.4874	29.0718	82.7052
1.8284	89999-6	14.4852	19-8187	24.1421	28.9706	88.7990	88-6274	43-4558
3.1818	12.8686	18.5455	24.7278	80-9091	87-0909	48.2728	49-4546	55.6864
-6942	15.8884	23.0826	80.7768	88-4710	46.1652	58.8595	61.5587	69.2479
9999	18.7313	28.0969	87-4626	46.8282	56.1938	65.5595	74-9251	84.2908
1-1961	22.8928	88-5884	44.7846	22-3808	67.1769	78-8781	89.5692	100.7654
أنضاء ممشممتمين	4830 1.7204 2.5981 8.6839 4.8284 6.1818 7.6942 9.8656	1	84409 8-4409 6-1961 7-2678 9-6668 12-8686 16-8884 18-7313 22-8928	*** **********************************	.8660 1.2990 1.7820 8.4409 6.1614 6.8819 6.1661 7.7942 10.8928 7.2678 10.9077 14.6866 12.86846 24.7278 15.8884 28.0828 80.7768 18.7313 28.0969 87.4626 22.8928 88.6884 44.7846 6	-8660 1-2990 1-7820 2-1661 8-4409 5-1614 6-8819 8-6024 5-1961 7-7942 10-8928 12-9908 7-2678 10-9017 14-6856 18-1696 9-6568 14-4865 24-778 24-1421 12-868 18-6465 24-778 89-9091 16-884 28-0826 87-4626 46-8282 22-8928 88-5884 44-7846 56-9808	*** **	*** **

To find the Areas of Circles and Spheres.

Buln.—Square the diameter, and take the products from the subjoined Table, as directed in page 66.

To find the circumference of a circle, take the products of the diameter only.

0	7864 1.6708 2.3562 8.1416 8.9270 4.7124 5.4978 6.2882 7.0684 8.1416 6.2882 9.4248 12.5664 15.7080 18.8496 21.9912 25.1828 28.2744	8-1416 6-2832 9-4248 12-5664 15-7080 18-8496 21-9912 25-1328 28-2744
®	6.288: 25.1828	25-182
7	5.4978 21.9912	21.9912
9	4·7124 18·8496	18-8496
10	8-9270 15-7080	15-7080
4	8·1416 12·5664	12.5664
m	2.3562 9.4248	9-4248
a	1.5708	6.2882
-	.7854 8·1416	8.1416
	Area of Circle	Circumference of Circle

To find the Areas of the Regular Bodies.

Burn. ... Square the length of one of the edges, and take the products from the subjoined Table, as directed in page 66.

Tetrahedron 1.7320 8.4641 5.1962 6.9282 8.6608	10.8928			o
17.8206 108.2287 48.8018	20.7846 128.8744 51.9615	12.1244 42.0000 24.2487 144.5201 60.6218	18.8664 48.0000 27.7128 166.1668 69.2820	16-6886 64-0000 81-1769 186-8116 77-9428

To find the Solidities of the Regular Bodies.

RULE.—Cube the length of one of the edges, and take the products from the subjoined Table, as directed in page 66.

	-	.01	69	4	10	•	7	œ	0
Tetrahedron Hexahedron Octahedron Dodecahedron Icosahedron	.1178 1.0000 .4714 7.6681 2.1817	-2857 2-0000 -9428 15-8262 4-8634	-8536 8-0000 1-4142 22-9894 6-5451	-4714 4-0000 1-8856 80-6525 8-7268	5898 5.0000 2.8570 88.3156 10.9085	.7071 6.0000 2.8284 45.9787 18.0901	.8250 7.0000 8.2998 58.6418 15.2718	.9428 8.0000 8.7712 61.8050 17.4585	1.0607 9.0000 4.2426 68.9681 19.6852

TABLE of Squares, Cubes, Square Roots, and Cube Roots.

	-		-		
Number.	Square.	Cube.	Square Root.	Cube Root.	Number.
1	. 1	1	1.0	1.0	1
2	4	8	1.4142136	1.2599210	2
8	. 9	_ 27	1.7320508	1.4422496	8
4	16	64	2.0	1.5874011	4
5	25	125	2.2360680	1.7099759	5
6	86	216	2.4494897	1.8171206	6
7	49	848	2.6457518	1.9129812	7
8	64	512	2.8284271	2.0	8
9	81	729	8.0	2.0800837	9
10	100	1000	8.1622777	2.1544847	10
11	121	1831	3.3166248	2.2239801	11
12	144	· 1728	3.4641016	2.2894286	12
18	169	2197	3.6055518	2.3518347	18
14	196	2744	8.7416574	2.4101422	14
15	225	8875	3.8729833	2.4662121	· 15
16	256	4096	4.0	2.5198421	16
17	289	4918	4.1231056	2.5712816	17
18	824	5832	4.2426407	2.6207414	18
19	861	6859	4.3588989	2.6684016	19
20	400	8000	4.4721860	2.7144177	20
21	441	9261	4.5825757	2.7589248	21
22	484	10648	4.6904158	2.8020893	22
23	529	12167	4.7958815	2.8488670	23
24	576	13824	4.8989795	2.8844991	24
25	625	15625	5.0	2.9240177	25
26	676	17576	5.0990195	2.9624960	26
27	729	19683	5.1961524	8.0	27
28	784	21952	5.2915026	8-0365889	28
29	841	24389	5.8851648	3.0723168	29
30	900	27000	5.4772256	8-1072825	80
81	961	29791	5.5677644	8.1418806	81
82	1024	82768	5.6568542	8.1748021	82
88	1089	85937	5.7445626	8.2075848	. 88
84	1156	89804	5.8309519	8.2896118	84
85	1225	42875	5.9160798	8.2710668	85
86	1296	46656	6.0	8.8019272	86
87	1369	50658	6.0827625	8.8322218	87
88	1444	54872	6.1644140	8.8619754	88
89	1521	59319	6.2449980	8.8912114	89
40	1600	64000	6.8245558	8.4199519	40

Number.	Square.	Cabe.	Square Root.	Cube Root.	Number.
41	1681	68921	6.4031242	8-4482172	41
42	1764	74088	6.4807407	8.4760266	42
48	1849	79507	6.5574885	8.5033981	43
44	1986	85184	6.6382496	8.5303483	44
45	2025	91125	6.7082039	8.5568933	45
46	2116	97886	6.7828800	8.5830479	46
47	2209	108828	6.8556546	8.6088261	47
48	2304	110592	6.9282032	8.6342411	48
49	2401	117649	7.0	8.6593057	49
50	2500	125000	7-0710678	8.6840314	50
51	2601	182651	7-1414284	3.7084298	51
52	2704	140608	7.2111026	8.7325111	52
58	2809	148877	7.2801099	8.7562858	58
5 4	2916	157464	7.8184692	8.7797631	54
5 5	8025	166875	7.4161985	8·8029525 ·	55
56	8186	175616	7-4888148	8.8258624	56
57	8249	185198	7.5498844	8.8485011	57
58	8864	195112	7-6157781	8.8708766	58
59	8481	205879	7-6811 4 57	8.8929965	59
60	8600	216000	7.7459667	3·9148676	60
61	8721	226981	7.8102497	3.9364972	61
62	8844	288328	7.8740079	8.9578915	62
68	8969	250047	7.9872539	8.9790571	63
64	4096	262 144	8.0	4.0	64
65	42 25	274625	8-0622577	4.0207256	65
66	4856	287496	8.1240384	4.0412401	66
67	4489	800768	8.1858528	4.0615480	67
68	4624	81 44 82	8.2462118	4.0816551	68
69	4761	828509	8.8066289	4.1015661	69
70	4900	848000	8.8666008	4.1212853	70
71	5041	857911	8-4261498	4.1408178	71
72	5184	878248	8.4852814	4.1601676	72
78	5829	889017	8.5440087	4.1793392	78
74	5476	405224	8.6028258	4.1983364	74
75	5625	4 21875	8.6602540	4.2171688	75
76	5776	488976	8.7177979	4.2358286	76
77	5929	456533	8.7749644	4.2543210	77
78	6084	474552	8.8317609	4.2726586	78
79	6241	498089	8.8881944	4.2908404	79
80	6400	512000	8.9442719	4.3088695	80

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
81	6561	- 531441	9-0	4.3267487	81
82	6724	551368	9.0553851	4.3444815	82
83	6889	571787	9.1104336	4.3620707	83
84	7056	592704	9-1651514	4.3795191	84
85	7225	614125	9-2195445	4.3968296	85
86	7396	636056	9-2786185	4.4140049	86
87	7569	658503	9.3273791	4.4310476	87
88	7744	681472	9.3808315	4.4479602	88
89	7921	704969	9.4339811	4.4647451	89
90	8100	729000	9.4868330	4.4814047	90
91	8281	753571	9.5393920	4.4979414	91
92	8464	778688	9.5916630	4.5143574	92
93	8649	804357	9.6436508	4.5306549	93
94	8836	830584	9.6953597	4.5468359	94
95	9025	857375	9.7467943	4.5629026	95
96	9216	884736	9.7979590	4.5788570	96
97	9409	912673	9.8488578	4.5947009	97
98	9604	941192	9.8994949	4.6104363	98
99	9801	970299	9.9498744	4.6260650	99
100	10000	1000000	10.0	4.6415888	100
101	10201	1030301	10.0498756	4.6570095	101
102	10404	1061208	10-0995049	4.6723287	102
103	10609	1092727	10.1488916	4.6875482	103
104	10816	1124864	10-1980390	4.7026694	104
105	11025	1157625	10.2469508	4.7176940	105
106	11236	1191016	10.2956301	4.7326235	106
107	11449	1225043	10.3440804	4.7474594	107
108	11664	1259712	10-3923048	4.7622032	108
109	11881	1295029	10-4403065	4.7768562	109
110	12100	1331000	10-4880885	4.7914199	110
111	12321	1867631	10-5856588	4.8058955	111
112	12544	1404928	10.5830052	4.8202845	112
113	12769	1442897	10.6301458	4.8345881	113
114	12996	1481544	10-6770783	4.8488076	114
115	13225	1520875	10.7238053	4.8629442	115
116	13456	1560896	10.7703296	4.8769990	116
117	13689	1601613	10.8166538	4.8909732	117
118	13924	1643032	10.8627805	4.9048681	118
119	14161	1685159	10-9087121	4.9186847	119
120	14400	1728000	10.9544512	4.9324242	120

Number.	Square.	Cabo.	Square Root.	Cube Root.	Number
121	14641	1771561	11-0	4.9460874	121
122	14884	1815848	11.0453610	4.9596757	122
123	15129	1860867	11-0905365	4.9781898	123
124	15376	1906624	11.1355287	4.9866310	124
125	15625	1953125	11.1803399	5.0	125
126	15876	2000376	11-2249722	5.0132979	126
127	16129	2018383	11-2691277	5.0265257	127
128	16384	2097152	11.3137085	5.0396842	128
129	16641	2146689	11.3578167	5.0527743	129
130	16900	2197000	11.4017543	5.0657970	130
131	17161	2248091	11-4455231	5.0787531	131
132	17424	2299968	11.4891253	5.0916434	132
133	17689	2352637	11.5325626	5.1044687	133
134	17956	2406104	11.5758369	5.1172299	134
185	18225	2460375	11-6189500	5.1299278	135
186	18496	2515456	11-6619038	5.1425632	136
187	18769	2571353	11.7046999	5.1551367	137
138	19044	2628072	11.7473401	5.1676493	138
139	19321	2685619	11.7898261	5.1801015	139
140	19600	2744000	11.8321596	5.1924941	140
141	19881	2803221	11.8743422	5.2048279	141
142	20164	2863288	11-9163753	5.2171034	142
143	20449	2924207	11.9582607	5.2293215	143
144	20736	2985984	12.0	5.2414828	144
145	21025	3048625	12-0415946	5.2535879	145
146	21316	3112136	12.0830460	5.2656374	146
147	21609	3176523	12.1243557	5.2776321	147
148	21904	3241792	12-1655251	5.2895725	148
149	22201	3307949	12.2065556	5:3014592	149
150	22500	3375000	12-2474487	5.3132928	150
151	22801	3442951	12.2882057	5.3250740	151
152	23104	3511808	12-3288280	5.3368033	152
153	23409	8581577	12.3693169	5.8484812	153
154	23716	3652264	12-4096736	5.3601084	154
155	24025	3723875	12-4498996	5.3716854	155
156	24336	3796416	12.4899960	5.3832126	156
157	24649	3869893	12.5299641	5.8946907	157
158	24964	3944812	12.5698051	5.4061202	158
159	25281	4019679	12.6095202	5.4175015	159
160	25600	4096000	12.6491106	5.4288352	160

Mumber.	Square.	Cube.	Square Root.	Cube Root.	Number
161	25921	4173281	12.6885775	5.4401218	161
162	26244	4251528	12.7279221	5.4513618	162
168	26569	4330747	12.7671458	5.4625556	163
164	26896	4410944	12.8062485	5.4787037	164
165	27225	4492125	12.8452326	5.4848066	165
166	27556	4574296	12-8840987	5.4958647	166
167	27889	4657468	12.9228480	5.5068784	167
168	28224	4741632	12.9614814	5·5178484	168
169	28561	4826809	18.0	5.5287748	169
170	28900	4918000	18.0384048	5.5396583	170
171	29241	5000211	18-0766968	5·5504991	171
172	29584	5088448	13.1148770	5.5612978	172
178	29929	5177717	13.1529464	5.5720546	178
174	80276	5268024	13.1909060	5.5827702	174
175	80625	5859875	13.2287566	5.5984447	175
176	80976	5451776	18-2664992	5.6040787	176
177	81829	55 4 52 33	13.3041847	5.6146724	177
178	81684	5639752	18.8416641	5.6252268	178
179	82041	5785889	18.8790882	5.6857408	179
180	82400	5832000	18-4164079	5.6462162	180
181	82761	5929741	18-4586240	5.6566528	181
182	83124	6028568	13.4907876	5.6670511	182
188	33 489	6128487	13.5277498	5.6774114	188
184	83856	6229504	18.5646600	5.6877840	184
185	84225	6331625	18-6014705	5.6980192	185
186	84596	643 4856	13 6381817	5.7082675	186
187	34969	6539203	18-6747948	5.7184791	187
188	85344	6644672	18.7118092	5.7286543	188
,189	85721	6751269	18.7477271	5.7887936	189
190	86100	6859000	13.7840488	5.7488971	190
191	86481	6967871	18.8202750	5.7589652	191
192	36864	7077888	13.8564065	5.7689982	192
193	87249	7189097	13.8924440	5.7789966	193
194	87686	7301384	18.9283883	5.7889604	194
195	88025	7414875	18-9642400	5.7988900	195
196	88416	7529536	14.0	5.8087857	196
197	38809	7645878	14.0356688	5.8186479	197
198	89204	7762392	14.0712473	5.8284767	198
199	89601	7880599	14-1067860	.5.8382725	199
200	40000	8000000	14.1421856	5.8480855	200

Number.	Square.	Cube.	Square Root.	Cube Root.	Number.
201	40401	8120601	14-1774469	5.8577660	201
202	40804	8242408	14-2126704	5.8674643	202
208	41209	8365427	14.2478068	5.8771307	208
204	41616	8489664	14.2828569	5.8867653	204
205	42025	8615125	14.3178211	5.8963685	205
206	42436	8741816	14.8527001	5.9059406	206
207	42849	8869748	14.3874946	5.9154817	207
208	43264	8998912	14.4222051	5.9249921	208
209	43681	9129329	14.4568323	5.9344721	209
210	44100	9261000	14-4913767	5.9439220	210
211	44521	9893931	14.5258390	5.9538418	211
212	44944	9528128	14.5602198	5.9627820	212
213	45 36 9	9668597	14.5945195	5.9720926	213
214	4 5796	9800344	14.6287388	5.9814240	214
215	46225	9938375	14-6628783	5-9907264	215
216	46 656	10077696	14-6969385	6.0	216
217	47089	10218318	14.7809199	6.0092450	217
218	47524	10360282	14.7648231	6.0184617	218
219	47961	10508459	14'7986486	6.0276502	219
220	48400	10648000	14.8323970	6.0368107	220
221	48841	10798861	14.8660687	6.0459435	221
222	49284	10941048	14.8996644	6.0550489	222
228	49729	11089567	14.9831845	6.0641270	228
224	50176	11289424	14.9666295	6.0781779	224
225	50625	11390625	15.0	6.0822020	225
226	51076	11543176	15-0332964	6.0911994	226
227	51529	11697083	15.0665192	6.1001702	227
228	51984	11852352	15-0996689	6.1091147	228
229	52441	12008989	15.1327460	6.1180332	229
280	52900	12167000	15.1657509	6.1269257	280
281	53361	12326391	15-1986842	6.1357924	281
282	53824	12487168	15.2315462	6.1446387	232
238	54289	12649337	15.2648375	6.1584495	233
284	54756	12812904	15.2970585	6.1622401	234
285	55225	12977875	15.3297097	6.1710058	235
286	55696	18144256	15-8622915	6.1797466	236
287	56169	1331 20 53	15.3948043	6·1884628	237
288	56644	13481272	15.4272486	6.1971544	288
289	57121	13651919	15.4596248	6.2058218	239
240	57600	18824000	15.4919884	6·21 4465 0	240

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
241	58081	13997521	15-5241747	6.2230843	241
242	58564	14172488	15.5563492	6.2316797	242
243	59049	14348907	15.5884578	6.2402515	243
244	59586	14526784	15-6204994	6.2487998	244
245	60025	14706125	15-6524758	6.2573248	245
246	60516	14886936	15-6843871	6.2658266	246
247	61009	15069228	15.7162336	6.2743054	247
248	61504	15252992	15.7480157	6.2827613	248
249	62001	15438249	15.7797338	6.2911946	249
250	62500	15625000	15.8113883	6.2996053	250
251	63001	15813251	15.8429795	6.3079935	251
252	63504	16003008	15.8745079	6-8163596	252
253	64009	16194277	15.9059787	6.3217035	253
254	64516	16387064	15-9373775	6.8330256	254
255	65025	16581375	15-9687194	6.3413257	255
256	65536	16777216	16.0	6.3496042	256
257	66049	16974593	16.0312195	6.3578611	257
258	66564	17173512	16.0623784	6.3660968	258
259	67081	17373979	16.0934769	6.3743111	259
260	67600	17576000	16.1245155	6.3825043	260
261	68121	17779581	16-1554944	6.3906765	261
262	68644	17984728	16.1864141	6.3988279	262
263	69169	18191447	16.2172747	6.4069585	263
264	69696	18399744	16.2480768	6.4150687	264
265	70225	18609625	16.2788206	6.4231583	265
266	70756	18821096	16.3095064	6.4312276	266
267	71289	19034163	16:3401346	6.4392767	267
268	71824	19248832	16.3707055	6.4473057	268
269	72361	19465109	16-4012195	6.4553148	269
270	72900	19683000	16.4316767	6.4633041	270
271	73441	19902511	16-4620776	6.4712736	271
272	73984	20123648	16.4924225	6.4792236	272
278	74529	20346417	16.5227116	6.4871541	273
274	75076	20570824	16.5529454	6.4950653	274
275	75625	20796875	16.5831240	6.5029572	275
276	76176	21024576	16-6132477	6.5108300	276
277	76729	21253933	16-6433170	6.5186839	277
278	77284	21484952	16-6733320	6.5265189	278
279	77841	21717639	16.7032931	6.5343351	279
280	78400	21952000	16.7332005	6.5421326	280

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
281	78961	22188041	16.7630546	6.5499116	281
282	79524	22425768	16.7928556	6.5576722	282
283	80089	22665187	16-8226038	6.5654144	283
284	80656	22906304	16.8522995	6.5781385	284
285	81225	23149125	16.8819480	6.5808443	285
286	81796	23393656	16-9115845	6.5885323	286
287	82369	23689903	16-9410748	6.5962023	287
288	82944	23887872	16.9705627	6.6038545	288
289	83521	24137569	17.0	6-6114890	289
290	84100	24389000	17-0293864	6.6191060	290
291	84681	24642171	17-0587221	6.6267054	291
292	85264	24897088	17.0880075	6.6342874	292
293	85849	25153757	17-1172428	6.6418522	293
294	86436	25412184	17-1464282	6.6493998	294
295	87025	25672375	17-1755640	6.6569302	295
296	87616	25934336	17.2046505	6-6644437	296
297	88209	26198073	17.2336879	6.6719403	297
298	88804	26463592	17-2626765	6.6794200	298
299	89401	26730899	17.2916165	6.6868831	299
800	90000	27000000	17-3205081	6.6943295	300
801	90601	27270901	17-3493516	6.7017593	301
302	91204	27543608	17.3781472	6.7091729	302
303	91809	27818127	17.4068952	6.7165700	303
304	92416	28094464	17.4355958	6.7239508	304
805	93025	28372625	17.4642492	6.7313155	305
306	93636	28652616	17.4928557	6.7386641	806
307	94249	28934443	17.5214155	6.7459967	307
808	94864	29218112	17.5499288	6.7533134	808
809	95481	29503629	17-5783958	6.7606143	309
310	96100	29791000	17-6068169	6.7678995	310
311	96721	30080231	17-6351921	6.7751690	311
812	97344	30371328	17-6635217	6.7824229	312
313	97969	30664297	17-6918060	6.7896613	318
314	98596	80959144	17.7200451	6.7968844	314
315	99225	31255875	17.7482393	6.8040321	815
316	99856	31554496	17.7763888	6.8112847	816
817	100489	31855013	17-8044938	6.8184620	317
818	101124	32157432	17.8325545	6.8256242	318
819	101761	82461759	17.8605711	6.8327714	319
320	102400	32768000	17-8885438	6.8399037	320

Number.	Square.	Cube.	Square Root.	Cube Root.	Number.
821	108041	88076161	17-9164729	6.8470213	821
822	103684	88388248	17-9443584	6.8541240	822
323	104829	33698267	17.9722008	6.8612120	823
324	104976	84012224	18.0	6.8682855	824
825	105625	84328125	18-0277564	6.8758448	825
826	106276	84645976	18-0554701	6.8823888	826
827	106929	84965788	18.0831418	6 8894188	827
828	107584	85287552	18-1107708	6·8964345	828
829	108241	85611289	18.1383571	6.9084859	329
880	108900	85987000	18.1659021	6.9104282	880
881	109561	86264691	18-1934054	6.9173964	881
832	110224	86594368	18-2208672	6.9243556	832
888	110889	86926037	18-2482876	6.9313008	838
834	111556	87259704	18.2756669	6.9382321	384
885	112225	87595875	18-3039052	6.9451496	835
886	112896	87933056	18-3303028	6.9520533	836
387	113569	38272753	18-3575598	6.9589484	387
888	114244	88614472	18.3847763	6.9658198	888
83 0	114921	38958219	18-4119526	6.9726826	889
840.	115600	89304000	18-4390889	6-9795321	340
841	116281	89651821	18-4661858	6.9863681	841
842	116964	40001688	18.4932420	6.9931906	842
843	117649	40353607	18.5202592	7.0	843
844	118336	40707584	18.5472370	7.0067962	344
· 845	119025	41063625	18-5741756	7.0135791	345
846	119716	41421736	18-6010752	7.0203490	846
847	120409	41781923	18-6279360	7.0271058	847
348	121104	42144192	18-6547581	7.0338197	848
849	121801	42508549	18-6815417	7.0405806	849
850	122500	42875000	18.7082869	7.0472987	850
851	128201	48243551	18.7849940	7.0540041	851
852	123904	43614208	18.7616630	7.0606967	852
853	124609	43986977	18.7882942	7.0678767	853
854	125816	44861864	18-8148877	7.0740440	854
3 5 5	126025	44738875	18-8414437	7.0806988	355
856	126786	45118016	18-8679628	7.0873411	856
857	127449	45499293	18-8914436	7.0939709	857
858	128164	45882712	18-9208879	7.1005885	858
859	128881	46268279	18-9472953	7.1071937	859
860	129600	46656000	18-9786660	7.1187866	860

Number.	Square.	Cabe.	Square Root.	Cube Root.	Number
361	130321	47045881	19-0	7-1203674	361
362	131044	47437928	19-0262976	7.1269360	362
363	131769	47832147	19-0525589	7.1334925	863
364	132496	48228544	19-0787840	7.1400370	364
365	133225	48627125	19.1049732	7.1465695	365
366	133956	49027896	19-1311265	7.1530901	366
367	134689	49430863	19-1572441	7.1595988	367
868	135424	49836032	19.1833261	7.1660957	368
369	136161	50243409	19-2093727	7.1725809	369
370	136900	50653000	19-2353841	7-1790544	870
371	137641	51064811	19-2613603	7.1855162	371
872	138384	51478848	19.2873015	7.1919663	872
373	139129	51895117	19-3132079	7.1984050	373
374	139876	52313624	19-3390796	$7 \cdot 2048322$	374
375	140625	52734375	19-3649167	7.2112479	375
376	141376	53157376	19-3907194	7.2176522	376
377	142129	53582633	19-4164878	7.2240450	377
378	142884	54010152	19.4422221	7.2304268	378
879	143641	54439939	19-4679223	7.2367972	379
380	144400	54872000	19-4935887	7.2431565	380
381	145161	55306341	19-5192213	7.2495045	381
382	145924	55742968	19-5448203	7.2558415	382
383	146689	56181887	19-5703858	7.2621675	383
384	147456	56623104	19.5959179	7.2684824	384
385	148225	57066625	19-6214169	7.2747864	385
886	148996	57512456	19.6468827	7.2810794	886
887	149769	57960603	19-6723156	7.2873617	387
388	150544	58411072	19-6977156	7:2936330	388
389	151321	58863869	19.7230829	7.2998936	389
890	152100	59319000	19.7484177	7.3061436	390
391	152881	59776471	19-7737199	7.3123828	391
392	153664	60236288	19-7989899	7.3186114	392
393	154449	60698457	19.8242276	7.3248295	393
394	155236	61162984	19.8494332	7.8310369	394
895	156025	61629875	19.8746069	7-3372339	395
896	156816	62099136	19.8997487	7.8484205	396
897	157609	62570773	19-9248588	7.3495966	397
398	158404	63044792	19.9499373	7.3557624	398
399	159201	63521199	19-9749844	7.8619178	399
400	160000	64000000	20.0	7-3680630	400

Number.	Square.	Cube.	Square Root.	Cube Root.	Number.
401	160801	64481201	20.0219844	7.8721979	401
402	161604	64964808	20.0499377	7.8803227	402
408	162409	65450827	20.0748599	7.3864373	403
404	163216	65939264	20.0997512	7.8925419	404
405	164025	66430125	20.1246118	7.3986363	405
406	164836	. 66923416	20-1494417	7.4047206	406
407	165649	67419143	20.1742410	7.4107950	407
408	166464	67917312	20.1990099	7.4168595	408
409	167281	68417929	20.2287484	7.4229142	409
410	168100	68921000	20.2484567	7.4289589	410
411	168921	69426531	20 2781849	7.4849938	411
412	169744	69984528	20.2977831	7.4410189	412
418	170569	70444997	20.8224014	7.4470842	418
414	171396	70957944	20.8469899	7.4530399	414
415	172225	71478875	20.8715488	-7·4590359	415
416	173056	71991296	20-3960781	7.4650223	416
417	178889	72511713	20.4205779	7.4709991	417
418	174724	73034632	20.4450483	7.4769664	418
419	175561	73560059	20.4694895	7.4829242	419
42 0	176400	74088000	20.4989015	7.4888724	420
421	177241	74618461	20.5182845	7.4948113	421
422	178084	75151448	20.5426486	7.5007406	422
428	178929	75686967	20.5669638	7.5066607	428
424	179776	76225024	20.5912603	7.5125715	424
425	180625	76765625	20.6155281	7.5184730	425
426	181476	77308776	20.6897674	7.5243652	426
427	182 8 29	77854483	20.6639783	7.5802482	427
428	1831 8 4	78402752	20.6881609	7.5361221	428
429	184041	78953589	20.7128152	7.5419867	429
430	184900	79507000	20.7864414	7.5478428	480
431	185761	80062991	20.7695895	7.5536888	431
482	186624	80621568	20.7846097	7.5595263	432
433	187489	81182737	20.8086520	7.5653548	433
434	188356	81746504	20.8326667	7.5711743	484
485	189225	82312875	20.8566336	7.5769849	435
486	190096	82881856	20.8806130	7.5827865	436
487	190969	83453453	20.9045450	7.5885793	437
438	191844	84027672	20-9284495	. 7.5943683	488
489	192721	84604519	20.9528268	7.6001385	439
440	198600	85184000	20.9761770	7.6059049	440

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
441	194481	85766121	21.0	7:6116626	441
442	195864	86850888	21.0237960	7-6174116	442
448	196249	86988307	21.0475652	7-6281519	443
444	197136	87528384	21.0718075	7.6288837	444
445	198025	88121125	21.0950281	7.6846067	445
446	198916	88716536	21-1187121	7.6408218	446
447	199809	89814623	21.1428745	7.6460272	447
448	200704	89915892	21-1660105	7.6517247	448
449	201601	90518849	21-1896201	7.6574138	449
450	202500	91125000	21.2182084	7-6630943	450
451	203401	91783851	21-2367606	7.6687665	451
452	204804	92345408	21.2602916	7·6744808	452
453	205209	92959677	21-2837967	7.6800857	453
454	206116	93576664	21-3072758	7.6857328	454
455	207025	94196875	21.3807290	7-6918717	455
456	207936	94818816	21.8541565	7.6970028	456
457	208849	95448998	21.3775583	7.7026246	457
458	209764	96071912	21.4009346	7.7082888	458
459	210681	96702579	21.4242858	7.7138448	459
460	211600	97836000	21.4476106	7.7194426	460
461	212521	97972181	21-4709106	7.7250825	461
462	213444	98611128	21.4941853	7.7806141	462
463	214869	99252847	21.5174348	7.7861877	468
464	215296	99897344	21.5406592	7.7417.532	464
465	216225	100544625	21.5638587	7.7478109	465
466	217156	101194696	21.5870381	7.7528606	466
467	218089	101847568	21.6191828	7.7584028	467
468	219024	102503282	21.6333077	7.7639861	468
469	219961	103161709	21.6564078	7.7694620	469
470	220900	103823000	21.6794884	7.7749801	470
471	221841	104487111	21.7025844	7.7804904	471
472	222784	105154048	21.7255610	7.7859928	472
478	228729	105828817	21.7485632	7.7914875	473
	224676	106496424	21.7715411	7.7969745	474
475	225625	107171875	21.7944947	7.8024588	475
476	226576	107850176	21.8174242	7.8079244	476
477	227529	108531333	21.8403297	7.8133892	477
478	228484	109215852	21.8632111	7.8188456	478
479	229141	109902239	21.8860686	7.8242942	479
480	230400	110592000	21.9089028	7.8297858	480

Number.	Square.	Cube.	Square Root.	Cube Root.	Number.
481	231861	111284641	21.9317122	7.8351688	481
482	232324	111980168	21.9544984	7.8405949	482
483	233289	112678587	21.9772610	7.8460134	483
484	234256	113379904	22.0	7·8514244	484
485	235225	114084125	22-0227155	7-8568281	485
486	286186	114791256	22.0454077	7.8622242	486
487	287169	115501303	22.0680765	7.8676180	487
488	288144	116214272	22.0907220	7.8729944	488
489	239131	116930169	22.1133444	7 8783684	489
490	240120	117649000	22.1359436	7.8837352	490
491	241081	118370771	22.1585198	7.8890946	491
492	242064	119095488	22.1810730	7·8944468	492
493	248049	119828157	22.2036033	7.8997917	493
494	244 036	120553784	22.2261108	7.9051294	494
495	2450 25	121287375	22.2485955	7.9104599	495
496	246016	122023936	22·2710575	7.9157832	496
497	247009	122763473	22.2934968	7.9210994	497
498	248004	123505992	22.8159136	7.9264085	498
499	249001	124251499	22.8383079	7.9317104	499
500	250000	125000000	22.3606798	7.9370053	500
501	251001	125751501	22.3830293	7.9422932	501
502	252004	126406008	22.4053565	7·9 1 75789	502
503	253009	127263527	22.4276615	7.9528477	503
504	254016	128024064	22.4499448	7.9581144	504
505	255025	128787625	22.4722051	7.9683743	505
506	256036	129554216	22.4944438	7.9686271	506
507	257049	130323843	22.5166605	7.9788781	507
508	258064	131096512	22.5388553	7.9791122	508
509	259081	131872229	22.5610283	7.9843444	509
510	260100	182651000	22.5831796	7.9895697	510
511	261121	183432831	22.6058091	7-9947883	511
512	262144	134217728	22.6274170	8-0	512
513	263169	135005697	22.6495033	8.0052049	513
514	264196	135796744	22.6715681	8.0104032	514
515	265225	186590875	22.6986114	8.0155946	515
516	266256	137388096	227156334	8.0207794	516
517	267289	138188418	22.7376340	8.0259574	517
518	268324	138991832	22.7596134	8.0311287	518
519	269861	189798859	22.7815715	8.0362985	519
520	270400	140608000	22.8035085	8.0414515	520

Mumber.	Square.	Cube.	Square Root.	Cube Root.	Number
521	271441	141420761	22.8254244	8.0466080	521
522	272484	142286648	22.8478198	8.0517479	522
528	278529	148055667	22.8691983	8.0568862	528
524	274576	143877824	22.8910463	8.0620180	524
525	275625	144708125	22.9128785	8.0671482	525
526	276676	145581576	22-9846899	8.0722620	526
527	277729	146868183	22.9564806	8.0778743	527
528	278784	147197952	22.9782506	8.0824800	528
529	279841	148085889	28-0	8-0875794	529
580	280900	148877000	28-0217289	8.0926728	530
581	281961	149721291	23.0484872	8.0977589	581
582	283024	150568768	23-0651252	8.1028890	582
583	284089	151419437	23.0867928	8.1079128	583
534	285156	152278304	23.1084400	8.1129803	534
585	28 6225	153180375	28.1300670	8.1180414	535
586	287296	153990656	23-1516788	8-1280962	586
537	288869	154854153	23.1732605	8.1281447	537
588	289444	155720872	23.1948270	8.1831870	538
589	290521	156590819	23-2168735	8.1882280	. 589
540	291600	157464000	23.2379001	8 1482529	540
541	292681	158840421	23-2594067	8.1482765	541
542	293764	159220088	23.2808935	8.1582989	542
543	294849	160103007	23.8028604	8.1588051	543
544	295936	160989184	23.8288076	8.1688102	544
545	297025	161878625	28.8452851	8.1683092	545
546	298116	162771886	23.8666429	8-1788020	546
547	299209	163667323	23.3880811	8.1782888	547
548	800304	164566592	23.4098998	8.1882695	548
54 9	801401	165469149	23.4307490	8.1882441	549
550	802500	166875000	23.4520788	8.1982127	550
551	808601	167284151	23.4738892	8-1981753	551
552	804704	168196608	23-4946802	8-2081819	552
5 53	805809	169112377	23.5159520	8.2080825	553
554	806916	170081464	23.5372046	8.2180271	554
555	808025	170953875	28.5584880	8.2179657	555
556	309186	171879616	23-5796522	8.2228985	· 5 56
557	810249	172808698	23.6008474	$8 \cdot 2278254$	557
558	811364	178741112	23.6220236	8.2827463	558
559	812481	174676879	23.6431808	8:2876614	559
560	818600	175616000	23.6643191	8 2425706	560

Number.	Square.	Cube.	Square Root.	Cube Root.	Number.
561	814721	176558481	23-6854386	8-2474740	561
562	315844	177504328	28.7065392	8-2523715	562
568	316969	178458547	23.7276210	8.2572683	563
564	318096	179406144	23-7486842	8.2621492	564
565	319225	180362125	23.7697286	8.2670294	565
566	320356	181321496	23.7907545	8.2719039	566
567	321489	182284263	23.8117618	8.2767726	567
568	322624	183250432	23.8327506	8.2816355	568
569	323761	184220009	23.8537209	8.2864928	569
570	324900	185193000	23.8746728	8.2913444	570
571	326041	186169411	23.8956063	8.2961903	571
572	327184	187149248	23.9165215	8.3010304	572
573	328329	188132517	23.9374184	8.3058651	573
574	329476	189119224	23.9582971	8.3106941	574
575	830625	190109375	23-9791576	8.3155175	575
576	331776	181102976	24.0	8.3203353	576
577	332929	182100033	24.0208243	8.3251475	577
578	334084	183100552	24.0416306	8.3299542	578
579	335241	184104539	24.0624188	8.3347553	579
580	336400	195112000	24.0831891	8-3395509	580
581	387561	196122941	24-1039416	8.3443410	581
582	338724	197137368	-24-1246762	8.3491256	582
583	339889	198155287	24.1453929	8.3539047	583
584	341056	199176704	24.1660919	8.3586784	584
585	342225	200201625	24.1867732	8.3634466	585
586	343396	201230056	24.2074369	8.3682095	586
587	344569	202262003	24.2280829	8.3729668	587
588	345744	203297472	24.2487113	8-3777188	588
589	346921	204336469	24.2693222	8.3824653	589
590	348100	205379000	24.2899156	8.3872065	590
591	349281	206425071	24.3104916	8.3919423	591
592	350464	207474688	24.3310501	8.3966729	592
598	351649	208527857	24.3515913	8.4013981	593
594	352836	209584584	24.8721152	8.4061180	594
595	354025	210644875	24.3926218	8.4108326	595
596	355216	211708786	24.4181112	8-4155419	596
597	356409	212776173	24-4335834	8.4202460	597
598	357604	213847192	24.4540385	8.4249448	598
599	358801	214921799	24-4744765	8.4296383	599
600	360000	216000000	24.4948974	8.4343267	600

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
601	361201	217081801	24.5153013	8-4390098	601
602	362404	218167208	24.5356883	8-4436877	602
603	363609	219256227	24.5560583	8-4483605	603
604	364816	220348864	24.5764115	8.4530281	604
605	366025	221445125	24.5967478	8.4576906	605
606	367236	222545016	24-6170678	8.4623479	606
607	368449	223648543	24.6373700	8.4670000	607
608	869664	224755712	24.6576560	8.4716471	608
609	370881	225866529	24.6779254	8.4762892	609
610	372100	226981000	24-6981781	8.4809261	610
611	373321	228099181	24-7184142	8-4855579	611
612	874544	229220928	24.7386338	8-4901848	612
613	375769	230346397	24.7588368	8-4948065	613
614	376996	231475544	24.7790234	8.4994233	614
615	378225	232608375	24.7991935	8.5040350	615
616	379456	233744896	24.8193478	8-5086417	616
617	380689	234885113	24.8394847	8.5132435	617
618	381924	236029032	24.8596058	8.5178403	618
619	883161	237176659	24.8797106	8.5224321	619
620	384400	238328000	24.8997992	8.5270189	620
621	385641	239483061	24-9198716	8-5316009	621
622	386884	240641848	24.9399278	8.5361780	622
628	388129	241804367	24.9599679	8.5407501	623
624	389376	242970624	24.9799920	8.5453173	624
625	390625	244140625	25.0	8.5498797	625
626	391876	245314376	25-0199920	8.5544372	626
627	393129	246491883	25.0399681	8.5589899	627
628	394384	247678152	25.0599282	8.5635377	628
629	395641	248858189	25.0798724	8.5680807	629
630	396900	250047000	25.0998008	8.5726189	630
631	898161	251289591	25-1197134	8.5771523	631
632	899424	252435968	25.1396102	8.5816809	-632
633	400689	258636137	25-1594913	8.5862047	633
634	401956	254840104	25-1793566	8.5907238	634
635	403225	256047875	25.1992063	8.5952380	635
636	404496	257259456	25-2190404	8.5997476	636
637	405769	258474853	25.2388589	8.6042525	637
638	407044	259694072	25.2586619	8.6087526	638
639	408321	260917119	25.2784493	8-6132480	639
640	409600	262144000	25-2982213	8-6177388	640

	Square.	Cube.	Square Root.	Cube Root.	Number
641	410881	263374721	25-3179778	8-6222248	641
642	412164	264609288	25-3377189	8.6267063	642
643	413449	265847707	25-3574447	8.6311830	643
644	414736	267089984	25.3771551	8.6356551	644
645	416025	268336125	25.3968502	8.6401226	645
646	417316	269586136	25.4165301	8.6445855	646
647	418609	270840023	25-4361947	8.6490437	647
648	419904	272097792	25.4558441	8.6584974	648
649	421201	273359449	25-4754784	8.6579465	649
650	422500	274625000	25.4950976	8.6623911	650
651	423801	275894451	25.5147016	8.6668310	651
652	425104	277167808	25.5342907	8.6712665	652
653	426400	278445077	25:5588647	8.6756974	653
654	427716	279726264	25.5784287	8.6801237	654
655	429025	281011375	25.5929678	8-6845456	655
656	430336	282300416	25-6124969	8-6889630	656
657	431649	283593393	25.6320112	8.6933759	657
658	432964	284890312	25.6515107	8.6977843	658
659	434281	286191179	25.6709953	8.7021882	659
660	435600	287496000	25.6904652	8.7065877	660
661	436921	288804781	25.7099203	8.7109827	661
662	438244	290117528	25.7293607	8.7153734	662
663	439569	291434247	25.7487864	8.7197596	663
664	440896	292754944	25.7681975	8.7241414	664
665	442225	294079625	25.7875939	8.7285187	665
666	443556	295408296	25.8069758	8.7328918	666
667	444889	296740968	25.8263431	8.7372604	667
668	446224	298077632	25.8456960	8.7416246	668
669	447561	299418309	25.8650343	8.7459846	669
670	448900	300763000	25.8848582	8.7503401	670
671	450241	302111711	25.9086677	8.7546913	671
672	451584	303464448	25.9229628	8.7590383	672
678	452929	804821217	25.9422435	8.7633809	673
674	454276	806182024	25.9615100	8.7677192	674
675	455625	807546875	25.9807621	8.7720532	675
676	456976	308915776	26.0	8.7763830	676
677	458329	810288733	26.0192237	8.7807084	677
678	459684	811665752	26.0384331	8.7850296	678
679 680	461041 462400	313046839 814432000	26.0576284	8·7893466 8·7936593	679

Number.	Square.	Cube.	Square Root.	Cube Root.	Númber.
681	463761	815821241	26.0959767	8-7979679	681
682	465124	817214568	26-1151297	8.8022721	682
683	466489	318611987	26.1342687	8.8065722	683
684	467856	820013504	26.1533937	8.8108681	684
685	469225	821419125	26.1725047	8.8151598	685
686	470596	822828856	26-1916017	8.8194474	686
687	471969	324242703	26-2106848	8.8237307	687
688	473344	825660672	26.2297541	8-8280099	688
689	474721	327082769	26.2488095	8.8322850	689
690	476100	828509000	26-2678511	8.8365559	690
691	477481	829939371	26-2868789	8.8408227	691
692	478864	831878887	26.3058929	8.8450854	692
698	480249	832812557	26-8248982	8.8493440	693
694	481686	384255884	26.8488797	8.8585985	694
695	488025	835702875	26.8628527	8.8578189	695
696	484416	8871535 8 6	26-8818119	8.8620952	696
697	485809	888608878	26.4007576	8.8663875	697
698	487204	840068392	26-4196896	8.8705757	698
699	488601	841582099	26.4386081	8.8748099	699
700	490000	848000000	26.4575131	8.8790400	700
701	491401	844472101	26-4764046	8.8832661	701
702	492804	345948408	26.4952826	8.8874882	702
703	494209	847428927	26.5141472	8.8917063	703
704	495616	848918664	26.5329983	8.8959204	704
705	497025	850102625	26.5518361	8.9001304	705
706	498486	351895816	26-5706605	8.9043366	706
707	499849	853393243	26.5894716	8.9085387	707
708	501264	854894912	26.6082694	8.9127369	708
709	502681	356400829	26.6270539	8.9169811	709
710	504100	857911000	26.6458252	8.9211214	710
711	505521	359425431	26.6645833	8.9253078	711
712	506944	360944128	26.6833281	8-9294902	712
718	508369	362467097	26.7020598	8.9336687	713
714	509796	863994344	26.7207784	8.9378433	714
715	511225	865525875	26.7394839	8.9420140	715
716	512656	867061696	26.7581763	8.9461809	716
717	514089	368601813	26.7768557	8.9503438	717
718	515524	370146232	26.7955220	8.9545029	718
719	516961	871694959	26.8141754	8.9586581	719
720	518400	373248000	26.8828157	8.9628095	720

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
721	519841	374805361	26-8514432	8-9669570	721
722	521284	376367048	26.8700577	8-9711007	722
723	522729	377933067	26.8886593	8.9752406	723
724	524176	379503424	26.9072481	8.9793766	724
725	525625	381078125	26.9258240	8.9835089	725
726	527076	382657176	26-9443872	8.9876373	726
727	528529	384240583	26.9629375	8.9917620	727
728	529984	385828352	26.9814751	8-9958829	728
729	531441	387420489	27.0	9.0	729
730	532900	389017000	27-0185122	9.0041134	730
731	534361	390617891	27-0370117	9.0082229	731
732	535824	392223168	27.0554985	9.0123288	732
783	537289	393832837	27.0739727	9.0164309	733
784	538756	895446904	27.0924344	9.0205293	734
735	540225	397065375	27.1108834	9-0246239	735
786	541696	398688256	27-1298199	9.0287149	736
737	543169	400315553	27.1477439	9.0328021	737
738	544644	401947272	27.1661554	9.0368857	738
739	546121	403583419	27.1845544	9.0409655	739
740	547600	405224000	27.2029410	9.0450417	740
741	549081	406869021	27-2213152	9.0491142	741
742	550564	408518488	27-2396769	9.0531831	742
748	552049	410172407	27.2580268	9.0572482	743
744	553536.	411830784	27.2763634	9.0613098	744
745	555025	413493625	27-2946881	9.0653677	745
746	556516	415160936	27.8130006	9.0694220	746
747	558009	416832723	27-8318007	9.0734726	747
748	559504	418508992	27-3495887	9.0775197	748
749	561001	420189749	27.3678644	9.0815631	749
750	562500	421875000	27-3801279	9.0856030	750
751	564001	428564751	27-4048792	9.0896392	751
752	565504	425259008	27-4226184	9·Q936719	752
753	567009	426957777	27.4408455	9.0977010	753
754	568516	428661064	27.4590604	$9 \cdot 1017265$	754
755	570025	430368875	27-4772633	9.1057485	755
756	571536	432081216	27.4954542	9.1097669	756
757	573049	433798093	27.5136330	9-1137818	757
758	574564	435519512	27.5317998	9.1177931	758
759	576081	437245479	27.5499546	9-1218010	759
760	577600	438976000	27.5680975	9.1258053	760

Number.	Square.	Cube.	Square Root.	Cube Root.	Númber.
681	463761	815821241	26.0959767	8.7979679	681
682	465124	817214568	26.1151297	8.8022721	682
683	466489	318611987	26.1342687	8.8065722	683
684	467856	820013504	26.1533987	8.8108681	684
685	469225	821419125	26.1725047	8.8151598	685
686	470596	322828856	26 1916017	8.8194474	686
687	471969	324242703	26.2106848	8.8237807	687
688	478344	325660672	26.2297541	8-8289099	688
689	474721	327082769	26.2488095	8.8822850	689
690	476100	828509000	26.2678511	8.8365559	690
691	477481	329939371	26-2868789	8.8408227	691
692	478864	331873887	26.8058929	8.8450854	692
693	480249	882812557	26.3248932	8.8498440	698
694	481636	884255884	26.8488797	8 8585985	694
695	483025	885702875	26-8628527	8.8578189	695
696	484416	8871585 8 6	26:8818119	8.8620952	696
697	485809	388608873	26.4007576	8.8663875	697
698	487204	840068892	26.4196896	8.8705757	698
699	488601	841582099	26.4386081	8.8748099	699
700	490000	848000000	26-4575131	8.8790400	700
701	491401	844472101	26-4764046	8.8832661	701
702	492804	845948408	26.4952826	8.8874882	702
703	494209	347428927	26.5141472	8.8917063	703
704	495616	848918664	26.5329983	8.8959204	704
705	497025	850402625	26.5518361	8.9001304	705
708	498486	851895816	26.5706605	8-9043866	706
707	499849	858398248	26.5894716	8.9085387	707
708	501264	854894912	26.6082694	8.9127869	708
709	502681	356400829	26.6270539	8.9169311	709
710	504100	857911000	26.6458252	8.9211214	710
711	505521	359425431	26-6645833	8.9253078	711
712	506944	360944128	26.6833281	8.9294902	712
718	508369	362467097	26.7020598	8.9336687	713
714	509796	363994344	26.7207784	8.9378433	714
715	511225	865525875	26.7394839	8.9420140	715
716	512656	867061696	26.7581763	8.9461809	716
717	514089	868601813	26.7768557	8.9503438	717
718	515524	370146232	26.7955220	8.9545029	718
719	516961	871694959	26.8141754	8.9586581	719
720	518400	373248000	26.8828157	8.9628095	720

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
801	641601	513922401	28-3019434	9.2870440	801
802	643204	515849608	28-3196045	9.2909072	802
803	644809	517781627	28-3372546	9.2947671	803
804	646416	519718464	28-3548938	9.2986239	804
805	648025	521660125	28-3725219	9.3024775	805
806	649636	523606616	28-3901391	9-3063278	806
807	651249	525557943	28.4077454	9.3101750	807
808	652864	527514112	28-4253408	9-3140190	808
809	654481	529475129	28.4429253	9.3178599	809
810	656100	581441000	28.4604989	9.3216975	810
811	657721	533411731	28-4780617	9.3255320	811
812	659344	535387328	28-4956137	9.3293634	812
813	660969	537367797	28-5131549	9.3331916	818
814	662596	539353144	28-5306852	9.3370167	814
815	664225	541343375	28.5482048	9.3408386	815
816	665856	543338496	28-5657137	9.8446575	816
817	667489	545338513	28.5832119	9.3484731	817
818	669124	547343432	28-6006993	9.3522857	818
819	670761	549353259	28-6181760	9.3560952	819
820	672400	551368000	28-6356421	9.3599016	820
821	674041	553387661	28-6580976	9.3637049	821
822	675684	555412248	28-6705424	9-3675051	822
823	677329	557441767	28-6879766	9.3713022	823
824	678976	559476224	28.7054002	9.3750963	824
825	680625	561515625	28.7228132	9.3788873	825
826	682276	563559976	28.7402157	9-3826752	826
827	683929	565609283	28.7576077	9.3864600	827
828	685584	567663552	28-7749891	9.3902419	828
829	687241	569722789	28.7923601	9.3940206	829
830	688900	571787000	28.8097206	9.3977964	830
831	690561	573856191	28.8270706	9.4015691	831
832	692224	575930368	28.8444102	9.4053387	832
833	693889	578009537	28.8617394	9.4091054	833
834	695556	580093704	28.8790582	9-4128690	834
835	697225	582182875	28-8963666	9-4166297	835
836	698896	584277056	28-9136646	9.4203873	836
837	700509	586376253	28-9309523	9-4241420	837
838	702244	588480472	28-9482297	9-4278936	838
839	703921	590589719	28-9654967	9.4316423	839,
840	703600	592704000	28-9827535	9.4353880	840

Number.	Square.	Cube.	Square Root.	Cube Root.	Number.
841	707281	594828821	29-0	9-4391307	841
842	708964	596947688	29-0172868	9.4428704	842
843	710649	599077107	29.0344628	9.4466072	848
844	712336	601211584	29.0516781	9.4508410	844
845	714025	603351125	29-0688837	9-4540719	845
846	715716	605495786	29-0860791	9.4577999	846
847	717409	607645428	29.1032644	9.4615249	847
848	719104	609800192	29.1204896	9.4652470	848
849	720801	611960049	29.1876046	9:4689661	849
850	722500	614125000	29.1547595	9.4726824	850
851	724201	616295051	29.1719043	9.4763957	851
852	725904	618470208	29.1890890	9.4801061	852
853	727609	620650477	29.2061637	9.4888136	853
854	729316	622835864	29.2232784	9.4875182	854
8 55	731025	625026375	29-2403880	9.4912200	855
856	782736	627222016	29.2574777	9.4949188	856
857	784449	629422798	29.2745623	9.4986147	857
858	786164	631628712	29.2916370	9.5023078	858
859	737881	683839779	29-8087018	9.5059980	859
860	739600	636056000	29.3257566	9.5096854	860
861	741821	638277381	29.3428015	9.5183699	861
862	743044	640508928	29.3598865	9.5170515	862
868	744769	642785647	29.3768616	9.5207308	863
864	746496	644972544	29.3938769	9.5244068	864
865	748225	647214625	29.4108828	9.5280794	865
866	749956	649461896	29.4278779	9.5817497	866
867	751689	651714363	29.4448687	9.5354172	867
808	758424	658972032	29.4618397	9.5390818	868
869	755161	656234909	29.4788059	9.5427437	869
870	750900	658508000	29.4957624	9.5464027	870
871	758641	660776811	29.5127091	9 5500589	871
872	700884	008054848	29.5296461	9.5537123	872
878	762129	665388617	29.5465784	9.5573630	873
874	763876	667627627	29.5634910	9.5610108	874
875	765625	669921875	29.5803989	9.5646559	875
876	767376	672221876	29.5972972	9.5682982	876
877	709129	674526188	29.6141858	9.5719377	877
878	770884	676836152	29.6310648	9.5755745	878
HTH	772641	670151489	29.6479342	9.5792085	879
UHU	774400	681472000	29.6647989	9.5828397	880

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
881	776161	683797841	29-6816442	9.5864682	881
882	777924	686128968	29-6984848	9.5900939	882
883	779689	688465387	29.7153159	9.5937169	883
884	781456	690807104	29.7321375	9.5973378	884
885	783225	693154125	29.7489498	9.6009548	885
886	784996	695506456	29.7657521	9-6045696	886
887	786769	697864103	29.7825452	9.6081817	887
888	788544	700227072	29.7993289	9.6117911	888
889	790321	702595369	29.8161030	9.6153977	889
890	792100	704969000	29-8328676	9.6190017	890
891	793881	707347971	29.8496231	9.6226030	891
892	795664	709732288	29.8668690	9:6262016	892
893	797449	712121957	29.8831056	9-6297975	893
894	799286	714516984	29-8998328	9.6333907	894
895	801025	716917375	29.9165506	9.6369812	895
896	802816	719323136	29.9332591	9.6405690	896
897	804609	721734278	29-9499583	9.6441542	897
898	806404	724150792	29-9666481	9.6477367	898
899	808201	726572699	29.9833287	9.6513166	899
900	810000	729000000	30.0	9.6548938	900
901	811801	731432701	30-0166620	9.6584684	901
902	813604	733870808	30.0333148	9.6620403	902
903	815409	736314327	30.0499584	9.6656096	903
904	817216	738763264	30-0665928	9.6691762	904
905	819025	741217625	80-0882179	9.6727403	905
906	820836	743677416	80-0998339	9.6763017	906
907	822649	746142643	30.1164407	9.6798604	907
908	824464	748613312	30-1330383	9.6834166	908
909	826281	751089429	30.1496269	9.6869701	909
910	828100	758571000	30.1662063	9.6905211	910
911	829921	756058031	30-1827765	9.6940694	911
912	831744	758550528	30-1993377	9.6976151	912
913	833569	761048497	30-2158899	9.7011583	913
914	835396	763551944	30-2324329	9.7046989	914
915	837225	766060875	30-2489669	9.7082369	915
916	839056	768575296	30-2654919	9.7117723	916
917	840889	771095213	30.2820079	9.7153051	917
918	842724	778620632	30.2985148	9.7188354	918
919	844561	776151559	30-3150128	9.7223631	919
920	846400	778688000	30-3315018	9.7258883	920

Sumber.	Square.	Cube.	Square Root.	Cube Ross.	Number
921	848241	781229961	30-3479818	9-7294109	921
922	850084	783777449	30-3644529	9-7329309	922
923	851929	786330467	30-3809151	9.7364484	923
924	858776	788889024	30-3973683	9.7399634	924
925	855625	791453125	30-4138127	9-7434758	925
926	857476	794022776	80-4302481	9-7469857	926
927	859329	796597983	30-4466747	9.7504930	927
928	861184	799178752	30-4630924	9.7539979	928
929	863041	801765089	30-4795013	9.7575002	929
930	864900	804357000	30-4959014	9.7610001	930
931	866761	806951491	30-5122926	9-7614974	931
932	868624	809557568	30-5286750	9.7679922	932
933	870489	812166237	30.5450487	9-7714845	933
934	872356	814780504	30-5614136	9-7749748	934
935	874225	817400375	30-3777697	9.7784616	935
986	876096	820025856	30-5941171 -	9-7819466	936
937	877969	822656953	30-6104557	9.7854288	937
938	879844	825298672	30-6267857	9.7889087	988
939	881721	827936019	30.6431069	9.7923861	989
940	883600	880584000	30-6594194	9.7958611	₹940
941	885481	833237621	30-6757233 ,	9.7998336	941
942	887364	835896888	30-6920185	9.8028036	942
943	889249	838561807	30.7083051;	9.8062711	943
944	891136	841232384	30-7245830	9.8097362	911
945	893025	843908625	30.7408523	9.8131989	945
946	894916	846590536	30-7571130	9.8166591	946
947	896809	849278123	30-7733651	9.8201169	947
948	898704	851971392	30.7896086	9.8235723	100000
949	900601	854670349	30.8058436	9.8270252	949
950	902500	857375000	30.8220700	9.8304757	950
951	904401	.860085351	30-8382879	9.8339238	951
952	906304	862801408	30.8544972	9.8373695	952
953	908209	865523177	30.8706981	9.8408127	953
954	910116	868250004	30.8868904	9.8442586	954
955	912025	870983875	30-9030748	9.8476920	955
956	913936	878722816	30-5192497	9.8511280	956
957	915849	876467493	80.9354166	9.8545617	957
958	917764	879217912	80-9515751	9.8579929	958
959	919681	881974079	30.9677251	9.8614218	959
980	921600	884733000	30.9838668	9.8648488	960

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
961	923521	887503681	81.0	9.8682724	961
962	925444	890277128	81-0161248	9.8716941	962
968	927869	893056347	81.0322418	9.8751135	968
964	929296	895841344	31.0483494	9.8785305	964
965	931225	898632125	81.0644491	9.8819451	965
966	933156	901428696	31-0805405	9.8858574	966
967	935089	904281068	31-0966236	9.8887678	967
968	987024	907039232	81·1126984	9.8921749	968
969	938961	909853209	31 1287648	9.8955801	969
970	940900	912673000	81.1448230	9-8989880	970
971	942841	915498611	81.1608729	9.9028885	971
972	944784	918830048	31.1769145	9.9057817	972
973	946729	921167817	81.1929479	9.9091776	978
974	948676	924010424	31.2089781	9.9125712	974
975	950625	926859375	81-2249900	9.9159624	975
976	952576	929714176	31-2409987	9.9198518	976
977	954529	932574833	31.2569992	9.9227379	977
978	956484	935441352	81.2729915	9.9261222	978
979	958441	938313789	31.2889757	9.9295042	979
980	960400	941192000	31.3049517	9.9328839	980
981	962361	944076141	81.8209195	9.9862618	981
982	964824	946966168	31.3368792	9.9896868	982
983	96628 9	949862087	31.3528308	9.9430092	983
984	968256	952763904	31.8687748	9.9463797	984
985	970225	955671625	31.3847097	9.9497479	985
986	972196	958585256	81-4006369	9.9531188	986
987	974169	961504803	31.4165561	9.9564775	987
988	976144	964430272	31.4324673	9.9598389	988
989	978121	967861669	31.4483704	9.9631981	989
990	980100	970299000	81.4642654	9.9665549	990
991	982081	973242271	81-4801525	9-9699095	991
992	984064		81.4960815	9.9732619	992
993	986049		31.5119025	9.9766130	998
991	988036	982107784	31.5277655	9.9799599	994
995	990025	985074875	81.5486206	9-9888055	995
996	992016	988047936	31.5594677	9.9866488	996
997	994009	991026973	31.5758068	9.9899900	997
998	996004	994011992	81.5911880	9.9933289	998
999	998001	997002999	81-6069618	9.9966656	999
1000	1000000	1000000000	81.62277661	10.0	1000

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
921	848241	781229961	30-3479818	9.7294109	921
922	850084	783777448	30.3644529	9.7329309	922
923	851929	786330467	30-3809151	9.7364484	923
924	858776	788889024	30-3973683	9.7399634	924
925	855625	791453125	30-4138127	9-7434758	925
926	857476	794022776	30-4302481	9.7469857	926
927	859329	796597983	30-4466747	9-7504930	927
928	861184	799178752	30.4630924	9.7539979	928
929	863041	801765089	30.4795013	9.7575002	929
930	864900	804357000	30.4959014	9.7610001	930
981	866761	806954491	80-5122926	9.7644974	931
932	868624	809557568	30.5286750	9.7679922	932
933	870489	812166237	30-5450487	9.7714845	983
934	872356 -	814780504	30.5614136	9.7749748	934
.985	874225	817400375	30-5777697	9.7784616	985
986	876096	820025856	80-5941171	9.7819466	936
937	877969	822656953	30-6104557	9.7854288	937
938	879844	825293672	30.6267857	9.7889087	988
939	881721	827936019	30-6431069	9.7923861	939
940	883600	880584000	80-6594194	9.7958611	₹940
941	885481	833237621	30-6757233	9.7993336	941
942	887364	835896888	30-6920185	9.8028036	942
943	889249	888561807	30.7083051	9.8062711	943
944	891136	841232384	30.7245830	9.8097862	944
945	893025	843908625	30.7408523	9.8131989	945
946	894916	846590536	30-7571130	9.8166591	946
947	896809	849278123	30.7783651	9.8201169	947
948	898704	851971392	30.7896086	9.8235723	
949	900601	854670349	30.8058436	9.8270252	949
950	902500	857875000	30.8220700	9.8304757	950
951	904401	.860085351	30-8382879	9.8339238	951
952	906304	862801408	30.8544972	9.8373695	952
953	908209	865523177	80.8706981	9.8408127	953
954	910116	868250664	30.8868904	9.8442586	954
955	912025	870983875	80-9030748	9.8476920	955
956	913936	878722816	30-5192497	9.8511280	956
957	915849	876467493	30-9354166	9.8545617	957
958	917764	879217912	80-9515751	9.8579929	958
959	919681	881974079	30.9677251	9.8614218	959
980	921600	884786000	30-9838668	9.8648483	960

SQUARE ROOTS, AND CUBE ROOTS.

Number.	Square.	Cabe.	Square Root.	Cube Root.	Number
961	923521	887503681	81.0	9.8682724	961
962	925444	890277128	81-0161248	9.8716941	962
963	927369	893056347	81.0322413	9.8751185	963
964	929296	895841344		9.8785305	964
965	931225	898632125	81-0644491	9.8819451	965
966	933156	901428696	31-0805405	9-8858574	966
967	935089	904231063	81-0966286	9.8887678	967
968	937024	907039232	81-1126984	9.8921749	968
969	988961	909853209	31-1287648	9.8955801	969
970	940900	912673000	81.1448230	9-8989880	970
971	942841	915498611	81.1608729	9.9023835	971
972	944784	918330048	31.1769145	9.9057817	972
973	946729	921167817	81.1929479	9.9091776	978
974	948676	924010424	31.2089781	9.9125712	974
975	950625	926859375	31-2249900	9.9159624	975
976	952576	929714176	31-2409987	9.9198513	976
977	954529	932574833	81.2569992	9-9227379	977
978	956484	935441352	81.2729915	9.9261222	978
979	958441	938313789	31.2889757	9.9295042	979
980	960400	941192000	31.8049517	9.9328839	980
981	962361	944076141	81-3209195	9.9862618	981
982	964324	946966168	31.3368792	9.9896368	982
983	966289	949852087	31.3528308	9.9430092	983
984	968256	952763904	31.8687748	9.9463797	984
985	970225	955671625	31.3847097	9.9497479	985
986	972196	958585256	31.4006369	9.9531138	986
987	974169	961504803	31.4165561	9.9564775	987
988	976144	964430272	31.4324678	9.9598389	988
989	978121	967361669	31.4483704	9.9631981	989
990	980100	970299000	81.4642654	9.9665549	990
991	982081	973242271	81.4801525	9.9699095	991
992	984064	976191488	81.4960815	9.9782619	992
993	986049	979146657	81.5119025	9.9766130	998
991	988036	982107784	81.5277655	9.9799599	994
995	990025	985074875	81.5486206	9.9833055	995
996	992016	988047936	81.5594677	9.9866488	996
997	994009	991026978	31.5753068	9.9899900	997
998	996004	994011992	81.5911880	9.9938289	998
999	998001	997002999	81.6069618	9.9966656	999
1000	1000000	1000000000	31.6227766	10∙0	1000

Number.	Square.	Cabe.	Square Root.	Cube Root.	Number.
1001	1002001	1003003001	31-6385840	10.0033322	1001
1002	1004004	1006012008	31-6543836	10.0066622	1002
1003	1006009	1009027027	31-6701752	10.0099899	1003
1004	1008016	1012048064	31.6859590	10.0133155	1004
1005	1010025	1015075125	31.7017349	10.0166389	1005
1006	1012036	1018108216	31.7175030	10.0199601	1006
1007	1014049	1021147343	81.7332683	10.0232791	1007
1008	1016064	1024192512	31.7490157	10.0265958	1008
1009	1018081	1027243729	31.7647603	10.0299104	1009
1010	1020100	1030301000	31.7804972	10.0332228	1010
1011	1022121	1033364331	81.7962262	10:0365330	1011
1012	1024144	1036433728	31.8119474	10.0398410	1012
1013	1026169	1039509197	31.8276609	10-0431469	1013
1014	1028196	1042590744	31.8433666	10.0464506	1014
1015	1030225	1045678375	31-8590646	10.0497521	1015
1016	1032256	1048772096	81.8747549	10.0530514	1016
1017	1034289	1051871913	31.8904374	10.0563485	1017
1018	1036324	1054977832	31.9061123	10.0596435	1018
1019	1038361	1058089859	31.9217794	10.0629364	1019
1020	1040400	1061208000	31.9374388	10.0662271	1020
1021	1042441	1064332261	81-9530906	10.0695156	1021
1022	1044484	1067462648	31-9687347	10.0728030	1022
1023	1046529	1070599167	31.9843712	10.0760863	1023
1024	1048576	1073741824	32-0000000	10.0793684	1024
1025	1050625	1076890625	32-0156212	10.0826484	1025
1026	1052676	1080045576	32-0312348	10.0859262	1026
1027	1054729	1083206683	32.0468407	10.0892019	1027
1028	1056784	1086373952	32.0624391	10.0924755	1028
1029	1058841	1089547389	32.0780298	10.0957469	1029
1030	1060900	1092727000	32-0936131	10.0990163	1080
1031	1062961	1095912791	32.1091887	10.1022835	1031
1032	1065024	1099104768	32-1247568	10.1055487	1032
1033	1067089	1102302937	32.1403173	10.1088117	1033
1034	1069156	1105507304	32-1558704	10.1120726	1034
1035	1071225	1108717575	32-1714159	10.1153314	1035
1036	1073296	1111934656	32.1869539	10.1185882	1036
1037	1075369	1115157653	32-2024844	10.1218428	1037
1038	1077444	1118386872	32.2180074	10.1250958	1038
1039	1079521	1121622319	32-2335229	10.1283457	1039
1040	1081600	1124864000	32.2490310	10.1315941	1040

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
1041	1083681	1128111921	32-2645316	10-1348403	1041
1042	1085764	1131366088	32.2800248	10.1380845	1042
1043	1087849	1134626507	32-2955105	10.1413266	1043
1044	1089936	1137893184	32-3109888	10.1445667	1044
1045	1092025	1141166125	32-3264598	10-1478047	1045
1046	1094116	1144445336	32-3419233	10.1510406	1046
1047	1096209	1147730823	32.3573794	10.1542744	1047
1048	1098304	1151022592	32.3728281	10.1575062	1048
1049	1100401	1154320649	32.3882695	10.1607859	1049
1050	1102500	1157625000	82-4037035	10.1639636	1050
1051	1104601	1160935651	32-4191301	10.1671893	1051
1052	1106704	1164252608	32.4345495	10.1704129	1052
1053	1108809	1167575877	32.4499615	10.1736344	1053
1054	1110916	1170905464	32.4653662	10.1768539	1054
1055	1113025	1174241375	32-4807635	10.1800714	1055
1056	1115136	1177583616	32-4961536	10.1832868	1056
1057	1117249	1180932193	32.5115364	10.1865002	1057
1058	1119364	1184287112	32.5269119	10.1897116	1058
1059	1121481	1187648379	32.5422802	10.1929209	1059
1060	1123600	1191016000	32.5576412	10-1961283	1060
1061	1125721	1194389981	32-2729949	10.1993386	1061
1062	1127844	1197770328	32.5883415	10-2025369	1062
1063	1129969	1201159047	32.6036807	10.2057382	1063
1064	1182096	1204550144	32-6190129	10.2089375	1064
1065	1134225	1207949625	32-6343377	10.2121347	1085
1066	1186856	1211355496	32-6496554	10.2153300	1066
1067	1138489	1214767763	82.6649659	10.2185233	1067
1068	1140624	1218186432	32-6803693	10.2217146	1068
1069	1142761	1221611509	32.6955654	10.2249039	1069
1070	1144900	1225043000	32.7108544	10.2280912	1070
1071	1147041	1228480911	32.7261863	10.2312766	1071
1072	1149184	1231925248	32.7414111	10.2314599	1072
1073	1151329	1235376017	32.7566787	10.2376413	1073
1074	1158476	1238833224	32.7719392	10-2408207	1074
1075	1155625	1242296875	32.7871926	10.2439981	1075
1076	1157776	1245766976	32.8024389	10.2471785	1076
1077	1159929	1249243583	32.8176782	10.2503470	1077
1078	1162084	1252726552	32.8329103	10.2535186	1078
1079	1164241	1256216089	32.8481354	10.2566881	1079
1080	1166400	1259712000	32-8633535	10.2598557	1080

Number.	Square.	Cube.	Square Root.	Cube Root.	Number
1081	1168561	1263214441	32-8785644	10-2630213	1081
1082	1170724	1266723368	32-8937684	10.2661850	1082
1083	1172889	1270238787	32-9089653	10.2693467	1083
1084	1175056	1273760704	32-9241558	10.2725065	1084
1085	1177225	1277289125	32-9398382	10.2756644	1085
1086	1179396	1280824056	32-9545141	10-2788203	1086
1087	1181569	1284365503	32-9696830	10.2819743	1087
1088	1183744	1287913472	32.9848450	10.2851264	1088
1089	1185921	1291467969	33-00000000	10.2882765	1089
1090	1188100	1295029000	88-0151480	10.2914247	1090
1091	1190281	1298596571	33-0302891	10.2945709	1091
1092	1192464	1302170688	33.0454233	10.2977153	1092
1093	1194649	1305751357	33.0605505	10.3008577	1093
1094	1196836	1309338584	33.0756708	10.3039982	1094
1095	1199025	1812932375	33.0907842	10.3071368	1095
1096	1201216	1316532736	83-1058907	10-3102785	1096
1097	1203409	1320139673	33.1209903	10.3134083	1097
1098	1205604	1828753192	33.1360830	10.3165411	1098
1099	1207801	1327373299	33.1511689	10.3196721	1099
1100	1210000	1331000000	88.1662479	10.3228012	1100
1101	1212201	1834633301	33-1813200	10.3259284	1101
1102	1214404	1338273208	33.1963853	10.3290537	1102
1103	1216609	1841919727	33-2114438	10.3321770	1103
1104	1218816	1345572864	33.2264955	10.3352985	1104
1105	1221025	1349232625	88-2415403	10.3384181	1105
1106	1223236	1352899016	83-2565788	10.3415358	1106
1107	1225449	1856572043	83.2716095	10.3446517	1107
1108	1227664	1360251712	33.2866339	10.3477657	1108
1109	1229881	1363988029	33.3016516	10.3598778	1109
1110	1232100	1367631000	33:3166625	10.3539890	1110
1111	1234321	1371330631	33-8316666	10-3570964	1111
1112	1236544	1375036928	33.3466640	10.3602029	1112
1113	1238769	1378749897	33.3616546	10.3633076	1113
1114	1240996	1382469544	33-3766385	10.3664103	1114
1115	1243225	1386195875	33-3916157	10-3695113	1115
1116	1245456	1389928896	33.4065862	10-3726103	1116
1117	1247689	1393668613	33-4215499	10.3757076	1117
1118	1249924	1397415032	83.4365070	10.3788030	1118
1119	1252161	1401168159	33-4514573	10.3818965	1119
1120	1254400	1404928000	33-4664011	10.3849882	1120

Namber.	Square.	Cube.	Square Root.	Cube Root.	Number.
1121	1256641	1408694561	38.4813381	10-3880781	1121
1122	1258881	1412467848	33.4962684	10.3911661	1122
1123	1261129	1416247867	33.5111921	10.3942523	1128
1124	1263376	1420034624	33.5261092	10.3973366	1124
1125	1265625	1423828125	33.5410196	10.4004192	1125
1126	1267876	1427628376	33.5559234	10.4034999	1126
1127	1270129	1431435383	33.5708206	10.4065787	1127
1128	1272384	1435249152	33.5857112	10.4096557	1128
1129	1274641	1439069689	33.6005952	10.4127310	1129
1130	1276900	1442897000	33.6154626	10.4158044	1180
1131	1279161	1446731091	33-6303434	10.4188760	1131
1132	1281424	1450571968	33.6452077	10.4219458	1182
1133	1283689	1454419687	83.6600658	10.4250138	1138
1184	1285956	1458274104	33.6749165	10.4280800	1184
1135	1288225	1462135375	33-6897610	10.4311448	1135
1136	1290496	1466003456	83.7045991	10.4342069	1136
1137	1292769	1469878353	33.7194306	10.4372677	1137
1138	1295044	1478760072	83.7842556	10.4403267	1138
1139	1297321	1477648619	33.7490741	10.4433839	1139
1140	1299600	1481544000	33.7638860	10.4464893	1140
1141	1301881	1485446221	33.7786915	10.4494929	1141
1142	1304164	1489355288	33.7934905	10.4525448	1142
1143	1306449	1493271207	33-8082830	10.4555948	1143
1144	1308786	1497193984	33.8230691	10.4586431	1144
1145	1311025	1501128625	33.8378486	10.4616896	1145
1146	1313316	1505060186	33.8526218	10.4647843	1146
1147	1315609	1509003523	33-8673884	10.4677773	1147
1148	1317904	1512953792	33.8821487	10.4708185	1148
1149	1320201	1516910949	33.8969025	10.4738579	1149
1150	1322500	1520875000	33.9116499	10.4768955	1150
1151	1324801	1524845951	83-9268909	10.4799314	1151
1152	1327104	1528823808	33.9411255	10.4829656	1152
1153	1329409	1532808577	33.9558587	10.4859980	1153
1154	1331716	1536800264	33.9705755	10.4890286	1154
1155	1334025	1540798875	83-9852910	10.4920575	1155
1156	1336336	1544804416	34.0000000	10.4950847	1156
1157	1338649	1548816893	34.0147027	10.4981101	1157
1158	1340964	1552836312	34 0293990	10.5011331	1158
1159	1343281	1556862679	34.0440890	10.5041556	1159
1160	1845600	1560896000	84.0587727	10.5071757	1160

To find the square of a greater number than is contained in the table.

RULE 1.—If the number required to be squared exceed, by 2, 3, 4, or any other number of times, any number contained in the table, let the square affixed to the number in the table be multiplied by the square of 2, 3, or 4, &c., and the product will be the answer sought.

Example.—Required the square of 2595.

2595 is three times greater than 865; and the square of 865, as per table, is 748225.

Then, $748225 \times 3^2 = 6734025$, Ans.

RULE 2.—If the number required to be squared be an odd number, and do not exceed twice the amount of any number contained in the table, find the two numbers nearest to each other, which, added together, make that sum; then, the sum of the squares of these two numbers, as per table, multiplied by 2, will exceed the square required by 1.

Example.—Required the square of 1865. The two nearest numbers (932 + 933) = 1865.

Then, per table $(932^2 = 868624) + (933^2 = 870489)$. = 1739113 × 2 = 3478226 - 1 = 3478225, Ans.

To find the cube of a greater number than is contained in the table.

RULE.—Proceed, as in squares, to find how many times the number required to be cubed exceeds the number contained in the table. Multiply the cube of that number by the cube of as many times as the number sought exceeds the number in the table, and the product will be the answer required.

EXAMPLE.—Required the cube of 3984.

3984 is 4 times greater than 996; and the cube of 996, as per table, is 988047936.

Then $988047936 \times 4^3 = 63235067904$, Ans.

To find the square or cube root of a higher number than is in the table.

RULE.—Refer to the table, and seek in the column of squares or cubes, the number nearest to that number whose root is sought, and the number from which that square or cube is derived will be the answer required, when decimals are not of importance.

Example.—Required the square root of 542869.

In the table of squares, the nearest number is 543169; and the number from which that square has been obtained is 737.

Therefore, $\checkmark 542869 = 737$ nearly, Ans.

To find more nearly the cube root of a higher number than is in the table.

RULE.—Ascertain, by the table, the nearest cube number to the number given, and call it the assumed cube.

Multiply the assumed cube and the given number,

respectively, by 2; to the product of the assumed cube add the given number, and to the product of the given number add the assumed cube.

Then, by proportion, as the sum of the assumed cube is to the sum of the given number, so is the root of the assumed cube to the root of the given number.

EXAMPLE.—Required the cube root of 412568555.

Per table, the nearest number is 411830784; and its cube root is 744.

Therefore, $411830784 \times 2 + 412568555 = 1236230123$.

And, $412568555 \times 2 + 411830784 = 1236967894$. Hence, as 1236230123 : 1236967894 :: 744 : 744 : 369, very nearly, Ans.

To find the square or cube root of a number containing decimals.

Subtract the square root or cube root of the integer of the given number from the root of the next higher number, and multiply the difference by the decimal part. The product, added to the root of the integer of the given number, will be the answer required.

Example.—Required the square root of 321.62.

 $\sqrt{321} = 17.9164729$, and $\sqrt{322} = 17.9443584$; the difference $(.0278855) \times .62 + 17.9164729 = 17.9837619$, Ans.

THE CONIC SECTIONS.

THE plane figures formed by the cutting of a cone by a plane, are five in number, viz: The Triangle, the Circle, the Ellipse, the Hyperbola, and the Parabola. The methods of finding their linear and superficial admeasurement have been already described; the several directions in which the section of the cone is to be made, in order to produce them, are as follows:—

The Triangle is formed by cutting the cone through the vertex and any part of the base.

The Circle, by cutting the cone through the sides, parallel to the base.

The *Ellipse*, by a cut passing obliquely, or at an angle with the base, through both sides of the cone.

The Hyperbola, by cutting through one side and the base parallel to the axis, or at a greater angle with the base than that made by the opposite side.

The opposite Hyperbola is formed by continuing the cutting plane through an opposite and equal cone, produced by continuing-the sides of the first cone through its vertex.

The Parabola, by cutting through one side and the base of the cone in a direction parallel to the opposite side, or making an equal angle with the base.

The Ellipse has two vertices, being the points in the curve at the extremities of the longest diameter; the Hyperbola has one vertex, or, rather, the opposite Hyperbolas one each; the Parabola has one only.

The Transverse Axis is the line uniting the two vertices.

The Conjugate Axis is a line drawn through the centre of the transverse axis, and at right angles to it.

A Diameter is a right line drawn through the centre, in any direction, and terminated at each end by the curve.

A Conjugate Diameter is a line drawn through the centre of any diameter, parallel to the tangent of the curve at the extremity of such diameter.

An Ordinate to a Diameter is a line between the diameter and the curve, parallel to its conjugate.

The part of the diameter cut off by an ordinate and terminated by its vertex, is called the Abscissa.

The Parameter, or latus rectum, is a line drawn through the focus, at right angles to the transverse axis, and terminated by the curve. The parameter of a diameter, in the ellipse and hyperbola, is a third proportional to the diameter and its conjugate; in the parabola, it is a third proportional to one abscissa and its ordinate.


The Focts is that point in the transverse axis where the ordinate is equal to half the parameter.

By the foregoing proportions, therefore, the focus of either curve may be found.

The Ellipse has two foci; as have likewise the opposite Hyperbolas; but the Parabola has one only. The Ellipse has its several parts lying within the circumference of the curve; the axis and centre of the Hyperbola lie on the outside, in consequence of the axis being drawn between the vertices of the two opposite Hyperbolas. The axis of the Parabola is of infinite length, because the axis can only touch one point or vertex in the curve.

MENSURATION OF SURFACES.


OF FOUR-SIDED FIGURES.

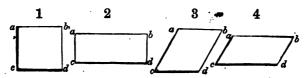

To find the area of a four-sided figure, whether it be a square, fig. 1, a parallelogram, fig. 2, a rhombus, fig. 3, or a rhomboid, fig. 4.

RULE.—Multiply the length, a b, or c d, by the breadth or *perpendicular* height; the product will be the area.

OF TRIANGLES.

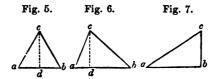

To find the area of a triangle, whether it be isosceles, fig. 5, scalene, fig. 6, or right-angled, fig. 7.

Rule.—Multiply the length, a b, of one of the sides, by the perpendicular, c d, falling upon it; half the product will be the area.

To find the length of one side of a right-angled triangle, when the lengths of the other two sides are given.

RULE 1.—To find the hypothenuse, a c, fig. 7, add together the squares of the two legs, a b and b c, and extract the square root of that sum.

RULE 2.—To find one of the legs, subtract the square of the leg, of which the length is known, from the square of the hypothenuse, and the square root of the difference will be the answer.

OF REGULAR POLYGONS.


To find the Area of a regular Polygon.

RULE.—Multiply the length of a perpendicular, drawn from the centre to one of the sides (or the

radius of its inscribed circle) by the length of one side, and this product again by the number of sides; and half the product will be the area of the polygon.

[For a table of the areas of regular polygons, see pages 67, 68.]

OF TRAPEZIUMS AND TRAPEZOIDS.

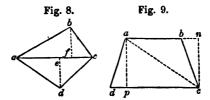

To find the Area of a Trapezium, fig. 8.

RULE 1.—Draw a diagonal line, a c, to divide the trapezium into two triangles; find the areas of these triangles separately, and add them together.

Rule 2.—Divide the trapezium into two triangles, by the diagonal ac, and let two perpendiculars, bf, and de, fall on the diagonal from the opposite angles; then, the sum of these perpendiculars multiplied by the diagonal, and divided by 2, will be the area of the trapezium.


To find the Area of a Trapezoid, fig. 9.

RULE 1.—Multiply the sum of the two parallel sides, a b, d c, by a p, the perpendicular distance

between them, and half the product will be the area.

RULE 2.—Draw a diagonal, a c, to divide the trapezoid into two triangles; find the areas of those triangles separately, and add them together.

OF IRREGULAR FIGURES.

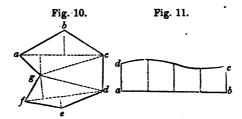


To find the Area of an Irregular Polygon, a b c d e f g, fig. 10.

RULE.—Draw diagonals to divide the figure into trapeziums and triangles; find the area of each separately, by either of the rules before given for that purpose; and the sum of the whole will be the area of the figure.

To find the Area of a Long Irregular Figure, d c a b, fig. 11.

RULE.—Take the breadth in several places, and at equal distances from each other; add all the breadths together, and divide the sum by this number, for the mean breadth; then multiply the mean breadth by the length of the figure, and the product will be the area.

OF CIRCLES.

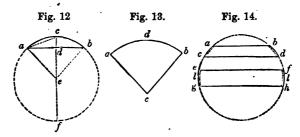

To find the Circumference of a Circle when the Diameter is given; or the Diameter when the Circumference is given.

RULE 1.—Multiply the diameter by 3.1416, and the product will be the circumference; or divide the circumference by 3.1416, and the quotient will be the diameter.

RULE 2.—As 7 is to 22, so is the diameter to the circumference. As 22 is to 7, so is the circumference to the diameter.

RULE 3.—As 113 is to 355, so is the diameter to the circumference. As 355 is to 113, so is the circumference to the diameter.

To find the Area of a Circle.

RULE 1.—Multiply the square of the diameter by .7854; or the square of the circumference by

·07958; the product, in either case, will be the area.

RULE 2.—Multiply the circumference by the diameter, and divide the product by 4.

RULE 3.—As 14 is to 11, so is the square of the diameter to the area. Or, as 88 is to 7, so is the square of the circumference to the area.

To find the length of any Arc of a Circle.

RULE 1.—From 8 times the chord of half the arc, ac, fig. 12, subtract the chord, ab, of the whole arc; one-third of the remainder will be the length of the arc, nearly.

RULE 2.—

As 180 is to the number of degrees in the arc; So is 3.1416 times the radius to its length. Or, as 3 is to the number of degrees in the arc; So is .05286 times the radius its length.

To find the Area of a Sector of a Circle, fig. 13.

RULE 1.—Multiply the length of the arc, a d b, by half the length of the radius, a c; the product will be the area.

RULE 2.—As 360 degrees is to the number of degrees in the arc of the sector; so is the area of the circle to the area of the sector.

To find the Area of a Segment of a Circle, fig. 12.

RULE 1.—To the chord, a b, of the whole are

10

add the chord, ac, of half the arc and one-third of it more. Then multiply the sum by the versed sine, of height of the segment cd, and four-tenths of the product will be the area of the segment.

RULE 2.—Divide the height, or versed sine, by the diameter of the circle, and find the quotient in the column of versed sines, at the end of Mensuration of Solids.

Then take out the corresponding area in the next column on the right-hand, and multiply it by the square of the diameter, for the answer.

To find the Area of a Circular Zone, fig. 14.


RULE 1.—When the Zone is less than a Semicircle, to the area of the trapezoid, $a \ b \ c \ d$, add the area of the circular segments, $a \ c$ and $b \ d$; the sum is the area of the zone.

Rule 2.—When the Zone is greater than a Semicircle, to the area of the parallelogram, e f g h, add the area of the circular segments, e k g and f l h; the sum is the area of the zone.

To find the Area of a Circular Ring, or Space, included between two Concentric Circles.

RULE.—Find the areas of the two circles separately; then the difference between them will be the area of the ring.

OF ELLIPSES.

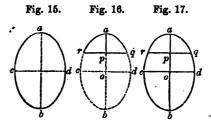

To find the Circumference of an Ellipse, fig. 15.

RULE.—Square the two axes, a b and c d, and multiply the square root of half that sum by 3.1416; the product will be the circumference nearly.

To find the Area of an Ellipse, fig. 15.

Rule.—Multiply the transverse diameter, a b, by the conjugate c d, and the product by 7854.

To find the Area of an Elliptic Segment, fig. 16.

RULE.—Divide the height of the segment, a p, by the axis a b, of which it is a part, and find, in the table of circular segments at the end of Mensuration of Solids, a circular segment having the same versed sine as this quotient. Then, multiply the segment thus found and the two axes of the ellipse continually together, and the product will give the area required.

When the transverse, a b, the conjugate, c d, and the abscissæ, a p and p b, are given, to find the ordinate, p q, fig. 17.

RULE.—Multiply the abscissæ into each other, and extract the square root of the product; this will give the mean between them. Then, as the transverse diameter is to the conjugate diameter, so is the mean to the ordinate required.

When the transverse, a b, the conjugate, c d, and the ordinate, p q, are given, to find the abscissa, fig. 17.

RULE.—From the square of half the conjugate, take the square of the ordinate, and extract the square root of the remainder.

Then, as the conjugate diameter is to the transverse, so is that square root to half the difference of the two abscissæ.

Add this half difference to half the transverse, for the greater abscissa; and subtract it for the less.

When the transverse, a b, the ordinate, p q, and the two abscissæ, a p and p b, are given, to find the conjugate, c d.

RULE.—As the square root of the product of the two abscissæ is to the ordinate, so is the transverse diameter to the conjugate.

Note.—In the same manner the transverse diame-


ter may be found from the conjugate, using the two abscissæ of the conjugate, and their ordinate perpendicular to the conjugate.

When the conjugate, c d, ordinate, p q, and abscisses, a p and b p, are given, to find the transverse diameter.

RULE.—From the square of half the conjugate subtract the square of the ordinate, and extract the root of the remainder. Add this root to the half conjugate if the less abscissa be given; but subtract it when the greater abscissa is given.

Then, as the square of the ordinate is to the rectangle of the abscissa and conjugate, so is the reserved sum, or difference, to the transverse diameter.

OF PARABOLAS.

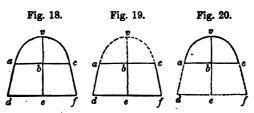

To find the Area of a Parabola.

RULE.—Multiply the base by the height, and two-thirds of the product will be the area.

To find the Area of a Frustum of a Parabola, fig. 19.

RULE.—Multiply the difference of the cubes of the two ends of the frustum, a c d f, by twice its altitude, b e, and divide the product by thrice the difference of their squares.

To find the Abscissa or Ordinate of a Parabola, fig. 18.


RULE.—The abscissæ, v b and b e, are to each other as the squares of their ordinates, a b and d e, that is, as any abscissa is to the square of its ordinate, so is any other abscissa to the square of its ordinate.

Or, as the square root of any abscissa is to its ordinate, so is the square root of another abscissa to its ordinate.

To find the Length of a Parabolic Curve, cut off by a Double Ordinate, fig. 20.

RULE.—To the square root of the ordinate, a b, add $\frac{1}{2}$ of the square of the abscissa, v b; the square root of that sum, multiplied by 2, will give the length of the curve nearly.

OF HYPERBOLAS.

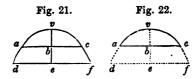

To find the Area of a Hyperbola, fig. 21.

RULE.—To five-sevenths of the abscissa, v b, add the transverse diameter, v e; multiply the sum by the abscissa, and extract the square root of the product. Then multiply the transverse diameter by the abscissa, and extract the square root of that product.

Then, to 21 times the first root add 4 times the second root; multiply the sum by double the product of the conjugate and abscissa, and divide by 75 times the transverse; this will give the area nearly.

To find the Length of a Hyperbolic Curve, fig. 22.

RULE.—To 21 times the square of the conjugate, a b, add 9 times the square of the transverse; also, to 21 times the square of the conjugate add 19 times the square of the transverse, and multiply each of these sums by the abscissa, v b.

To each of the two products add 15 times the product of the transverse and square of the conjugate.

Then, as the less sum is to the greater, so is the ordinate to the length of the curve nearly.

When the transverse, v e, the conjugate, d f, and the abscissæ, v b and b e, are given, to find the ordinate, a b, fig. 21.

RULE.—As the transverse diameter is to the conjugate, so is the square root of the product of the two abscissæ to the ordinate required.

Note.—In the hyperbola, the less abscissæ added to the axis gives the greater; and the greater abscissa subtracted from the axis gives the less.

When the transverse and conjugate diameters, and the ordinate, are given, to find the abscissæ.

RULE.—To the square of half the conjugate addthe square of the ordinate, and extract the square root of that sum.

Then, as the conjugate diameter is to the transverse, so is the square root to half the sum of the abscissæ.

To this half sum add half the transverse diameter for the greater abscissa, and subtract it for the less.

When the transverse diameter, ordinate, and abscissa, are given, to find the conjugate.

RULE.—As the square root of the product of the two abscissæ is to the ordinate, so is the transverse diameter to the conjugate.

When the conjugate diameter, the ordinate, and the two abscissee, are given, to find the transverse diameter.


RULE.—To the square of half the conjugate add the square of the ordinate, and extract the square root of that sum.

To this root add the half conjugate when the less abscissa is used; and subtract it when the greater abscissa is used; reserving the sum or difference.

Then, as the square of the ordinate is to the product of the abscissa and conjugate, so is the reserved sum or difference to the transverse.

MENSURATION OF SOLIDS.

OF CUBES AND PARALLELOPIPEDONS.

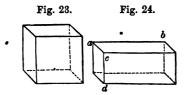

To find the Solidity of a Cube, fig. 23.

RULE.—Multiply the side of the cube by itself, and that product again by the side; the last product will be the solidity of the given cube.


and the will be a second or an experience of

To find the Solidity of a Parallelopipedon, fig. 24.

Rule.—Multiply the length, breadth, and depth or altitude, centinually together, or, in other words, multiply the length, a b, by the breadth, a c, and that product by the depth or altitude, c d; this will give the required solidity.

OF CYLINDERS AND PRISMS.



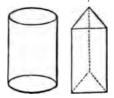


To find the Solidity of Cylinders and Prisms.

RULE.—Multiply the area of the base by the height of the cylinder or prism, and the product will give the solid content.

To find the Convex Surface of a Cylinder.

RULE.—Multiply the circumference by the length of the cylinder; the product will be the convex surface required.

OF CONES AND PYRAMIDS.

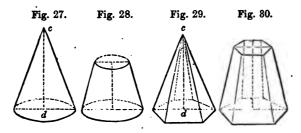

To find the Convex Surface of a Right Cone, or Pyramid, fig. 27.

RULE.—Multiply the perimeter, or circumference of the base, by the slant height, or length of the side of the cone, and half the product will be the surface.

To find the Convex Surface of a Frustum of a Right Cone, or Pyramid, fig. 28.

RULE.—Multiply the sum of the perimenters of the two ends by the slant height or side of the frustum, and half the product will be the surface required.

To find the solidity of a Cone, or Pyramid, figs. 27 and 29.

RULE.—Multiply the area of the base by the height, c d, and one-third of the product will be the content.


To find the Solidity of the Frustum of a Cone, fig. 28.

RULE.—Divide the difference of the cubes of the diameters of the two ends by the difference of the diameters; this quotient, multiplied by '7854 and again by one-third for the height, will give the solidity.

To find the Solidity of the Frustum of a Pyramid, fig. 30.

RULE.—Add to the areas of the two ends of the frustum the square root of their product, and this sum, multiplied by one-third of the height, will give the solidity.

OF WEDGES AND PRISMOIDS.

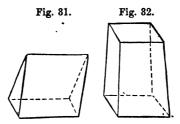

To find the Solidity of a Wedge, fig. 31.


RULE.—To the length of the edge of the wedge add twice the length of the back; multiply this sum by the height of the wedge, and then by the breadth of the back; one-sixth of the product will be the solid content.

To find the Solidity of a Prismoid, fig. 32.

RULE.—Add into one sum the areas of the two ends and four times the middle section, parallel to them; then, this sum multiplied by one-sixth of the height, will give the content.

Note.—The length of the middle section is equal to half the sum of the lengths of the two ends; and its breadth is equal to half the sum of the breadths of the two ends.

OF SPHERES.

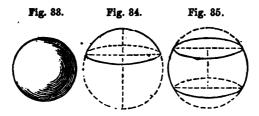

To find the Convex Surface of a Sphere, or Globe, fig. 33.

RULE.—Multiply the diameter of the sphere by its circumference.

Or, multiply 3.1416 by the square of the diameter; the product will be the convex surface required.

Note.—The convex surface of any zone or segment may be found, in like manner, by multiplying its height by the whole circumference of the sphere. To find the Solidity of a Sphere, or Globe, fig. 33.

RULE.—Multiply the cube of the axis by .5236; the product will be the solidity.

To find the Solidity of a Spherical Segment, fig. 34.

RULE.—To three times the square of the radius of its base add the square of its height; then, multiply the sum by the height, and the product by .5236.

To find the Solidity of a Spherical Zone or Frustum, fig. 35.

RULE.—To the sum of the squares of the radius of each end add one-third of the square of the height of the zone; this sum, multiplied by the said height, and the product by 1.5708, will give the solidity.


OF SPHEROIDS.

To find the Solidity of a Spheroid, fig. 36.

Rule.—Multiply the square of the revolving axis, c d, by the fixed axis, a b; the product, multiplied by .5236, will give the content.

To find the Solidity of the Segment of a Spheroid, figs. 37 and 38.

RULE.—When the base, e f, is circular or parallel to the revolving axis, c d, fig. 37, multiply the

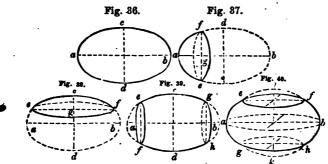

fixed axis, a b, by 3, the height of the segment, a g, by 2, and subtract the one product from the other; then multiply the remainder by the square of the height of the segment, and the product by 5236.

Then, as the square of the fixed axis is to the square of the revolving axis, so is the last product to the content of the segment.

RULE.—When the base, e f, is perpendicular to the revolving axis, c d, fig. 38, multiply the revolving axis by 3, and the height of the segment, c g, by 2, and subtract the one from the other; then, multiply the remainder by the square of the height of the segment, and the product by .5236.

Then, as the revolving axis is to the fixed axis, so is the last product to the content.


To find the Solidity of the Middle Frustum of a Spheroid, figs. 39 and 40.

RULE.—When the ends, e f and g h, are circu-

lar, or parallel to the revolving axis, c d, fig. 39, to twice the square of the revolving axis, c d, add the square of the diameter of either end, e f, or g h; then multiply this sum by the length, a b, of the frustum, and the product again by $\cdot 2618$; this will give the solidity.

RULE.—When the ends, e f and g h, are elliptical, or perpendicular to the revolving axis, l k, fig. 40, to twice the product of the transverse and conjugate diameters of the middle section, a b, add the product of the transverse and conjugate of either end; multiply this sum by the length, l k, of the frustum, and the product by 2618; this will give the solidity.

OF CIRCULAR SPINDLES.

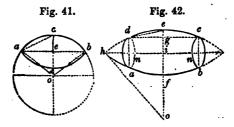

To find the Surface of a Circular Spindle, fig. 41.

RULE.—Multiply the length, a b, of the spindle by the radius, o c, of the revolving arc. Multiply also the said arc, a c b, by the central distance, o e, or distance between the centre of the spindle and centre of the revolving arc. Subtract this last product from the former; double the remainder; multiply it by 3.1416, and the product will give the surface of the spindle.

Note.—The same rule will serve for any segment, or zone, cut off perpendicularly to the chord of the revolving arc; but, in this case, the particular length of the part, and the part of the arc which describes it, must be used, instead of the whole length and whole arc.

To find the Solidity of a Circular Spindle, fig. 41.

RULE.—Multiply the central distance, o e, by half the area of the revolving segment, a c b e a. Subtract the product from one-third of the cube, a e, of half the length of the spindle. Then, multiply the remainder by 12.5664, or 4 times 3.1416, and the product will be the solidity required.


To find the Solidity of the Frustum, or Zone, of a Circular Spindle, fig. 42.

RULE.—From the square of half the length, h i, of the whole spindle, take one-third of the square of half the length, n i, of the frustum, and multiply the remainder by the said half-length of the frustum. Multiply the central distance, o i, by the revolving area, which generates the frustum. Subtract the last product from the former; and the re-

· was a second at the

mainder, multiplied by 6.2832, or twice 3.1416, will give the content.

OF ELLIPTIC SPINDLES.

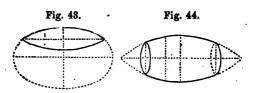

To find the Solidity of an Elliptic Spindle, fig. 43.

RULE.—To the square of the greatest diameter add the square of twice the diameter at one-fourth of its length; multiply the sum by the length, and the product by 1309, and it will give the solidity very nearly.

To find the Solidity of a Frustum or Segment of an Elliptic Spindle, fig. 44.


RULE.—Proceed, as in the last rule, for this, or any other solid, formed by the revolution of a conic section about an axis; namely,

Add together the squares of the greatest and least diameters, and the square of double the diameter in the middle between the two; multiply the sum by the length, and the product by 1309, and it will give the solidity.

Note.—For all such solids, this rule is exact when the body is formed by the conic section, or a

part of it revolving about the axis of the section; and will always be very near the truth when the figure revolves about another line.

OF PARABOLIC CONOIDS AND SPINDLES.

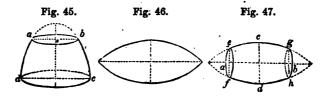

To find the Solidity of a Parabolic Conoid.

RULE.—Multiply the square of the diameter of the base by the altitude, and the product by 3927.

To find the Solidity of a Frustum of a Paroboloid, fig. 45.

RULE.—Multiply the sum of the squares of the diameters of the two ends, a b and d c, by the height of the frustum, e f, and the product by 3927.


To find the Solidit of a Parabolic Spindle, fig. 46.

RULE.—Multiply the square of the middle diameter by the length of the spindle, and the product by 41888, (which is eight-fifteenths of 7854,) and it will give the content.

To find the Solidity of the Middle Frustum of a Parabolic Spindle, fig. 47.

RULE.—Add together 8 times the square of the greatest diameter, c d, 3 times the square of the least diameter, g h, and 4 times the product of these two diameters; multiply the sum by the length, a b, and the product by 05236, (which is $\frac{1}{10}$ of 3.1416;) this will give the solidity.

OF CYLINDRICAL RINGS.

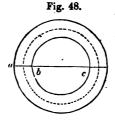

To find the Convex Surface of a Cylindrical Ring.

RULE.—To the thickness of the ring, a b, add the inner diameter, b c; multiply this sum by the thickness, and the product by 9:8696, (which is the square of 3:14159,) and it will give the superficies required.

To find the Solidity of a Cylindrical Ring.

RULE.—To the thickness of the ring add the inner diameter; then multiply the sum by the

.

square of the thickness, and the product by 2.4674, (which is one-fourth of the square of 3.1416,) and it will give the solidity.

To find the superficies or solidity of any regular body.

RULE 1.—Multiply the tabular area by the square of the linear edge, and the product will be the superficies.

RULE 2.—Multiply the tabular solidity by the cube of the linear edge, and the product will be the solidity.

Surfaces and Solidities of the Regular Bodies, when the linear edge is 1.

No. of Sides.	Names.	Surfaces.	Solidi ties.
4	Tetrahedron	1.73205	0.11785
6	Hexahedron	6.00000	1.00000
8	Octahedron	8.46410	0.47140
12	Dodecahedron	20.64578	7.66312
20	Icosahedron	8.66025	2.18169

TABLE of the Weight of Plat and Bolled Iron per foot, in length.

Breadth in Incires and Parts of an Incir.	2 14 14 14 14 1 4 4	1.26 1.10 0.94 0.86 0.78 0.63 0.47 0.81 1.68 1.47 1.26 1.18 1.05 0.84 0.68 0.47 0.81	2-52 2-20 1-89 1-73 1-57 1-26 0-94 0-63 8-86 2-94 2-62 2-81 2-10 1-68 1-26 4-20 3-67 8-15 2-88 2-62 2-10 1-57	5-04 4-41 8-78 8-46 8-15 2-52 5-88 5-14 4-41 4-04 8-67 2-94 6-72 5-87 5-04 4-62 4-20	7-56 6-60 5-67 5-19 4-72 8-40 7-35 6-80 5-77 9-24 8-07	10.08 8.80	
HES AND P.	21	0.94 0 1.41 1 1.89 1	2.83 3.78 4.72	5-66 6-61 7-56 6	8.50 9.45 10.39	11.84 10 13.22 15.12	_
R IN INC	24	1.05 1.57 2.10	8·15 4·20 5·25	6.30 7.35 8.40	9·55 10·50 11·55	12-60 14-70 16-80	8
Ваельт	23	1.15 1.78 2.81	8.46 4.62 5.77	6.93 8.08 9.24	10.39 11.65 12.70	13.86 16.17 18.48	28.10
	00	1.26 1.89 2.52	3.78 5.04 6.30	7.56 8.82 10.08	$11.94 \\ 12.60 \\ 13.86 \\ 18.86$	15·12 17·64 20·16	25.20
	100	1.36 2.04 2.73	4.09 5.46 6.82	$\frac{8.19}{9.55}$	12-28 13-65 15-01	16.38 19.11 21.84	27.39
	160	1.47 2.20 2.94	4.41 5.88 7.35	8.82 10.29 11.76	18-20 14-70 16-16	17.64 20.58 23.52	29-40
	60 614	1.57 2.86 8.15	4-72 6-30 7-87	9.45 11.02 12.60	14·16 15·75 17·82	18-90 22-05 25-20	81.50
	4	1.68 2.52 8.36	6.72 6.72 8.40	10.08 11.76 13.44	15.12 16.80 18.46	20-18 23-54 26-88	33.65
воца	al ai l bas		62(xx -464/2)xx	-		다 다 64 다하다	757

181
TABLE of the Weight of Cast-Iron Pipes, in Lengths.

Bore.	Thick.	Long.	Weight.	Bort.	Thisk.	Long	Weight.	Bors.	Thick.	Long.	Weight.
In.	In.	Ft.	C. gr. lb.	In.	In.	Ft.	C. qr. lb.	Inch.	In.	Ft.	C. qr. lb.
1	44	31 31	12	61	8	9	2 0 16 2 3 20	111	12	. 9	507
11	1444	43 43	12 21 21 1 4		40-11-00-04-1	9 9	3 2 21 4 1 21		# # 1	9	6 1 12 7 2 8 10 1 2
2	¥ .	6	18			9	6 0 14	12	1	9	5 0 24
21		6	1 8 2 0 1 16 2 10 3 10	7	1	9	3 0 7 3 3 20 4 3 5 6 2 4			9	628
47	4	6	2 10		I	9	4 3 5		i	9	7 8 20 10 8 0
1	i i	6	3 10		į	9	62 4	121	1	9	5 1 16
3	ł.	9	2 20	71	1	9	3 1 6 4 0 22		# #	9	639 810
	8	9	2 20 1 0 6 1 1 12			9	5 0 10		i	9	11 0 21
1	with cates with rates with rates with rates with	999999	136			9	700	13	1	9	5 2 20
31	1	9	2 1 0 3 0	8	7.5044 1 - 1.504 1	9	3 2 4 4 1 25 5 1 18 7 1 16 3 3 2 4 2 26 5 2 22	'		9	7 0 14 8 2 7
32	1	9	1 0 21		1		5 1 18		1	9	8 2 7 11 2 12
	į	9	1 2 14	١.,	ļį	9	7 1 16	131	1	9	537
	1	9	208	81	1	9	3 3 2 4 2 26		8	9	7 1 12 8 3 16
4	- 1	9			ŧ	9			i	9	11 8 24
-	i	9	1 8 12		_	9	738	14	1	9	60 4
	1	9	2 1 12	9	1	9	40 0 50 4		1	9	7 2 16
41		9 9 9	1 1 10 1 3 12 2 1 12 2 3 21 1 2 2 2 0 4 2 2 14		8	9	5 0 4 6 0 2 8 0 26		1	9	9 1 0 12 1 14
	į	9	204		į	9	8 0 26 4 0 18	141	1	9	6 0 24
	1	9	2 2 14 3 0 21	87	1	9 9 9	4 0 18		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	9	7 3 14 9 2 2
5		9		-	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	9	616		î	9	9 2 2 12 3 6
"	de de site et de de de site et de la	9	2 1 10			1	1	15	1	9	6 1 21
	1	9	2317	10	1	9	4 1 10 5 1 26		4	9	937
51	Į Į	9	1 3 10		111111111111111111111111111111111111111	9	4 1 10 5 1 26 6 2 14		111111111111111111111111111111111111111	9	13 0 26 16 3 5
	į	9	22 0		ī	9	9 0 8	151	1	9	6 2 14
	· #	9	8 0 18 3 8 7	10}	1	9	4 2 14 5 3 7		1	9	10 0 10 13 2 17
	i	9	5 0 12		4	9	700		11	9	17 1 6
6		9	200		_	9	920	16		9	7 0 22
	1	9	2 2 21 3 1 17	11	1	9	4 3 14 6-0 11		1	9	10 1 20
	1 1	9	3 1 17 4 0 16		*****	9	6-0 11 7 1 7		1 1 1	9	14 0 8 17 3 14
	i	9	4 0 16 5 2 20		i	9	7 1 7 9 3 20		11	9	17 3 14 21 8 4

Table of the Weight of one foot length of Malleable Fron.

SQUAR	R Inon.		Rouni	Inon.	
Seantling."	Weight.	Diameter.	Weight.	Circum.	Weight.
Inches.	Pounds.	Inches.	Pounds.	Inches.	Pounds.
1	0.21	1	0.16	1	0.26
- 4	0.47	4	0.37	11	0.41
-	0.84	i i	0-66	14	0.59
-	1.34	1 1	1.03	13	0.82
2	1.89	3	1.48	2	1.05
*	2.57	1 1	2.02	21-1-1-22-2-2-2-2-2-2-2-2-2-2-2-2-2-2-2	1.34
1	8.36	1	2.63	21	1.65
11	4.25	11	. 3-33	24	2.01
11	5.25	11	4.12	3	2.37
18	6.35	18	4.98	31	2.79
11	7.56	11	5.93	31	3.24
15	8-87	15	6.96	34	8.69
13	10.29	12	8-08	4	4.23
17	11-81	15	9.27	44	5.35
2	13.44	2	10.55	51	6.61
21	17-01	21	13.35		7.99
21 21 21	21.00	21/2	16.48	6	9.51
23	25-41	24 24 24 24 24 24 24 24 24	19.95	61 .	11-18
8	80.24	8	23.73	7.	12.96
37	41-16	81 81	27.85	71	14.78
4	58-76	84	32.32	8	16.92
41	68.04	84	87.09	81	19-21
5	84.00	4	42.21	9	21.53
6	120-96	41	53.41	10	26.43
7	164-64	5	65.93	12	81-99

Weight-of: Cast-Iron Plates, per superficial foot, from oneeighth of an inch to one inch thick.

 % inch.
 1 inch.

 Ba. oz.
 <t

Table of the Bore and Weight of Cocks.

Content of Copper.	Bore of Cock.	Weight of Cook.	Content of Copper.	Bore of Cook.	Weight of Cook.
Gallons. 80 50 80 120 150	Inches. 11 12 2 21 21 21	Pounds. 7 8 12 19 26	Gallons. 200 260 840 420 430 and upwards.	Inches. 23 8 81 82 83	Founds. 80 84 44 56 70

Three-fourths of the diameter of the bore, taken at the hinder part, will give the diameter of the cock at the mouth.

Table of the Dimensions and Weight of Coppers, from 1 to 208 galls. The Dimensions taken from lag to brim.

Inches, lag to brim.	Gallons.	Weight in lbs.	Inches, lag to brim.	Gallons.	Weight in lbs.	Inches, lag to brim.	Gallons.	Weight in lbs.
98 121 14 151 161 171 181 191 201	1 2 8 4 5 6 7 8 9	1½ 8 4½ 6 7½ 9 10½ 12 18½	24 24 25 25 25 26 26 26 27 27 27	15 16 17 18 19 20 21 22 28 24	22½ 24 25½ 27 28½ 80 81½ 88 84½ 86	29½ 80 82 84 85 86 87 88 89 40	29 80 86 43 48 58 58 68 67 71	48½ 45 54 64½ 72 79½ 87 94½ 100½ 106½
21½ 22 22½ 22½ 28½	11 12 18 14	16½ 18 19½ 21	27 ³ 28 28 ¹ 29	25 26 27 28	87½ 89. 40½ 42	45 50 55	104 146 208	156 ⁻ 219 812

Table of the Weight of Lead, per superficial foot, from onesixteenth of an inch to one inch thick.

Thick- nees.	Weight.	Thick-	Weight.	Thick- ness.	Weight.	Thick- ness.	Weight.
inch. 1-16th	1bs. 83	inch. 1-8th	lbs.	inch. 1-4th	lbs. 143	inch. 3-4ths	1bs.
1-12th	5	1-6th	10	1-8d	193	1 inch	59
1-10th	6	1-5th	12	1-half	291		

Weight of Lead Pipe of the usual thicknesses, per foot in length.

```
1-inch bore ..... 1 lb. 1 oz.
             ..... 1 lb. 8 oz. — 1 lb. 12 oz. — 2 lbs.
1
             ..... 2 lbs.
                             - 2 lbs. 11 oz. - 2 lbs. 14 oz.
11
             ..... 8 lbs.
                             - 8 lbs. 11 oz. - 4 lbs. 7 oz.
11
                             - 4 lbs. 11 oz. - 5 lbs. 9 oz.
             ..... 4 lbs.
             ..... 5 lbs. 9 oz. — 7 lbs.
                                             - 8 lbs. 5 oz.
24
             ..... 7 lbs.
                             - 8 lbs. 9 oz. - 10 lbs.
```

Weight of Copper Tubing of the usual thickness.

When the inside diameter is $\frac{1}{4}$ of an inch, 3 ounces; $\frac{3}{4}$ of an inch, 5 ounces; $\frac{1}{2}$ of an inch, 6 ounces; $\frac{5}{4}$ of an inch, 8 ounces; and $\frac{3}{4}$ of an inch, 10 ounces per foot.

Table of the Weight of Metals, Woods, Stones, Earths, etc.

METALS.	Weight of a cubic foot, in Ounces.	Weight of a cubic foot, in Pounds.	Weight of a cubic inch in Pounds.
Antimony in a metallic state, }	6,624	414.0	0.238
" glass of	4,946	309-1	0.182
sulphur of	4,064	254.0	0.147
" ore, gray and foliated	4,368	278.0	0.159
" radiated	4,440	277.5	0.161
Bismuth, cast	-9,823	614.0	0.355
" native	9,822	614.0	0.355
ore, in plumes	4,371	273-2	0.159
Brass, common cast	7,824	489.0	0.283
" cast, not hammered	8,396	524.8	0.303
" wire-drawn	8,544	584.0	0.808
Copper, cast	8,788	549.2	0.317
wire-drawn	8,878	554.9	0.320
" pyrites	4.080	255.5	0.148
" ore, Cornish	5,452	340-8	0.202
" white	4,500	281.2	0.163
" " gray	4,500	281.2	0.163
" " yellow	4,300	266.8	0.156
" blue	3,400	212.5	0.123
" prismatic	4,200	262.5	0.152
" foliated, florid-red	8,950	247.0	0.143
" radiated, azure	3,231	202.0	0.117
" emerald	3,300	206.2	0.120
Gold, pure, cast	19,258	1203-6	0.697
" the same, hammered	19,362	1210-1	0.701
" 22 carats, fine, standard	17,486	1093-0	0.688
" the same, hammered	15,589	974-4	0.564
" 20 carats, fine, trinket	15,709	982-0	0.568
" the same, hammered	15,775	986.0	0.570
Iron, cast	7,207	450-5	0.260
" bars	7,788	486.8	0.281
" pyrites, cubic	4,702	294.0	0.170
" radiated	4,775	298.5	0.178
" dodecahedral	4,830	302-0	0.175
" from Freyburg	4,682	292-6	0.170
" from Cornwall	4,789	299-4	0.178
ore, specular	5,218	326-1	0.189
" micaceous	5,070	817-0	0.184
" prismatic	7,355	459-8	0.266

Metals.	Weight of a cubic foot,	Weight of a cubic foot,	Weight of a cubic inch.
	in Ounces.	in Pounds.	in Pounds.
Lead, cast	11,352 .	709.5	0.410
" litharge	6,800	893-8	0.228
" ore, cubic	7,587	474.2	0.274
" horned	6,072	879-5	0.220
" corneous	6,065	879-1	0.220
" reniform	8,920	845.0	0.142
"	5,461	841.4	0.198
" " black	5,670	860.6	0.210
" brown	6,974	436-0	0.252
" white	7,236	452.2	0.261
" red or red-lead spar	6,027	876-8	0.219
" yellow, molybde-)	•		
nated	11,852	709.5	0.410
Mercury, solid, 40 deg. below	15 000	057.0	0 500
0° Fahr	15,632	977-0	0.566
" at 32 deg. of heat	18,619	851.2	0.498
" at 60 deg	13,580	848.8	0.491
" at 212 deg	18,375	886-8	0.484
Nickel, cast	7,807	488·0	0.282
" ore, called Kupper-)	6,648	415.5	0.240
nickel, of Saxe	0,040	410.0	0.240
" " of Bohemia	6,207 .	888.0	0.225
Platine, crude, in grains	15,602	975.1	0.570
" purified	19,500	1218.8	0.706
" the same, hammered	20,337	1271.1	0.736
" rolled	22,069	1879· 4	0.799
" " wire-drawn	21,042	1315.1	0.778
Silver, cast, pure	10,474	654.6	0.879
cast, pure, hammered	10,511	657.6	0.881
Parisian standard	10,175	636.0	0.368
the same, hammered	10,376	648.5	0.375
French coin	10,048	628.0	0.864
the same, hammered	10,408	650· 5	0.876
shilling, George III	10,534	658-4	0.880
Steel, soft	7,833	489-6	0-283
" hardened, not tempered	7,840	490.0	0.283
" tempered, not hardened	7,816	488.5	0.283
" tempered and hardened.	7,818	488-6	0.283
Tin, pure Cornish	7,291	455-6	0.263
" the same, hardened	7,299	456.0	0.263
" Molacca, fused	7,296	456.0	0.268
" hardened	7,307	456.8	0.268

WEIGHT OF MATERIALS.

METALS AND WOODS.	Weight of a cubic foot, in Ounces.	Weight of a cubic foot, in Pounds.	Weight of a cubic inch, in Pounds.
Tin ore, red	6,985	433-5	0.250
" black	6,901	481.4	0.250
" white		875.5	0.221
Tungsten	6,066	879-1	0.220
Uranium	6,440	402.5	0.232
Wolfram	7,119	445-0	0.257
Zinc, in its usual state	6,862	429.0	0.248
pure and compressed		449.5	0.259
formed by sublimation, and full of cavities	5,918	269-9	0-156
sulphate of	1,900	118-8	0.069
" saturated solution, the temp. 42 deg	1,886	. 86-6	0-050
Woods.			
Alder	800	50-0	0.029
Apple-tree	798	49-6	0.029
Ash	845	52.9	0.031
Bay-tree	822	51.4	0.029
Beech	852	53-2	0-081
Box, Dutch	912	57-0	0-068
" French		83-0	0.048
Brazilian, red	1,081	64.5	0.087
Campechy		57.1	0.088
Cedar, American		85.1	0.020
" Indian	1,815	82-2	0.047
" Palestine		38.4	0.022
" Wild	596	87.2	0.021
Cherry-tree		44.8	0.026
Citron		45.4	0.026
Coooa	1,040 240	65·0 15·0	0-037
Cork	,	40.2	0.003
Cypress Ebony, Indian		75.6	0:044
"American	1,209	83.2	0.048
Elder	695	43.5	0.025
Elm	1 777	42.0	0.024
Filbert	1 111	87.5	0.021
Fir, yellow		41.1	0.028
" white	569	35.6	0.021
" male	550	84.4	0.019

WOODS, STONES, EARTHS, ETC.	Weight of a cubic foot, in Ounces.	Weight of a cubic foot, in Pounds.	Weight of a cubic inch in Pounds.
Fir, female	498	31-1	0.018
Hazel	600	37.5	0.021
Jasmin, Spanish		48-1	0.028
Juniper	556	34.8	0.020
Lemon-tree	703	44-0	0.025
	1,383	88-4	0.048
Lignum-vitæ	604	37.8	0.022
Lime-tree	913	57.1	0.033
Logwood		66.5	0.038
Mahogany	1,063		2.222
Maple	750	47.0	0.027
Mastic-tree	849	53:1	0.031
Medlar	941	59.0	0.034
Mulberry	897	56.1	0.032
Oak, heart of, 60 years old	1,170	73.1	0.043
" dry	932	58.2	0.033
Olive-tree	927	58-0	0.033
Orange-tree	705	44.1	0.025
Pear-tree	661	41-4	0.024
Pomegranate-tree	1,354	84.6	0.049
Poplar	383	24.0	0.014
white, Spanish	529	33.1	0.019
Plum-tree	755	47.2	0.027
Quince-tree	705	44.1	0.025
Sassafras	482	30.1	0.017
Vine	1,327	83.0	0.048
Walnut		42.0	0.024
Willow	585	36.6	0.021
Yew, Spanish		50.5	0.029
" Dutch	788	49.2	0.028
STONES, EARTHS, ETC.		1	
Alabaster, yellow	2,699	168-8	0.098
" stained brown	2,744	171.5	0.099
veined		168.2	0.098
" Dallias		163.2	0.095
" Malaga		179.8	0.104
" Malta		168.8	0.098
" Oriental, white		170.6	0.099
" semi- transparent	2,762	172.6	0.100
" Piedmont	2,693	168-4	0.098

r	· · · · · · · · · · · · · · · · · · ·		, -
Stones, Earths, etc.	Weight of a cubic foot,	Weight of	Weight of
	in Ounces.	in Pounds.	in Pounds.
Alabaster, Spanish Saline	2,713	169-6	0.099
" Valencia	2,638	164.9	0-096
Ambergris	926	58-0	0.088
Amianthus, long	909	57.0	0.088
" short	2,818	144.6	0.084
Asbestos, ripe		161-1	0.094
" starry	8,078	192-1	0.111
Borax	1,714	107.1	0.062
Brick, earth	2,000	125.0	0-078
Chalk, British		174.0	0.100
" Biançon, coarse	2,727	170.5	0.098
" Spanish	2,790	174-4	0.100
Ceal, Cannel	1,270	79· 4	0.046
" Newcastle	1,270	79· 4	0.046
" Staffordshire	1,240	77.5	0.045
" Scotch	1,800	81.2	0.047
Cutler's-stone	2,111	132-0	0-076
Emery	4,000	250-0	0.144
Flint, black		162-0	0.094
" veined	2,612	163-2	0.095
" white	2,594	162-1	0.094
" Egyptian	2,565	160.4	0-098
Glass, flint	2,988	170.9	0-099
" white	2,892	168-2	0-098
" bottle	2,782	170.8	0.099
" green		165.1	0.096
" St. Gobin		155.5	0.090
" Leith, crystal		199.4 ,	0.116
" fluid	8,329	208-1	0.120
Granite, Aberdeen, blue kind	2,625	164-1	0.095
" Cornish	2,662	166-4	0.096
" Egyptian, red	2,654	165-9	0.096
" " gray	2,728	170∙5	0.099
" beautiful red	2,761	172.6	0.100
" Girardmor	2,716	169.8	0.098
" violet, of Gyromagny	2,685	168.0	0.098
" Dauphiny, red		165.2	0.096
" green		167-8	0.098
" radiated		166.8	0-097
" Semur, red		164.9	0.096
" Bretagne, gray		171.1	0.098
" yellowish	2,619	162.8	0-095

. Stones, Earths, etc.		Weight of a cubic foot, in Ounces.	Weight of a cubic foot, in Pounds.	Weight of a cubic inch in Pounds.
Granite, Carinthia, blue		2,956	184-8	0.107
Grindstone		2,143	134.0	0.077
	a, opaque	2,168	135.5	0.077
66	semi-transparent	2,306	144-1	0.083
**	fine ditto	- 2,274	142-1	0.082
**	cuneiform, cryst	2,306	144-1	0.088
44	rhomboidal	2,311	144.5	0.083
66	ditto, ten faces	2,312	144.5	0.083
Hone 3	white, razor	2,876	179.8	0.104
	ituminous substance	1,259	78-8	0.046
	one, green	3,182	* 199.0	0.116
TIME-PI	arenaceous	2,742	171-4	0.098
	white fluor	3.156	197.2	1.014
**		2,720	170-0	0.098
**	foliated	2,837	177.4	0.102
	granular	2,800	175.0	0.101
		7,000	437.5	0.252
Mangai	gray ore, striated	4.756	297-2	0.172
44		3,742	234.0	0.135
44	gray, foliated	3,233	202.1	0.117
44	red, from Kapnick	3,000	187.5	0.108
"	black	4,116	257.2	0.149
"	scaly	3,950	246.9	0.143
46	sulphuret of		162.5	0.094
	phosphate of	2,600	169.2	0.098
Marble		2,708		0.098
"	Biscayan, black	2,695	168·5 165·6	0.097
66	Brocatelle	2,650	200	0.099
10.55	Campanian, green	2,742	171.4	0.098
**	Carrara, white	2,717	169.9	0.098
**	Castilian	2,700	168-8	4 000
**	Egyptian, green	2,668	166.8	0.097
**	French	2,649	165-6	0.099
**	Grenada, white	2,705	169.1	0.098
44	Italian, violet	2,858	166.1	0.097
**	Norwegian	2,728	170.5	0.099
"	Parian, white	2,838	164.9	0.096
44	Pyrenean	2,726	170.4	0.098
44	Red	2,724	170-2	0.098
66	Roman violet	2,755	172.2	0.099
46	Siberian	2,718	169.9	0.098
**	Siennian	2,678	167.4	0.097
40	Switzerland	2,714	169.6	0.098

STONES, EARTHS, ETC.	Weight of a cubic foot, in Ounces.	Weight of a cubic foot, in Pounds.	Weight of a cubic inch in Pounds.	
Marble, Valencia.,	2,710	169-4	0.098	
Mill-stone	2,484	155.2	0.090	
" phosphoric	1.714	107.1	0.062	
Porcelain, China	2,385	149-1	0.086	
" Limoges	2,341	146.4	0.084	
" Sevres	2,146	134-1	0.077	
" British	2,120	1011	00	
Portland-stone	2,570	160-6	0.094	
Pumice-stone	915	57.2	0.033	
Paving-stone	2.416	151-0	0.088	
Purbeck-stone	2,601	162.6	0.094	
Porphyry, red	2,765	172.9	0.099	
	2,676	167.2	0.097	
" green	2,754	172.1		
reu, from Cordone	2,704		0.099	
green, from dieto	3,728 -	233.0	0.135	
rea, from Dauphiny	2,793	174-6	0.101	
Pyrites, copper	4,954	309-6	0.180	
" ferruginous, cubic	3,900	241.2	0.140	
round	4,101	256.4	0.149	
" of St. Domingo	3,440	215.0	0.125	
Rotten-stone	1,981	124-0	0.071	
Salt	2,130	133-1	0.077	
Serpentine, opaque, green, Italian	2,430	152-0	0.088	
" veined, } black & olive }	2,594	162-1	0.094	
" red and black	2,627	164-2	0.095	
" semi-transpa- rent, grained.	2,586	161-6	0.094	
" fibrous	3,000	187-5	0.108	
" from Dauphiny	2,669	167-0	0.097	
Slate, common	2,672	167-0	0.097	
44 new	2.854	178-4	0.104	
" black stone	2,186	136-6	0.079	
" fresh polished	2,766	173.0	0.099	
Stalactite, opaque	2,478	154.9	0.090	
" transparent	2,324	145.2	0.084	
Stone, Bristol	2,510	157.0	0.091	
" Burford		128-1	0.075	
" common	2,520	157.5	0.091	

	STONES, EARINS, ETC.	Weight of a cubic foot, in Ounces.	Weight of a cubic foot, in Pounds.	Weight of a cubic inch, in Pounds.
Stone,	Clicard, from Brachet	2,357	147-4	0-085
66	" from Ouchain	2,274	142-1	0-082
66	Notre-Dame	2,378	148-6	0-085
66	Oriental blue	2,771	178-2	0-099
44	paving	2,416	151-0	0-088
66	Portland	2,570	160-6	0.094
66	pumice	915	57·2	0-033
66	Purbeck	2,601	162-6	0.094
66	prismatic basaltes	2,722	170-1	0-099
46	rag	2,470	155.4	0-090
66	rotten	1,981	124-0	0-071
66	rock of Chatillon	2,122	182-6	0-076
66	Siberian blue	2,945	184-1	0.107
66	St. Cloud	2,201	187-6	0.079
46	St. Maur	2,084	127.1	0-075
66	touch	2,415	151-0	0-088
Sulphu	r, native	2,033	127.1	0-075
"	melted	1,991	124.5	0.071
Tale, b	lack	2,900	181.2	0.105
" •	rayon	2,089	130-6	0-075
	erman	2,246	140.4	0.081
"]	Iuscovy	2,792	174.5	0.101
	ellow	2,658	166-0	0.097

APPLICATION.

RULE.—Find, by the rules in the "Mensuration of Solids," the solidity of the material of which the weight is required, and multiply that solidity by the factor, in the foregoing table.

EXAMPLE 1.—Required the weight of a bar of iron 12 feet long and 1 inch square?

Weight of 1 inch bar-iron, as per table, page 185, is 0.281. 12 feet = 144 inches.

Then $.281 \times 144$ inches = 40.464, or 40_{10}^{2} , or 40_{10}^{3} lbs. nearly.

EXAMPLE 2.—Required the weight of a plank of yellow fir, 11 inches wide, 8 inches thick, and 20 feet long?

20 feet = 240 inches.

One cubic inch yellow fir, as per table, = 0.028; therefore $028 \times 240 \times 11 \times 8 = 182.160$, or 182.16, or 182.16, or 182.16. nearly.

100

THE STEAM-ENGINE.

THE power of the steam-engine is estimated by that exerted by the horse. A horse-power, as fixed by Watt, is equal to 33,000 lbs. avoirdupois, raised one foot high per minute; and one day's work of a horse, is this power, acting through eight hours. The pressure of steam is calculated in pounds avoirdupois on the square inch, in perpendicular inches of mercury, and in atmospheres; each atmosphere is estimated as equal to the average pressure of our atmosphere at the surface of the earth. The pressure of the atmosphere is reckoned as equal to that of 30 perpendicular inches of mercury; or 14.7 lbs. per square inch, or 11.55 lbs. per circular inch.

To find the Horses' power of an Engine, according to Mr. Watt's rule.

From the diameter of the cylinder in inches, subtract 1, square the remainder, multiply the square by the velocity of the piston in feet per minute, and divide the product by 5640. The quotient will be the number required.

GENERAL PROPORTIONS OF CONDENSING ENGINES.

Cylinder. — The best proportion is when the length is twice the diameter; because the cooling

surface is then least, in proportion to the content of steam.

Air-Pump and Condenser.—In double condensing engines, these are made, by Boulton and Watt's rule, each to measure one-eighth the content of the cylinder.

Velocity of the Piston to produce the best effect.— In engines working the steam expansively, 100 times the square root of the length of the stroke in feet, is the best velocity in feet per minute.

In engines not working expansively, 103 times the square root of the length of the stroke in feet, is the best velocity in feet per minute.

To find the quantity of Water required for Steam and Injection.—Multiply the area of the cylinder in feet, by half the velocity in feet for single, and by the whole velocity in feet for double engines. Add $\frac{1}{10}$ for cooling and wasting; and this, divided by 1497, (at the common pressure on the valve of 2 lbs. per circular inch,) will give the quantity of water required for steam per minute.

The quantity of water for injection should be 24 times that required for steam.

The diameter of the injection-pipe should be that part of that of the cylinder.

The valves should be as large as practicable.

The boiler should be capable of evaporating about 12 gallons per hour for each horse-power.

MON-CONDENSING, OR HIGH PRESSURE ENGINES.

 The length of the cylinder should be at least twice its diameter.

The velocity of the piston, in feet per minute, should be 103 times the square root of the length of the stroke in feet; or 100 times, if the steam is worked expansively.

The area of the cylinder should be, to the area of the steam-passages, as 4800 is to the velocity of the piston, found as above.

Form and Direction of Steam-pipes.—Enlargements in steam-pipes succeeded by contractions, always retard the velocity of the steam—more or less according to the nature of the contraction—and the like effect is produced by bends and angles in the pipes. These should, therefore, be made as straight, and their internal surface as uniform and free from inequalities as may be practicable. The following proportions of velocity, from Mr. Tredgold, will exemplify this:—

The velocity of motion that would result from	
the direct unretarded action of the column of	
fluid which produces it, being unity	1000 or 8
The velocity through an aperture in a thin plate	
by the same pressure is	·625 or 5
Through a tube from two to three diameters in	
length, projecting outwards	·818 or 6·5
Through a tube of the same length, projecting	
inwards	·681 or 5·45
Through a conical tube, or mouth-piece, of the	
form of the contracted vein	·988 or 7·9

Friction of the parts of Engines.—The amount of pressure upon the piston, expended in over-coming friction, appears, on an average, to be not more than 1 lb. to the square inch, in well-constructed engines. The difference in loss of power from this cause, between beam and direct action engines, is found by experiment to be inconsiderable.

Mr. Tredgold's Estimate of the Distribution and Expenditure of the Steam in an Engine.

		ENGINE.

Let the pressure on the boiler be	10-000
Force required to produce motion of the steam.	
in the cylinder will be 0-0	69
Loss by cooling in the cylinder and pipes 0-10	60
Loss by friction of piston and waste 2-0	00
Force required to expel the steam into the at-	
mosphere 0-0	5 9 -
Force expended in opening the valves, and	
friction of the various parts 0-6	22
Loss by the steam being cut off before the end	
of the stroke 1-0	00
Amount of deductions ——	8.920
Effective pressure	6.080

IN A CONDENSING ENGINE.

Let the pressure on the boiler be		10.000
Force required to produce motion of the steam		
in the cylinder	0.070	
	0.160	
Loss by friction of the piston and waste	1.250	

ž

Force required to expel the steam through the passages	0.070	•
Force required to open and close the valves, raise the injection water, and overcome the		
friction of the axes	0.630	
Loss by the steam being cut off before the end		
of the stroke	1.000	
Power required to work the air-pump	0.500	
Amount of deductions -		8.680
Effective pressure	•••••	6.820

Steam-power required to drive various kinds of Machinery.

A series of experiments instituted by Mr. Davison, at Messrs. Truman and Co.'s Brewery, gave the following results:

1st. That an engine which indicated 50 horses' power when fully loaded, showed, after the load and the whole of the machinery were thrown off, 5 horses', or one-tenth of the whole power.

- 2d. 190 feet of horizontal, and 180 feet of upright shafting, with 34 bearings, whose superficial area was 3300 square inches, together with 11 pair of spur and bevel wheels, varying from 2 feet to 9 feet in diameter, required a power equal to 7.65 horses.
- 3d. A set of three-throw pumps, 6 inches in diameter, pumping 120 barrels per hour, to a height of 165 feet, = 4.7 horses.
 - 4th. A similar set of three-throw pumps, 6 inches

in diameter, pumping 160 barrels per hour, to a height of 140 feet, = 6.2 horses.

5th. A set of three-throw pumps, 5 inches in diameter, raising 80 barrels per hour, to a height of 54 feet, = 1 horse.

6th. A set of three-throw "starting" pumps, pumping 250 barrels of beer per hour, to a height of 48 feet, = 4.87 horses.

7th. Two pair of iron rollers and an elevator, grinding and raising 40 quarters of malt per hour, = 8.5 horses.

8th. An ale-mashing machine, mashing at the time 100 quarters of malt, = 5.68 horses.

9th. Two porter-mashing machines, mashing at the time, 250 quarters of malt, = 10.8 horses.

10th. 95 feet of horizontal Archimedes screw, 15 inches diameter, and an elevator, conveying 40 quarters of malt per hour, to a height of 65 feet, = 3.13 horses.

Steam-engines for Cotton-mills.—With a mean pressure on the piston, with low pressure steam, of 5 lbs. per circular inch, each circular inch will drive three spindles of cotton yarn twist with the machinery. For mule yarn, add 15 to the number of the yarn, and multiply the sum by 26, for the number of spindles for each circular inch of piston.

Or, one-horse power will drive 100 spindles with cotton yarn, and machinery. For mule yarn, add

15 to the number of the yern, and multiply by 8, for the number of spindles for each horse-power.

Economy of Steam-jackets.—The following Table presents the results of three experiments made in France to ascertain the economy of steam-jackets to the cylinders of engines, in the consumption of fuel. In the 1st, the steam first entered the jacket round the cylinder, and passed from thence into the cylinder. In the 2d, the steam entered the cylinder directly, without passing into the jacket. In the 3d, the steam entered both the cylinder and jacket directly, by means of separate communications between them and the boiler. The result shows an increase in the consumption of fuel of nearly five-sevenths, in the 2d experiment, over that in the 1st.

Experiments.	Dura- tion of Experi-		tion of					Water evapo- rated		
Exper	me		Coals.	Water.	Boil'r.	Cylin- der.	Con- dens'r.	Coals.	Water.	by 1 lb. of Coal.
1 2 8	h. 48 88 82	80	1482·7 1982·12 1469·5	8387·1 11111·59 7822·23	8.5	2·57 2·55 2·73		34·28 58·16 45·22	331.7	5·66 5·61 5·82

MARINE ENGINES.

The following Dimensions are given by Mr. Russell, for the Cylinders of Marine Engines of various power:—

Horse Power.	Inches Diameter.	Stroke.	Horse Power.	Inches Diameter.	Stroke.
10	20	2 ft. 0 in.	125	5 9	6 ft. 0 in.
20	27	2 ft. 6 in.	150	62	6 ft. 3 in.
80	82	8 ft. 2 in.	175	66	6 ft. 6 in.
40	86	8 ft. 6 in.	200	70	7 ft. 0 in.
50	40	4 ft. 0 in.	250	76	7 ft. 6 in.
60	48	4 ft. 8 in.	800	82	8 ft. 0 in.
70	46	4 ft. 6 in.	850	87	8 ft. 6 in.
80	49	4 ft. 9 in.	400	92	9 ft. 2 in.
90	52	5 ft. 0 in.	500	100	10 ft. 0 in.
100	55	5 ft. 6 in.	1		

The improvements in Marine Engines have of late years been various and extensive. Those in oscillating and direct action engines have far exceeded previous calculation. In recently constructed war-steamers with screw-propellers, the whole machinery is placed seven or eight feet below the water-line, and the screw is driven by direct action at the rate of 45 revolutions per minute.

RAILWAYS.

Summary of the average Items of the Construction of a Mile of Railway. By Mr. Dempsey.

"The average quantities, per mile, of the several items which are involved in the formation of a double line of railway, of the 4 ft. 8½ in. gauge, up to the completion of the permanent way, and exclusive of the stations and buildings, and locomotive and carrying stock, may be computed as follows:

"The quantity of excavations in 342 miles of double line of railway, (comprised in ten railways,) amounted to 35,338,000 cubic yards, giving an average of about 103,330 yards per mile, or 58.71 cubic yards of earth-work for each yard forward of the line. Assuming the width of the formation level to be 10 yards, or 30 feet, (which is about the average,) with an additional width of 5 yards on each side, for ditches, hedges, &c., the slopes at 11 base to 1 of height,-and also assuming the whole line to be, either in cutting or embankment, of an average depth of height of 11 feet,—we shall require 56.78 cubic yards of earth-work per yard forward of the line. This is sufficiently near to the actual average of 58.71 yards to answer the purpose of this general calculation. The average width of land required will thus be,

Central width. Base of Slopes. Ditches, &c.

80 + 16.5 + 16.5 + 15 + 15 = 93 ft. or 31 yds., which will give about 11½ acres of land per mile. Allowing for severance, &c., this may be assumed at 12 acres.

"The quantity of ballasting, 30 feet wide, and 18 inches thick, will equal 5 cubic yards per yard forward, or 8800 cubic yards per mile.

"The sleepers, transverse, 8 feet long, and 10 by 5 inches, placed 2 feet 6 inches apart, will require 11.733 cubic feet, or 235 loads of timber; or 4224 sleepers per mile.

"The chairs required, supposing the rails to be rolled in lengths of 15 feet each, will be 1408 joint chairs, and 7040 intermediate; and their weight, reckoning each joint chair at 20 lbs., and each intermediate chair at 15 lbs., will be 12 tons 11 cwt. 1 qr. 20 lbs., and 47 tons 2 cwt. 3 qrs. 12 lb., respectively, or 59 tons 14 cwt. 1 qr. 4 lbs. altogether.

"The rails, assuming the weight at 56 lbs. per yard, will weigh 176 tons,—1408 lengths being required.

"If two oak trenails and two iron spikes be required for each chair, 16,896 of each will be wanted per mile, with 8448 wooden keys for fixing the rails in the chairs.

"If felt be interposed between the chairs and sleepers, and the former be assumed at 10×5 inches bearing surface, 2933 square feet of felt will be required per mile.

"The timber in the side fences, formed of posts 8 feet long, 6×4 inches, 9 feet apart, with four rails $5 \times 2\frac{1}{2}$ inches, and intermediate upright stay 3×2 inches, will consume as follows: 1174 posts = 1565 cubic feet; 4696 rails = 3666 cubic feet; 1174 stays = 269 cubic feet; or a total of 110 loads.

"Of the masonry, timber, iron, &c., &c., in bridges, viaducts, culverts, drains, retaining walls, &c., scarcely any estimate can be formed. Taking the average of a few cases, the masonry would appear to amount to about 110,000 cubic feet per mile; but in some cases from 30 to 50 per cent. of this quantity is substituted by timber and iron."

Weight of Rails.

On railways with much heavy traffic, the weight of the rails should be, to insure firmness and durability, as on the London and North-western Railway, about 75 lbs. per yard, and their bearing-surface about $2\frac{1}{2}$ inches broad. The best distances for the bearings being about 2 feet 9 inches to 3 feet asunder.

Atmospheric Railway.

An experimental line of Atmospheric Railway on Hallette's principle, about 100 yards long, has been laid down, to exhibit its peculiar valve, and its working power, on a small scale. The valve is closed by longitudinal caoutchouc pipes, covered with cotton and leather, and filled with compressed air, at about 5 lbs. to the inch pressure. The wear and tear of these elastic lips, by the continual rubbing of the wedge which opens them as the train passes, can be satisfactorily ascertained only by experiments on a large practical scale.

Menai Tubular Bridge.

The tubular bridge designed by Mr. Stephenson for crossing the Menai Straits, or the line of the Chester and Holyhead Railway, is proposed to be rectangular, and of the following dimensions, viz. length 450 feet, width 15 feet, height 30 feet; made of iron plates one inch in thickness. Numerous experiments have been made on the strength of iron tubes, by Messrs. Hodgkinsen and Fairbairn, to determine the requisite strength, and the weight it would support. The estimated strength of this tube would be equal to 1100 tons applied in the centre, including its own weight; or 747 tons, deducting its own weight. But this being the full strain that the tube would bear without breaking, a

much less weight must be fixed upon as within the point of safety. The addition of chains is proposed to add to the support of the tube, and experiments are still in progress to determine a form that would sustain a more considerable weight. Its practicability has been established, in the opinion of the engineers, by the results of experiments on a tube 75 feet long, $2\frac{1}{2}$ feet wide, and $4\frac{1}{2}$ feet deep, weighing about 5 tons; which broke with a weight on the middle of 35 tons.

Resistance to Railway Trains.

The resistance of the air to railway trains is estimated, by Mr. Barlow, at not more than ten pounds on each ton weight, on the average. The loss of velocity estimated by comparison of the actual with the theoretical velocity, is caused by the consumption of power in overcoming the inertia of the train, and not from defect or loss of power in the action of the engine.

A paper was read at the meeting of the British Association in September, by Mr. Scott Russell, on "The law which governs the resistance to the motion of railway trains at high velocities." His experiments have been undertaken "on a large scale, with railway trains of a great variety of size and weight, and at velocities as high as sixty-one miles an hour," and were combined with those formerly

made by the Association, and by Mr. W. Harding; and he presents the results in the following Table.

Mr. Russell remarks that the experiments show not only a great amount of resistance at high velocities, but likewise a great variation and anomaly in the results. He describes the resistance as con-Firstly, the friction of sisting of three elements. the axles and wheels, as an ascertained quantity, equal in the best carriages to 6 lbs. per ton of the train. Secondly, the resistance of the air; which, acting on a solid body such as a railway train, he regards as much less in amount than that inferred by Smeaton, from experiments on thin plates. And, thirdly, a large amount of resistance, increasing with the velocity of the train, and amounting, at ten miles an hour, to about 3 lbs. per ton, at thirty miles to 10 lbs., and at sixty miles an hour to 20 lbs. per ton; and which Mr. Russell ascribes to the concussions, oscillations, frictions of various kinds, &c., which are produced at high velocities.

Mr. Russell has constructed a formula compounded of these resistances, the comparison of the results of which, with those of the actual experiments, is shown in the Table; but the great anomalies observable at the various velocities remain yet unexplained, and appear incapable of being accounted for on any theory. Much is probably due to the combined action of inaccuracy in construction, and variation in the quality of the materials

employed. A doubt may likewise be suggested whether, in practice with heavy trains, the quantity of the first-named element of resistance, the friction of the axles, &c., is constant at all velocities.

TABLE referred to above.

Ne, of Experiment.	Uniform velocity maintained in miles, per hour.	Resistance in lbs., per ton, by Experiment.	Resistance in lbs., per ton, by Formula.
1	10	8.40	9.30
2	14	12.60	18.90
8 4	14	12.60	18.90
4	29	16.50	15.70
5	81	23.80	25.40
6	81	18.20	16.30
7	32	22.50	27.20
8	38	22.50	22.70
9	88	15.68	16.90
10	88	15.96	17.00
11	84	16.60	17-80
12	84	∕ 16.95	17.30
18	84	17.70	17-30
14	1 84	28.30	27.20
15	84	25.00	23.10
16	35	22.50	26.10
17	86	22.50	22.40
18	86	22.40	21.50
19	87	17.50	18.20
.20	87	25.00	28.40
21	89	80.00	81.00
22	41	22.99	19.60
23	41	26.78	19.60
24	45	21.70	21.00
25	4 6	28.10	21.30
26	46	80.31	81.00
27	47	83.70	33.10
28	50	82.90	86.30
29	51	26.40	23.00
80	53	41.70	42.10
81	61	52.60	54 ·80

New Sand Cement.

A metallic sand cement, of great hardness and tenacity, has been lately used on the London and South-western Railway and elsewhere, in forming mortar and concrete. The sand is brought from Swansea, and the proportions of the cement are,—for mortar, the metallic sand, ordinary sand, and lime, in equal quantities; for concrete, metallic sand 1 part, lime 1 part, gravel 6 parts. The iron contained in the metallic sand becomes disseminated through the mass, and acts as a firm bond to the whole composition.

GAUGE OF RAILWAYS.

The experiments instituted by the advocates of the broad and narrow gauge, respectively, with the object of testing their respective merits as to speed and power, have not led to any satisfactory conclusion. The direction of the wind, the state of the rails, and the inclination of the road operated so variously during the trials, as to destroy all uniformity in the conditions of the several experiments.

Mr. Bidder, in his report on the recent gauge experiments, gives the following results:—

NARROW GAUGE.

Date of experiment	Dec. 30.	Dec. 31.	Dec. 81.
Draft in tons	50	50	80

Date of experiment	Dec. 30.	Dec. 31.	Dec. 31.
Distance travelled in miles	42		
		106 12	
		19708	
Ditto do. per mile, lb	291		
Ditto do. per hour, lb			
Cubic feet per hour	1624		
Coke consumed, lb	1381		
Water evaporated per lb. of			
coke, lb	9.3	9.6	8.8
Coke consumed per mile, lb	81.2	24	
Pressure	*****	71	
Engine	******	A	
Surface of fire-box, feet square		58	
Areas of blast pipes in circu-	•	•••	
lar inches	*****	836 41	
Contents of cylinders, do	*****	4725	
BROAD	GAUGE.		
Date of experiment	Dec17.	Dec. 16.	Dec. 16.
Date of experiment Draft in tons			
, -	60		80
Draft in tons	60 101‡	80 100]	80 101 1
Draft in tons Distance travelled in miles	60 101‡ 12 42	20 100½ 117 4	80 101 1 121 8
Draft in tons	60 101‡ 12 42 22596	20 100½ 117 4	80 101½ 121 8 24838
Draft in tons	60 101½ 12 42 22596 282	80 100\frac{1}{2} 117 4 28489 233\frac{2}{4}	80 101½ 121 8 24838 245
Draft in tons	60 101½ 12 42 22596 282 11820	80 100¼ 117 4 23489 233¾ 12020	80 101½ 121 8 24838 245 12300
Draft in tons	60 101½ 12 42 22596 282 11820	80 100¼ 117 4 23489 233¾ 12020	80 101½ 121 8 24838 245 12300
Draft in tons	60 101½ 12 42 22596 282 11820	80 100¼ 117 4 23489 233¾ 12020	80 101½ 121 8 24838 245 12300
Draft in tons	60 101½ 12 42 22596 282 11820	80 100¼ 117 4 23489 233¾ 12020	80 101½ 121 8 24838 245 12300 196¾
Draft in tons	60 101½ 12 42 22596 282 11820 198	20 100½ 117 4 23489 12020 192½	80 101½ 121 8 24838 245 12800 196¾ 7-12
Draft in tons	60 101½ 12 42 22596 232 11820 198	20 100½ 117 4 23489 12020 192½	80 101½ 121 8 24838 245 12800 196¾ 7-12
Draft in tons	60 101½ 12 42 22596 232 11820 198	20 100½ 117 4 23489 12020 192½	80 101½ 121 8 24838 245 12800 196¾ 7-12
Draft in tons	60 101\frac{1}{42} 12 42 22596 232 11820 198 7-8 29-6	20 100½ 117 4 23489 12020 192½	80 101½ 121 8 24838 245 12800 196¾ 7-12
Draft in tons	60 101\frac{1}{2} 12 42 22596 232 11820 198 7.8 29.6 Ixion 97	20 100½ 117 4 23489 12020 192½	80 101½ 121 8 24838 245 12800 196¾ 7-12
Draft in tons	60 101\frac{1}{2} 12 42 22596 232 11820 198 7.8 29.6 Ixion 97	20 100½ 117 4 23489 12020 192½	80 101½ 121 8 24838 245 12800 196¾ 7-12
Draft in tons	60 101\frac{1}{2} 12 42 22596 232 11820 198 7-8 29-6 Ixion 97	20 100½ 117 4 23489 12020 192½	80 101½ 121 8 24838 245 12800 196¾ 7-12

The friction of air through tubes, Mr. Bidder observes, is tolerably well ascertained: it appears that, with a pressure of .04 lbs. per inch, the velocity of the air through the long tubes of the A engine used in the narrow gauge experiments was 16 miles per hour; and through the shorter tubes of the Ixion 18 miles per hour.

Opinion of Mr. W. Cubit on Uniformity of Gauge, (Evidence before Select Committee of the House of Lords.)

Proposes a 6-feet gauge, the alteration to which would cost between £500 to £1000 per mile.

Says that the bridges and tunnels on the existing narrow gauge railways are wide enough to admit of rails 6 feet apart, the only alteration necessary in the carriages being that of bringing out the wheels 6 or 8 inches each side, as the carriages themselves are already wide enough, and the wheels would still be under the body of the carriage.

The enlarging this gauge to 6 feet would make a better gauge, and enable them to bring the centre of gravity of the engine lower, and allow larger engines than can now be used with safety upon the narrow gauge.

Long engines (as long as 20 feet) may be made to run with very large driving wheels, and go safely round curves, by using what is called in America a "Bogy Carriage," viz. supporting the engine on two trucks with four low wheels each, which trucks could turn independently at each end, while large driving wheels without flanges may be placed between the trucks.

Estimates the altering of carriages to the 6 feet gauge at less than £30 each, and the engine and tender at £350 to £400 each.

Extract from a Return to the House of Lords, of the WORKING STOCK of Existing Railways.

DIOOR Of Distant			
	Locomotive Engines,	Passenger Carriages.	Luggage Vans, &c.
Arbroath and Forfar	5	12	110
Birmingham and Gloucester	40	46	586
Bristol and Gloucester	11	20	213
Chester and Birkenhead	10	60	36
Dublin and Drogheda	15	69	105
Dundee and Newtyle	7	9	138
(Also 3 stationary engines.)			
Durham and Sunderland		23	28
(13 stationary engines.)			
Dunfermline and Charlestown		2	189
(Horses used on this line.)			
Eastern Counties	66	204	1142
Edinburgh and Dalkeith	—	28	104
(Horses used on this line.)			
Edinburgh, Leith and Granton		···· 8	—
(Horses used on this line.)			
Glasgow, Paisley, Kilmarnock, &c	31	188	1884
Grand Junction-including Livery			
and Manchester and Bolton	and		
Leigh	128	348	1978
Gravesend and Rochester			
Great North of England	87	46	717
Great Western			
Hartlepool	5	8	6
* **			

RAILWAYS.

· Lac	emetive arises.	Passager Carriages	Lamp
Hayle and Redruth			
(Also 2 stationary engines.)			
Hull and Selby	17	45	238
Lancaster and Preston Junction			
Leicester and Swannington	8	4	13
Lianelly and Liandillo	4	2	454
London and Blackwall			
(Eight stationary engines.)			•
London and Brighton	44	163	423
London and Croydon	8	56	89
London and Southwestern			
Manchester and Birmingham	27	100	961
Manchester, Bolton, and Bury	12	52	228
Maryport and Carlisle			
Midland	109	251	1842
Newcastle and Darlington	87	81	2515
Newcastle and North Shields	5	28	124
Newcastle and Carlisle	26	67	653
(Also hire 470 coal-wagons.)			
Newtyle and Coupar	1	2	48
Norfolk			
North Union			
Pontop and South Shields	13	—	2649
(Newcastle and Darlington passen-			
ger-carriages)			
Preston and Wyre	8	40	108
St. Helen's			
Sheffield, Ashton, and Manchester			
Stockton and Hartlepool, and Cla-		.,	
rence		28	67
South-eastern			
Taff Vale			
Ulster			
Wishaw and Coltness			
York and North Midland			

Cost of European Railways per Mile, extracted from a Report published by order of the House of Commons.


Belgian Lines.	
Ghent to Courtray	£6,620
Ghent to Bruges	7,675
Landen to St. Trond	8,990
Louvain to Tirlemont	19,957
Liege to Prussian Frontiers	40,797
Ans to Liege.	62,825
Average of State Lines	17,182
French Lines.	
Paris and Orleans	24,890
Paris and Rouen	28,754
Strasbourg and Basle	18,485
Amiens and Boulogne	20,000
Rouen and Havre.	28,300
Avignon and Marseilles	28,600
Orleans and Bordeaux	20,830
The Centre.	18,050
The North with Calais Branch	19,900
Paris and Lyons.	24,840
Lyons and Avignon, with Branch to Grenoble	25,800
Austrian Lines.	
Olmütz to Prague	11,657
Brünn to Bohmisch Trübau	16,860
Prussian Lines.	
Berlin and Potsdam	12,323
Magdeburg and Leipsic	10,179
Cologne to Belgian Frontiers	28,884
English Lines, with Scotch and Irish.	
Arbreath and Forfar	9,214
Chester and Birkenhead	34,198
	•

BAILWAYS.

Datin and Develop	*** ***
Dublin and Kingstown	£15,652
Dundee and Arbroath	59,122
Durham and Sunderland	8,570
	14,281
Edinburgh and Glasgow	85,024
Eastern Counties and North-eastern	46,355
Glasgow, Kilmarnock, and Air	20,607
Glasgow and Greenock	85,451
Gravesend and Rochester	13,333
Great Western	43,885
Hartlepool	26,660
London and Birmingham	38,440
London and Blackwall	287,678
London and Brighton	56,981
London and Croydon	80,400
London and South-western	28,004
Manchester, Bolton, and Bury	70,000
Manchester and Birmingham	61,624
Manchester and Leeds	64,582
Midland	30,949
Newcastle, Darlington, and Brandling	22,992
Newcastle and Carlisle	17,837
Newcastle and North Shields	44,233
Norfolk	18,150
North Union, and Bolton and Preston	27,799
Preston and Wyre	22,261
Sheffield and Manchester	48,543
South-eastern	44,412
Taff Vale	21,610
Ulster	14,334
York and North Midland, &c	25,924
and the state of t	,

Problems, and one which is most generally used.

For example, supposing we wish to find out the variation from a straight line on a curve of 400 feet radius with a locomotive whose extreme centre of wheels are 20 feet. We wish to know this to find the width of tire to be put on the forward driving wheels to prevent falling off the rails. We are supposing now an 8-wheel engine, 4 drivers, and 4 wheels in a truck.

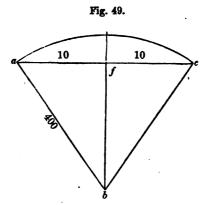

Now we have the radius, a b, 400 feet, and the chord, a c, 20 feet, which is the distance the wheel centres are apart; from b, as a centre, we describe the arc, a d c, with b a, as radius. Bisect the chord, a c, at f; then a f will equal 10 feet, and f c equal

10 feet. Now to find the distance, f d, which is the versed sine:

Rule.—Find the square of a b, and from it subtract the square of a f; the remainder find the square root of, then the product; subtract from a b, and the remainder will give the distance, d f.

400 100 . 400	•
160000 100	
3) 159900 (399-87 9	400 399·87
69) 699 621 789)7800 7101	0·13 Feet, Answer.
7988)69900 63904	
79967)599600 559769	
39831	

A Table of the Fractional Parts of an Inch, when divided into thirty-two parts; likewise a foot of twelve inches; reduced to decimals.

Parts.	Decimals.	Parts.	Decimals.	Parts of a Foot.	Decimals
3 z 03125 0625 3 z 09375 125 125 25 15625 3 and 3 z 15625 4 and 3 z 21875 21 and 3 z 225	and 3/2 2 and 1/6 2 and 3/2 5 and 3/2 5 and 1/6 5 and 1/6 5 and 1/6 5 and 1/6 5 and 1/6 5 and 3/2	·53125 ·5625 ·59375 ·625 ·65625 ·6875 ·71875 ·75 ·78125	11 10 9 8 7 6 5 4	·9166 ·8333 ·75 ·6666 ·5833 ·5 ·4166 ·3333 ·25	
and 35 and 35 and 35 and 35 and 35	·3125 ·375 ·40625 ·4375 ·46875 ·5	and 1/6 and 3/2 f and 3/2 f and 1/6 f and 3/2	·8125 ·84375 ·875 ·90625 ·9375 ·96875	21 11 riso coler sign infraction infraction	·1666 ·0833 ·07291 ·0625 ·0528 ·04166 ·03125 ·02083 ·01031

The great utility of the above table is to facilitate the multiplication and division of parts of an inch; also in calculations. For example, suppose a sheet of iron to be $20\frac{5}{2}$ inches long, $12\frac{5}{4}$ and $\frac{1}{22}$ inches broad, and $\frac{5}{4}$ and $\frac{5}{32}$ of an inch in thickness, what number of cubic inches does it contain?

168	RAILWAY	6.
20-625	263.58	
12.78	•84	
165000	105432	•
144375	210864	
41250		
20625	221.4072	cubic inches of iron.
263.58750		

THE LEVER.

1. A LEVER is an inflexible bar, either straight or bent, supposed capable of turning round a fixed point, called the fulcrum.

According to the relative positions of the weight, power, and fulcrum, on the lever, it is said to be of three kinds, viz. when the fulcrum is somewhere betwixt the weight and power, it is of the first kind; when the weight is between the power and the fulcrum, it is of the second kind; and when the power is between the weight and the fulcrum, it is of the third kind, thus:

104			P.
1st.	W.	Y	
94	Ţ.	`	P.
ul.	F.	w.	
24		P.	w
3d.	F.		

- 2. In the first and second kinds there is an advantage of power, but a proportionate loss of velocity; and in the third kind there is an advantage in velocity, but a loss of power.
- 3. When the weight × its distance from the fulcrum = the power × its distance from the fulcrum, then the lever will be at rest, or in equilibrio; but if one of these products be greater than the other, the lever will turn round the fulcrum in the direction of that side whose product is the greater.
- 4. In all the three kinds of levers, any of these quantities, the weight, or its distance from the fulcrum, or the power or its distance from the fulcrum, may be found from the rest, such, that when applied to the lever, it will remain at rest, or the weight and power will balance each other.

5. Weight × its distance from fulc.

Dist. of power from fulc.

Power × its distance from fulc.

Dist. of weight from fulc.

7. Weight × dist. weight from fulc.

Power.

- Power × dist. power from fulc.

 8. Weight. = dist. weight from fulc.
- 9. In the first kind of lever, the pressure upon the fulcrum = sum of weight and power; in the second and third = their difference.

10. If there be several weights on both sides of the fulcrum, they may be reckoned powers on the one side of the fulcrum, and weights on the other.

Then, if the sum of the product of all the weights × their distances from the fulcrum be = to the sum of the products of all the powers × their distances from the fulcrum, the lever will be at rest; if not, it will turn round the fulcrum in the direction of that side whose products are greatest.

- 11. In these calculations the weight of the lever is not taken into account; but if it is, it is just reckoned like any other weight or power acting at the centre of gravity.
- 12. When two, three, or more levers act upon each other in succession, then the entire mechanical advantage which they give, is found by taking the product of their separate advantages.
- 13. It is to be observed in general, before applying these observations to practice, that if a lever be bent, the distances from the fulcrum must be taken, as perpendiculars drawn from the lines of direction of the weight and power of the fulcrum.

Example.—In a lever of the first kind, the weight is 16, its distance from the fulcrum 12, and the power is 8; therefore by No. 7 of this chapter, $\frac{16 \times 12}{8} = 24$ the distance of power from the fulcrum.

In a lever of the second kind, a power of 3 acts at a distance of 12; what weight can be balanced at a distance of 4 from the fulcrum? Here, by No. 6, $\frac{3 \times 12}{4} = 9$ weight.

In a lever of the third kind the weight is 60, and its distance 12, and the power acts at a distance of 9 from the fulcrum; therefore, by No. 5, $\frac{60 \times 12}{9}$ = 80 the power required.

If there be a lever of the first kind, having three weights, 7, 8, and 9, at the respective distances of 6, 15, and 29, from the fulcrum on one side, and a power of 17 at the distance of 9 on the other side of the fulcrum, then a power is to be applied at the distance of 12 from the fulcrum, in the last-mentioned side; what must that power be to keep the lever in balance?

Here $(6 \times 7) + (15 \times 8) + (29 \times 9) = 423 =$ the effect of the three weights on the one side of the fulcrum, and $17 \times 9 = 153 =$ the effect of the power on the other side. Now, it is clear that the effect of the weight is far greater than the effect of the power; and the difference, 423-153 = 273, requires to be balanced by a power applied at the distance of 12, which will evidently be found by dividing 270 by 12, which gives 22.5, the weight required.

14. The Roman steel-yard is a lever of the first kind, so contrived that only one movable weight is employed.

Table showing the Effects of a Force of Traction of 100 pounds, at different Velocities, on Canals, Railroads, and Turnpike Roads.*

	TION.		LOAD MOVED BY A POWER OF				
Miles	Feet	On a	Canal	On a level	Railway.	On a leve pike l	
per Hour.	Second.	Tot. Mass moved.	Useful effect,	Tot. Mass moved.	Useful effect.	Tot. Mass moved.	Useful effect.
21	3.66	1bs. 55,500	lbs. 39,400	1bs. 14,400	1bs. 10,800	lbs. 1,800	1,350
3	4.40	38,542	27,861	14,400	10,800	1,800	1,350
31	5.13	28,316	20,100	14,400	10,800	1,800	1,350
4	5.86	21,680	15,390	14,400	10,800	1,800	1,350
5	7.33	13,875	9,850	14,400	10,800	1,800	1,350
6	8.80	9,635	6,840	14,400	10,800	1,800	1,350
7	10.26	7,080	5,026	14,400	10,800	1,800	1,350
8	11.73	5,420	3,848	14,400	10,800	1,800	1,850
9	13.20	4,282	3,040	14,400	10,800	1,800	1,850
10	14.66	3,468	2,462	14,400	10,800	1,800	1,350
13.5	19.9	1,900	1,350	14,400	10,800	1,800	1,350

^{*}The force of traction on a canal varies as the square of the velocity; but the mechanical power necessary to move the boat, is usually reckoned to increase as the cube of the velocity. On a railroad or turnpike, the force of traction is constant, but the mechanical power necessary to move the carriage increases as the velocity.

TABLE of the Tractive Power of the Locomotive Engine, when the adhesion is from one-fifth to one-fifteenth that of the insistent weight of the Driving Wheels.

Insistent weight			TRAC	ток ін Г	S. WHEN IS	не Арневі	DEL MI SI MO	Traction in Les. when the Adresion is in the pollowing Ratios	RATIOS.	:	
wheels, in tons.	0	6 +-	+	00	ed-	갋	₽		13	#	14
5	2240	1866-6	1600	1400	1244.4	1120	1018-1	933-8	861.5	800	746-6
<u>.</u>	2688	2440	1920	1680	1493.8	1844	1221.8	1120	1033-8	960	896
7	8186	2618.8	2240	1960	1792	1568	1425.6	1306.6	1206-1	1120	1045.8
œ	8584	2986-6	2560	2240	$1991 \cdot 1$	1792	1629	1493-4	1378-4	1280	1194-6
စ	4082	8860	2880	2520	2240	2016	1882.7	1680	1550-7	1440	1344
5	4480	8788-8	8200	2800	2489	2240	2036-3	1866-6	1728	1600	1493.3
=	4928	4106-6	8520	30 8 0	2787.7	2464	2240	2053.8	1895.4	1760	1642.6
12	5876	4480	8840	3860	2986-6	2688	2443-6	2240	2067-7	1920	1792
18	5824	4853.8	4160	3640	$8285 \cdot 5$	2912	2647.2	$2426 \cdot 6$	2240	2080	1941-8
14	6272	$5226 \cdot 6$	4480	8920	8484.4	8186	2851	2618.8	$2412 \cdot 8$	2240	2090-6
16	6720	5600	4800	4200	8783.3	3360	3054.5	2800	2584.6	2400	2240
16	7168	5978-8	5120	4480	3982.2	8584	8280	2986-6	2757	2560	2889-8
17	7610	6846.7	5440	4760	$4281 \cdot 1$	8808	8488.7	8178-8	2929-8	2720	2538⋅6
18	8064	6720	5760	5040	4480	4082	3687·5	8860-0	3101-6	2880	2688
19	8512	7098-8	6080	5320	4729	4256	8891	8546.7	8274.0	80 4 0	2887.8
28	8960	7466-7	6400	5600	4977-7	4480	4094.8	8788-8	8446-8	8200	2986-7
21	9408	7840	6720	5880	5226·6	4704	4298·8	8920	8618-6	8860	8186
22	9866	8218·8	7040	6160	5475.5	4928	4502.2	4106-7	8791-0	8520	3285·8
28	10804	8586.7	7800	6440	5724·4	5152	4706.7	4298·8	3968·8	8680	8884⋅6
24	10725	8960	7680	6720	· 5978·8	5876	4909.5	4480	4185-6	8840	8484
25	11200	9888·8	8000	7000	$6222 \cdot 2$	5600 0	5091	4666.7	4807.6	4 000	8688.8

TO CONSTRUCT AN ECCENTRIC WHEEL.

From the centre of the shaft O take O P equal to half the length of the stroke which you intend the wheel to work; and from P as a centre, with any radius greater than P D, describe a circle, and this circle will represent the required wheel. For every circle, drawn from the centre P, will work the same length of stroke, whatever may be its radius; as, whatever you increase the distance of the circumference of the circle from the centre of motion on the one side, you will have a corresponding increase on the opposite side equal to it.

Thus, suppose an eccentric wheel to work a stroke of 18 inches is required, the diameter of the shaft being 6 inches; and if 2 inches be the thickness of metal necessary for keying it on to the shaft, then set off, from O to P, 9 inches; and 9+5=14 inches, the radius of the wheel required.



Formulæ.

Let S represent the space the end A is moved through by the eccentric wheel, and s the space the slide moves.

Then, A B $\times s =$ B C \times S; and this equation,

solved for A B, B C, S, and s, gives the following:

$$A B = \frac{B C \times S}{s} (1.) \qquad S = \frac{A B \times s}{B C} (3.)$$

B C =
$$\frac{A B \times s}{S}$$
 (2.) $s = \frac{B C \times S}{A B}$ (4.)

Mode of Setting the Eccentrics on the Main Shaft of Driving Wheels of Locomotives.

We suppose the use of an additional eccentric for working the valves half stroke.

Fig. 51.

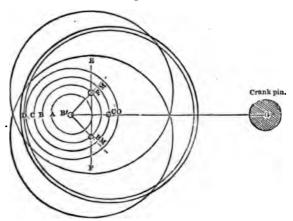


Fig. 50 represents the true position of eccentrics on right-hand side of engine when the rock arm is used. Cylinders and eccentric rod supposed to be horisontal, the crank being on its forward centre, g.

- B' G is the length of crank.
- B' D is half radius of axle.
- B' B equal half the throw of valve.
- B' C equal half the throw of cut-off eccentric.
- B' A equal lap and lead.

Draw the line, E F, perpendicular to the line of eccentric rod and tangent, to the lap and lead circle, and when it intersects the throw of valve at the points, F M and B M, is the centre of the eccentrics; the cut-off eccentric, c o, is set on the line of crank when the throw of eccentric intersects tha line.

Crank Drawn on the Centre.



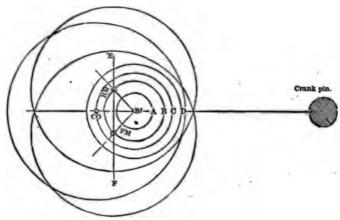


Fig. 52 is the same construction as fig. 51, work-

ing direct to the valve, without the intervention of rock arm, only the centres of eccentrics are on the left side instead of right, and the forward motion eccentric is below, and the backward motion eccentric above.

E F line drawn at right angle with eccentric rod.

A B' lap and lead.

B B' ½ throw of valve.

B' C ½ throw of cut-off eccentric.

B' D radius of axle.

For any other angle of cylinder or eccentric rod, the construction is precisely similar. The angle of connecting rod, being so trifling, is not taken into consideration in practice.

Tire-Bars, Lengths required to make Inside Diameter.

Thickness when finished.	Inside Diameter.	Outside Diameter.	Length of Bar required.
Inches,	Inches.	Inches.	Feet. Inches,
13	88 88 <u>\$</u>	86 42	10 8
21	89	44	10 9
1 1 1	425	46	11 7
2	44 [51	48 55	12 2 13 83
2 2	56	60	$13 ext{ } 8\frac{3}{4}$ $15 ext{ } 2\frac{1}{4}$
2	68	72	18 8
2	80	84	21 8
2	92 .	96	24 2

BRASS.

The alloy of 2 zinc and 1 copper may be crumbled in a mortar when cold. The ordinary range of good yellow brass, that files and turns well, is from about 41 to 9 oz. to the pound. Brazing solders—3 copper and 1 part zinc, (very hard;) 8 parts of brass and 1 zinc, (hard;) 6 parts brass and 1 tin, 1 zinc, (soft.) Solder for iron, copper, and brass, consists of nearly equal parts copper and zinc. Muntz's metal—40 parts zinc, 60 copper. proportions between the extremes of 50 zinc and 50 copper, and 37 zinc and 63 copper, will roll and break at the red-heat; but 40 zinc to 60 copper are the proportions preferred. Large bells-41 oz. to 5 oz. of tin to 1 lb. of copper. Tough brass for engine work— $1\frac{1}{2}$ lb. tin, $1\frac{1}{2}$ zinc, and 10 lbs. copper. Brass for heavy bearings—2½ oz. tin, ½ oz. zinc, and 1 lb. copper. Babbit's metal—1 lb. copper, 5 lbs. regulus of antimony, and 50 lbs. tin. Melt copper first, add the antimony with a small portion of the tin, charcoal being strewed over the metal in the crucible to prevent oxidation.

ON THE SAFETY VALVE AND LEVER.

THE apertures for safety valves require no nice calculations. It is only necessary to have the aper-

ture sufficient to let the steam off from the boiler as fast as it is generated, when the engine is not at work.

The safety valve is loaded sometimes by putting a heavy weight upon it, and sometimes by means of a lever with a weight to move along to suit the required pressure.

When the whole weight is put on the valve, to find the pressure to each square inch:—

Multiply the square of the diameter of the valve by 7854, and this product will give the area, or number of square inches in the valve.

And if the whole weight upon the valve, in pounds, be divided by the number of square inches in the valves, the quotient will give the number of pounds pressure to each square inch in the valve.

Ex.—If a weight of 40 lbs. be placed upon a valve, the diameter of which is 3 inches, what will be the pressure to each square inch?

 $3^2 \times .7854 = 7$ square inches; then, $40 \div 7 = 5$ lbs. per square inch.

ON THE SAFETY VALVE LEVER.

This being a lever of the third order, it may be calculated as follows; and also the weight of the lever will be considered; for when the lever is large and the valve is small, the weight of the lever is such as to produce a very sensible pressure upon the valve to each square inch. But previous to the

calculation, it will be necessary to make the following remarks.

Since the fulcrum is at one end, and the power or the action of the steam between that end and the movable weight, (see fig. 2, where F is the fulcrum, A is the point where the steam acts, and W the movable weight,) some have taken A for the fulcrum, and thereby have committed very great errors; for, according to this rule, a weight put on at twice the distance from A that A is from F, would, if the weight of the lever were not considered, be twice its own weight upon the valve; whereas, if it had been reckoned from F, its real fulcrum, it would be three times its own weight upon the valve.

It has been shown, and indeed it is almost self-evident, that if we have two, three, or four times, &c. the leverage, we will have two, three, or four times &c. the effect produced respectively, the weight remaining the same. Therefore divide the length of the lever by the distance between the fulcrum and valve, and the quotient gives the leverage; and the leverage, multiplied by the weight, gives the whole weight upon the valve; and this product, divided by the number of square inches in the valve, gives the weight per square inch. Or, if the weight per inch be known, multiply the number of pounds per square inch by the number of square inches, and

this product gives the whole weight upon the valve, which, divided by the leverage, gives the weight. Or, if the weight be given, divide by it, and the quotient will give the leverage; and the leverage, multiplied by the distance between the fulcrum and the valve, gives the length of the lever.

Ex.—Given the whole length of the lever 24 inches, the distance between the fulcrum and valve 3 inches, the diameter of the valve $2\frac{1}{2}$ inches; required the weight put on at the end of the lever, so as to have 50 lbs. per square inch upon the valve; also to divide the lever so as to have 40, 30, 20 lbs. &c. upon the valve with the same weight.

 $(2.5)^2 \times .7854 = 4.9 = \text{area of the valve.}$

 $4.9 \times 50 = 245$ lbs. whole weight on the valve.

 $\frac{245}{8} = 30.625 \text{ lbs.} = \text{the weight which must be}$

put on at the end of the lever to give 50 lbs. per square inch.

And $\frac{4.9 \times 40}{30.625} = 6.4$; then, $6.4 \times 3 = 19.2$

inches, the distance from the fulcrum the weight must be placed to have 40 lbs.

 $24 - 19 \cdot 2 = 4 \cdot 8$; that is, the weight must be shifted in towards the fulcrum $4 \cdot 8$ inches to have 40 lbs. per inch; and for 30 lbs. per square inch, move it in $4 \cdot 8$ inches more, &c.

V.

To find what weight must be put on at the end of a Lever to give any number of pounds pressure per square inch upon the Valve, the weight of the Lever being taken into consideration.

RULE.—Find the area of the valve by multiplying the square of the diameter by .7854; then multiply this area by the number of pounds per square inch which you want upon the valve, and this product will give the whole weight upon the valve.

Next divide the whole length of the lever by the distance between the fulcrum and valve,* and the quotient will give the leverage which any weight will have when put on at the end of the lever.

Multiply this leverage by half the weight of the lever, and the product will give the pressure on the whole valve from the action of the lever alone: add to this product the weight of the valve, &c. and subtract the sum from the whole weight on the valve above mentioned; the remainder will give the weight which will be pressing on the valve from the action of the weight alone; and this, divided by the leverage, gives the weight itself.

Note.—If, instead of considering half the weight of the lever to act at the end, we conceive the whole weight to act at the centre of gravity, the result will be the same, the lever being uniform.

^{*} What is here meant by the distance between the fulcrum and valve, is that part of the lever between the fulcrum and the point where the lever acts upon the valve.

Ex. 1.—Given the length of the lever 24 inches, the distance between the fulcrum and valve 3 inches, the weight of the valve 3 lbs. the weight of the lever 8 lbs.; it is required to determine what weight must be put upon the end of the lever that it may press 30 lbs. per square inch, the diameter of the valve being 3 inches.

Now, $3 \times 3 = 9$, and $9 \times .7854 = 7.0686 = area$, or number of square inches in the valve; and 7 × 30 = 210 lbs. = whole weight upon the valve; and if we conceive the whole weight of the lever to be concentrated in its centre of gravity, and acting with the leverage of the centre of gravity, the lever being uniform throughout its length, we have, since 12 = the distance between the fulcrum and centre of gravity, $12 \div 3 = 4$, the leverage of the centre of gravity; and 3 lbs. the weight of the lever, multiplied by 4, gives 12 lbs. the weight that the lever will give upon the whole valve. 12 lbs. added to 8 lbs. the weight of the valve, gives 15 lbs. the weight from both lever and valve; and this, subtracted from 210 lbs. gives 195 lbs., the weight upon the valve from the action of the weight alone, independent of the weight of the lever; and this, divided by the leverage, gives the weight. 24 + 3 = 8 = leverage of the end of the lever; and $195 \div 8$ gives $24\frac{2}{3} = 24.375$ lbs. the weight put on at the end of the lever to give 30 lbs. per inch,

٠.

when the weight of the lever is taken into consideration.

Now, this being determined, we must mark the lever in those points, where the above found weight will give 20 lbs. per inch, and also 10 lbs. per inch. This is found by inverting the above operation; for you have the weight given, the valve, &c. to find the leverage; and the leverage, multiplied by the distance between the fulcrum and valve, gives the distance from the fulcrum the given weight must be put. Thus $7 \times 20 = 140 =$ whole weight upon the valve; from this subtract 15 lbs., the weight from the valve and lever, and the remainder gives what the weight must put on = 125 lbs.; and this weight, divided by the given weight, 24.375 lbs., gives 5.128 = the leverage; and $5.128 \times 3 = 15.384$ inches from the fulcrum, for 20 lbs. per inch.

Now, to determine the distance from the fulcrum when there are 10 lbs. per inch, proceed as above. Thus, $7 \times 10 = 70$ lbs. upon the whole valve; subtract from this again 15 lbs., the weight of the lever and valve, and 55 remains; and $55 \div 24.375 = 2.256 = \text{leverage}$; and $2.256 \times 3 = 6.768$ inches from the fulcrum.

Ex. 2.—Given the length of the lever 16 inches, and its weight 2 lbs.; the distance between the fulcrum and valve 2 inches, and the weight of the valve and spindle $1\frac{1}{2}$ lb.; to find what weight must be put on at the end of the lever to press 40 lbs.

per square inch upon the valve, the diameter of which is 2 inches.

The square of 2 is 4; hence,

·7854

4 .

3.1416 = area of the valve, or number of square inches in it.

40 lbs.

125.6640 lbs. = weight on the whole valve.

 $16 \div 2 = 8 =$ leverage which the weight will have at the end.

Now, to consider half the weight of the lever to act at the end, is the same as to consider the whole weight of the lever to act at its centre of gravity, the lever being uniform.

- 1 lb. = half the weight of the lever.
- 8 = leverage at the end of the lever.
- 8 lbs. = weight on the whole valve from the action of the lever.
- 1.5 lbs. = weight of valve, &c.
- 9.5 lbs. = weight on the valve from the action of both lever and valve.

125.664

9.5

116.164

That is, the weight put on at the end of the lever must be such as to press $116\cdot164$ lbs. on the whole valve; but the leverage of the weight is 8, therefore one-eighth part of this weight will do. Thus, $116\cdot164 \div 8 = 14\cdot52$ lbs. = weight which must be put on at the end to press 40 lbs. per inch upon the valve. Now, to mark the lever where we will have 35 lbs., 30 lbs., 25 lbs., 20 lbs., &c. per square inch, we must proceed thus:—

3.1416 = number of square inches in the area of the valve.

35

157080

94248

109.956

9.5

100.456 = weight on the valve from the action of the weight.

And 100.456 ÷ 14.52 = 6.918 = the leverage which the weight must have; and if this leverage be multiplied by the distance between the fulcrum and valve, thus:—

6.918 = leverage.

2 = distance between the fulcrum and valve.

13.836 = the distance along the lever from the fulcrum.

16 - 13.886 = 2.164 inches = the distance which the weight must be moved in towards the valve.

And if you want 30 lbs. per square inch, move it in 2.164 inches farther, and so on, as far as you please, making the division always 2.164 inches.

TABLES OF SAFETY VALVE LEVERS.

1. Diameter of the valve 4 inches, weight of the valve, &c. 3 lbs., length of the lever 24 inches, the distance between the fulcrum and valve 4 inches, and the weight of the lever 8 lbs.; then the weight put on at the end of the lever, to give 30 lbs. per square inch upon the valve, will be 58.332 lbs., or 58 lbs. 5½ oz. nearly.

2. Length of the lever 16 inches, distance between the fulcrum and valve 2 inches, diameter of valve 2 inches, the weight of the lever 4 lbs., and weight of valve ½ lb.; it will require a weight of 9.7185 lbs. to be put on at the end of the lever to give 30 lbs. per square inch upon the valve; and the distances in inches which the weight must be from the fulcrum to give 10, 15, 20, 25, and 30 lbs. are respectively as follow:—

10 lbs.	15 lbs.	20 lbs.	25 lbs.	80 lbs.
8.068	6.801	9.534	12.767	16

If the weight be taken off from the lever, then the weight on the valve from the action of the lever alone will give 5½ lbs. per square inch.

Note.—9.7185 lbs. is 9 lbs. $11\frac{1}{2}$ oz.

3. Weight of lever 4 lbs., and weight of valve, &c. 1 lb.; whole length of the lever 24 inches, distance between the fulcrum and valve 3 inches, diameter of valve 3 inches, weight put on at the end 42.05375 lbs. Distances from the fulcrum in inches:—

10 lbs.	20 lbs.	80 lbs	40 lbs.	50 lbs.
8.8292	8.8719	18-9146	18-9573	24

SHRINKAGE OF TIRE BARS.

The general allowance for shrinkage is $\frac{1}{8}$ of an inch to the foot of diameter of wheel centre.

EXAMPLE.—Suppose we wish to turn a centre of driving wheel to fit a tire which is 5 feet the inside diameter, equal to 188½ inches circumference; then we must turn the centre & larger in circumference, which is 189¼ inches.

Shrinkage of Castings.

In making all patterns of work, we make an allowance of $\frac{1}{8}$ inch larger per foot in cast iron; for brass allow $\frac{1}{8}$ full.

SPRING STREL.

I give the following result of experiment made by me with spring steel. The bar made use of was supported on both extremities, and the weight suspended in the middle. The following are the results:—Length between the fulcrum 2 feet; width of bar 1 inch.

Number of Experiments.	Bending Weight.	Deflection.	Thickness of Bar.
1 .	82 lbs.	τ ⁵ δ	₫8
2	118 lbs.	1 5	1 5€

The table shows that the deflection was equal in both cases. At the same time it appears that the squares of the thickness are to each other as the bending weights, $\frac{62}{118} = \frac{25}{88}$ very near, thus conforming to the general theory.

For calculating the Radius of a Curve when the Angle of Deflection and Chord are given.

Railroad curves are always laid off with chords of 100 feet, and we often find, when speaking of

curves, the angle of deflection is merely given. Now to find the radius:

5730 feet are a common radius, which is equal to a deflection of 1°.

RULE.—Divide the number of degrees deflected into 5730; the product will be the radius of the curve.

EXAMPLE.—We have a curve with a deflection of 6°, and the chord 100 feet.

6)5730

955 feet radius of curve; Ans.

Table of Revolutions, per Mile, of Driving Wheels, and consumption of Steam, Water, and Fuel, for each sized Wheel; taking the Steam admitted to each Cylinder as exactly one cubic foot at a gross pressume 1147 lbs., or 100 lbs. on the spring balance.

Di	RIVING WH	EELS.		Consum	PTION PER	MILE.	
Diame- ter.	Circum- ference.	Revolu- tions per Mile.	Steam.	Water.	Wood.	Anthracite Coal.	Coke.
Feet.	Feet.	Number.	Cubic feet.	Pounds.	Pounds.	Pounds.	Pounds.
8	9.4248	560.2	2240	478	119.5	76.33	59.75
31	11.0	480-1	1920.8	409.74	102.41	68.8	51.22
4	12.566	420.3	1680.4	358-45	89.61	59.76	44.8
41	14.137	878.4	1498.6	818.6	79.65	58.1	89.8
5	15.708	836.8	1345.2	286.94	71.73	47.82	35.87
51	17.278	305.6	1222.4	261.35	65.34	43.56	82.67
6	18.849	280.5	1122	239.33	5 9·83	39.89	29.92
61	20.420	258.6	1034.4	220.65	55.14	36.78	27.58
7	22.0	240.0	960	204.78	51.2	84.18	25.6
71	28.562	224.0	906 -	$193 \cdot 26$	48.81	82.21	24.16
8	25.182	210.1	840.4	$179 \cdot 27$	44.82	29.88	$22 \cdot 41$
81	26.708	197.4	789.6	168.43	42.11	28.07	21.05
9	28.274	186.7	745.8	159.1	39.8	26.5	19.9
91	29.845	176.9	707.6	150.9	37.82	25.15	18.9
10	81-416	168.0	672	148.85	85.84	23.89	18∙



WEIGHTS REQUIRED TO CRUSH SOME OF THE MORE IMPORTANT MATERIALS.

1. Metals. On the s	quare inch.
Cast iron	115813-177776 lbs.
Brass, fine	
Copper, molten	117088
Copper, hammered	108040
Tin, molten	15456
Lead, molten	
2. Woods.	
Oak	88605147
Pine	1928
Pinus sylvestris	1606
Elm	1284
8. Stones.	
Gneiss	4970
Sandstone, Rothenburg	2556
Brick, well baked	1092

THE MECHANICAL POWERS.

Power is compounded of the weight or expansive force of a moving body multiplied into its velocity.

THE power of a body which weighs 40 lbs., and moves with the velocity of 50 feet in a second, is the same as that of another body which weighs 80 lbs., and moves with the velocity of 25 feet in a

second; for the products of the respective weights and velocities are the same.

 $40 \times 50 = 2000$; and $80 \times 25 = 2000$.

Power cannot be increased by mechanical means.

Power is applied to chanical purposes by the lever, wheel and axle, pulley, inclined plane, wedge, and serew, which are the simple elements of all machines.

The whole theory of these elements consists simply in causing the weight which is to be raised, to pass through a greater or a less space than the power which raises it; for, as power is compounded of the weight or mass of a moving body multiplied into its velocity, a weight passing through a certain space may be made to raise, through a less space, a weight heavier than itself.

Power is gained at the expense of space, by the lever, the wheel and axle, the pulley, the inclined plane, the wedge, and the screw.

LEVER.

Case 1.—When the fulcrum of the lever is between the power and the weight.

RULE.—Divide the weight to be raised by the power to be applied; the quotient will give the difference of leverage necessary to support the weight in equilibrio. Hence, a small addition either of

leverage or weight will cause the power to preponderate.

EXAMPLE 1.—A ball weighing 3 tons, is to be raised by 4 men, who can exert a force of 12 cwt.: required the proportionate length of lever?

$$8 \text{ tons} = 60 \text{ c}$$
 and $\frac{60}{12} = 5$.

In this example, the proportionate lengths of the lever to maintain the weight in equilibrio, are as 5 to 1. If, therefore, an additional pound be added to the power, the power side of the lever will preponderate, and the weight will be raised. But, although the ball is raised by a force of only one-fifth of its weight, no power is gained, for the weight passes through only one-fifth of the space. The products, therefore, arising from the multiplication of the respective weights and velocities are the same.

EXAMPLE 2.—A weight of 1 ton is to be raised with a lever 8 feet in length, by a man who can exert, for a short time, a force of rather more than 4 cwt.: required at what part of the lever the fulcrum must be placed?

 $\frac{20 \text{ cwt.}}{4 \text{ cwt.}} = 5$; that is, the weight is to the power as

5 to 1; therefore, $\frac{8}{5 \times 1} = 1$ foot and a third from the weight.

EXAMPLE 3.—A weight of 10 lbs. is placed one

and the second

foot from the fulcrum of a lever; required the power to raise the same when the length of the lever on the other side of the fulcrum is five feet?

$$\frac{40 \times 1}{5} = 8$$
 lbs., Ans.

CASE 2.— When the fulcrum is at one extremity of the lever and the powers the other.

RULE.—As the distance between the power and the fulcrum is to the distance between the weight and the fulcrum, so is the effect to the power.

EXAMPLE 1.—Required the power necessary to raise 120 lbs., when the weight is placed six feet from the power, and two feet from the fulcrum?

As 8:2::120:30 lbs., Ans.

EXAMPLE 2.—A beam, 20 feet in length, and supported at both ends, bears a weight of two tons at the distance of eight feet from one end; required the weight on each support?

 $\frac{40 \text{ cwt.} \times 8 \text{ feet}}{20 \text{ feet}} = 16 \text{ cwt. on the support that is}$

furthest from the weight; and $\frac{40 \times 12}{20 \text{ feet}} = 24 \text{ cwt.}$ on the support nearest to the weight.

WHEEL AND AXLE.

RULE.—As the radius of the wheel is to the radius of the axle, so is the effect to the power.

EXAMPLE.—A weight of 50 lbs. is exerted on the periphery of a wheel whose radius is 10 feet; re-

quired the weight raised at the extremity of a cord wound round the axle, the radius being 20 inches.

 $\frac{50 \text{ lbs.} \times 10 \text{ feet} \times 12 \text{ inches}}{20 \text{ inches.}} = 300 \text{ lbs., Ans.}$

PULLEY.

RULE.—Divide the weight to be raised by twice the number of pulleys in the lower block; the quotient will give the power necessary to raise the weight.

EXAMPLE.—What power is required to raise 600 lbs., when the lower block contains six pulleys?

 $\frac{600}{6\times2}=50 \text{ lbs., Ans.}$

INCLINED PLANE.

RULE.—As the length of the plane is to its height, so is the weight to the power.

EXAMPLE.—Required the power necessary to raise 540 lbs. up an inclined plane, five feet long and two feet high.

As 5:2::540:216 lbs., Ans.

WEDGE.

CASE 1.—When two bodies are forced from one another by means of a wedge, in a direction parallel to its back.

RULE.—As the length of the wedge is to half its back or head, so is the resistance to the power.

EXAMPLE.—The breadth of the back or head of the wedge being three inches, and the length of either of its inclined sides 10 inches, required the power necessary to separate two substances with a force of 150 lbs.

As $10:1\frac{1}{2}::150:22\frac{1}{2}$ lbs., Ans.

CASE 2.—When only one of the bodies is movable. RULE.—As the length of the weight is to its back or head, so is the resistance to the power.

EXAMPLE.—The breadth, length, and force, the same as in the last example.

As 10:3::150:45 lbs., Ans.

SCREW.

The screw is an inclined plane, and we may suppose it to be generated by wrapping a triangle, or an inclined plane, round the circumference of a cylinder. The base of the triangle is the circumference of the cylinder; its height, the distance between two consecutive cords or threads; and the hypothenuse forms the spiral cord or inclined plane.

RULE.—To the square of the circumference of the screw, add the square of the distance between two threads, and extract the square root of sum. This will give the length of the inclined plane; its height is the distance between two consecutive cords or threads. versely. The following hints may be of use for the purpose of diminishing friction:

The gudgeons of pivots and wheels should be made of polished iron, and the bushes or collars in which they move should be made of polished brass. In small and delicate machines, the pivots or knife edges should rest on garnet. Oily substances diminish friction—swine's grease and tallow should be used for wood, but oil for metal. Black lead powder has been used with effect for wooden gudgeons. The ropes of pulleys should be rubbed with tallow.

As to the friction of the mechanic powers. The simple lever has no such resistance, unless the place of the fulcrum be moved during the operation. In the wheel and axle, the friction on the axis is nearly as the weight, the diameter of the axis, and the angular velocity—it is, however, very small. When the sheaves rub against the blocks, the friction of the pulley is very great. In most, if not in all screws, the friction of the screw is equal to the pressure—the square-threaded screw is the best.

In the inclined plane, the friction of a rolling body is far less than that of a sliding one.

To estimate the amount of the friction of a carriage upon a railway, we have,

$$P - \frac{P \times T}{t} = friction,$$

in which rule P signifies the power that will keep

the wagon on the plane, independent of friction; T the time of descent without friction,—both of which are to be determined by the laws of the inclined plane given before: and t is the time of actual descent of the wagon or carriage.

There is a loaded carriage on a railroad 120 feet in length, having an inclination of one foot to the hundred. The carriage, together with its load, weighs 4500 lbs. Now, the height of the plane may be found by the principles of geometry, from the proportion of similar triangles.

100:120::1:1·2 = the height of the plane; and by the laws of falling bodies, and the properties of the inclined plane,

 $\sqrt{\frac{1\cdot2}{16}} \times 120 = \cdot2731 \times 120 = 32\cdot772 = \text{the time}$ in seconds in which the carriage would descend down the plane without friction—and by the properties of the inclined plane, $100:1::4500:45 = \text{the force that sustains the carriage, without friction, from rolling down the plane; wherefore, by the rule,$

 $45 - \frac{45 \times 32.772}{60} = 20.421$ = the friction in pounds, which retards the carriage in rolling down the railway.

TABLE

Of Comparative Velocity of Driving Wheels to Pistons, the Circumference of the former taken as 1.

Half travel of				DiA	METER OF	DIAKETER OF WHEELS, IN FEST.	Pest.			
Inches.	₹8	7	44	9	53	9	₹9	. 7	¥ 1	8
24	0.3638	0.3182	0.2830	0.2541	0.2315	0.2122	0.1958	0.1819	0.1691	0.1592
22	0.8334	0.2918	0.2598	0.2334	0.2122	0.1945	0.1796	0.1667	0.1556	0.1417
20	0.3031	0.2652	0.2393	0.2122	0.1929	0.1768	0.1632	0-1516	0.1414	0.1826
19	0.2880	0.2519	0.2273	0.2016	0.1832	0.1679	0.1550	0.1440	0.1848	0.1259
18	0.2728	0.2386	0.2151	0.1910	0.1786	0.1591	0.1468	0.1364	0.1272	0.1194
17	0.2577	0.2254	0.2084	0.1803	0.1640	0.1503	0.1387	0.1288	0.1202	0.1127
16	0.2425	0.2121	0.1914	0-1697	0.1548	0.1415	0.1805	0.1218	0.1131	0.1061
15	0.2278	0.1989	0.1795	0.1691	0.1447	0.1826	0.1224	0.1187	0:1060	0.0994
14	0.2122	0-1856	0.1675	0.1485	0.1850	0.1287	0.1141	0-1061	0660-0	0.0928
13	0.1971	0.1724	0-1555	0.1879	0.1264	0.1149	0.1061	9860-0	0-0919	0-0862
12	0.1819	0.1591	0.1436	0.1273	0-1167	0.1061	6260-0	6060-0	0-0848	0.0796
	-	_	_					_		

TABLE of Gradients, and Resistance per Ton for each Gradient.

VEBTIC	AL RISE.	Gravity due to incline,	VERT	ICAL RISE.	Gravity due
Ratio,	Per Mile.	per Ton.	Ratio,	Per Mile.	per Ton.
One in	Feet.	Lbe.	One in	Feet.	Lbs.
100	52.80	22.40	60	88.00	37.333
99	53.33	22.626	59	89.49	87.966
98	53.88	22.858	58	91.03	38-620
97	54.43	23.092	57	92.63	39.298
96	55.00	23.334	56	94.28	40-0
95	55-60	23.579	55	96.00	40.726
94	56.17	23.830	54	97.77	-41-480
98 -	56.77	24.086	53	99.62	42.264
92	57.52	24.342	52	101.53	43.076
91	58.02	24.614	51	103.52	43.920
90	58.66	24.888	50	105.60	44.800
89	59.33	25.168	49	107.75	45.716
88	60.0	25.454	48	110.00	46.688
87	60-69	25.746	47	112-34	47.660
86	61.39	26.046	46	115.04	48-684
85.16	62.00	26.303	45	117.33	49.777
85	62-12	26.353	44	120.0	50.908
84	62.86	26.666	48	122.78	52.092
83	63-61	26.988	- 42	125.71	53-333
82	64.39	27.317	41	128.78	54.634
81	65.20	27.718	40	132.00	56-00
80	66.0	28.00	89	135-38	57.436
79	66.83	28.355	38	138.95	58-944
78	67.69	28.718	37	142.70	60.540
77	68-57	29.090	86	146.66	62.222
76	69.47	29.472	35	150.84	64.000
75	70.40	29.867	34	155.30	65.880
74	71.38	30.270	- 83	160.0	67.880
73	72.32		82	165.0	70.0
72	78.33	30·685 31·111	81	170.32	72.216
71	74.36	81.550	80	176.00	74-666
70 69	75.43	32.000	29	182-06	77.240
	76.49	32.464	28	188-56	80.00
68	77.64	32-940	27	195.55	82.960
67	78-81	33-932	26	203.06	86.152
66	80.0	83.940	25	211.20	89-60
65	81.23	34-460	24	220.0	98.336
64	82.50	85.0	28	229.56	97.368
63	88.81	85.555	22	240	101.816
.62	85.16	36.108	21	251.43	106-666
61	86.55	36.720	1		

. Single of the constitution

TABLE OF TIME

Occupied in running One Mile, Speed in Feet per Minute, and Number of Revolutions of the Driving Wheels, or Double Strokes of the Piston, per Minute, at the following given speeds.

			_											_			_	
	8 feet.	No.	85.01	88.51	42.05	46.52	49	62.63	99	59.5	63	66.5	ė	78.5	77.	80.5	2	87.5
fert.	7½ feet.	No.	87.35	41.08	44.82	48.55	62.79	56.05	92.69	68.49	67.28	.70-96	74-70	78.48	82.17	85.50	89.68	98.87
BEING 13	7 feet.	No.	40.	4	48	65	26	9	64.	.89	72.	.92	8	84.	88	95.	96	100
WHERES	6½ feet	No.	48.09	47.40	61.71	56.05	60-33	64-64	68.95	73.26	77.57	81.88	86.19	90.50	. 94.81	99.12	103.48	107.74
REVOLUTION OF WHERIS, PER MINUTE-THE DIAMETER OF WHERIS BRING IN	6 feet.	. Š	46.68	51.35	20.99	69-09	65.86	20.03	77.70	79.87	84.03	88.70	98.87	98·0 1	102.71	107.38	112.05	116.72
r—rur Di	5½ feet.	No.	20.93	56.03	61.12	66.21	71.80	76.40	81.50	86.59	91.68	22.96	101.86	106.95	112.04	117.14	122.24	127.88
ER MINUT	5 feet.	No.	56.02	61-62	67.73	72.78	78.38	84.03	89-68	95.28	100.84	106-44	112:04	117.65	128.25	128.86	184.45	140.05
Wherly, 1	4½ feet.	No.	62.25	68.47	74.70	80-05	87.14	98.87	69.66	105.82	112.04	118.26	124.48	130.72	186.94	143.17	149.40	155.63
UTION OF	4 feet.	No.	0	.22	84.	91.	98	105	112.	119.	126.	133.	140	147	154.	$161 \cdot$	168	176.
Erevol	3½ ft.	No.	80	æ	96	104	112.	120	128.	186	144	152	160	168	176	184	192	8
	3 feet.	No.	93.87	102.71	112.04	121.87	130.70	140.06	149.89	168.72	169-06	178.39	187.72	197.05	206.88	216.71	225.05	233.48
Time of running l mile.		ъ. 866.	8	21	8	87	17	8	4	3 5	8	68	8	514	484	86	8	5 7
E E-		Min	9	φ.	9	4	4	4	<u>∞</u>	<u>~</u>	~	8	~	61	<u>~</u>	61	9	67
Speed	Feet.	88	896	1056	1144	1282	1320	1408	1496	1584	1672	1760	1848	1986	2024	2112	2200	
Speed	Hour.	Miles.	10	11	12	13	14	16	16	17	18	19	8	21	23	23	24	33

26 2288 2 184 242.77 208. 182. 161.86 145.66 182.42 121.90 112.06 104.97 97.14 97.14 28 2464 2 0.4 270.78 232. 208. 168.07 165.26 186.05 116.06 116.96 110.97 94.6 29 2562 2 0.4 270.78 282. 208. 168.72 186.71 186.71 112.06 116.96 110.97 98. 260 2 20.1 240. 210. 186.74 186.81 147.41 186.81 116.96 116.97 106.90 116.98 101.90 106.90 <		_			_																					
2986 2 184 242.77 208 182. 161.86 146.66 182.42 121.30 112-06 104-7 204.67 2476 2 184 2044 2044 2044 201.66 116.36 106-87 161.26 187.62 120-67 116.96 104-67 106-87 161.26 187.62 120-67 116.96 104-67 106-87 161.26 187.62 120-67 116.96 104-67 106-87 161.86 187.62 120-67 116.96 104-67 108-37 120-67 116.96 104-67 108-37 120-67 116.96 104-67 108-37 106-87 116-86 186-74 186-86 186-87 116-86 186-74 186-87 186-87 186-87 186-87 186-87 186-87 186-87 186-87 186-87 186-87 186-87 186-88 186-88 186-88 186-88 186-88 186-88 186-88 186-88 186-88 186-88 186-88 186-88 186-88 186-88 186-88	91. 94·5	86	101.5	105	108.5	112.	116.6	119.	122.5	126.	129.5	183.	136.5	140	147.	167.6	118.	185.	192.5	210.1	227.5	245	262.5	280.	297.6	315-14
2386 2 184 242.77 208 182. 161.66 182.42 121.39 112.06 2464 2 084 2 04.4 2 16.4 189. 168.07 151.26 187.62 125.06 116.36 256.0 2 04.4 2 20.4 174.8 156.86 142.63 180.05 116.36 256.0 2 0.0 2 20.1 2 20.6 1 178.78 167.98 144.71 188.49 2 20.6 1 40. 2 20.6 2 24. 1 180.70 1 180.40 1 188.61 2 20.6 1 40. 2 20.6 2 24. 1 180.60 1 180																										
2386 2 184 242.77 208. 182. 161.86 145.65 182.42 121:39 2464 2 084 265.74 216. 189. 168.07 161.26 187.62 126.05 2564 2 084 261.76 282. 208. 180.61 180.67 161.26 187.62 126.05 2640 2 00. 280.11 240. 210. 186.74 168.08 162.86 146.74 186.88 147.74 186.88 140.04 2728 1 62 288.52 210. 188.74 168.08 165.86 144.71 2804 1 45 317.46 272. 288. 217.61 189.0 144.01 2806 1 45 317.46 272. 288. 217.61 196.20 172.91 164.05 2807 1 42 286. 252. 224.09 207.42 188. 164.98 2808 1 42 286. 252. 222.40 207.42 188. 184.71	1040	112.	116	8	124.	128	132.	186	140	144.	148.	152.	156.	160	168	180	192.	500 200	220.	240.	260	280	300	820	340	360
2288 2 184 242.77 208 182. 161.86 145.65 182.42 2376 2 184 255.74 216 189 168.07 151.26 187.52 2546 2 04 201.78 23.24 198 168.07 151.26 187.52 2540 2 04 200.11 240 210 180.74 168.08 187.62 2640 2 00 280.11 240 210 186.74 168.08 162.89 2902 1 458 288.79 256 224 199.20 173.89 168.1 2094 1 458 817.46 272 238 211.64 190.60 172.99 2094 1 458 817.46 272 238 211.64 190.60 172.99 3080 1 458 817.46 272 238 207.42 189.6 3181 1 484 864.18 186 252 252 207.82 187.4 320 1 84	112-05 116-36	120.67	124.98	129.80	138.61	137.62	141.93	146.24	150.85	155.16.	159-41	163.72	168.03	172.40	181.02	193.95	206.88	215.50	237.05	258-6	280.15	801.70	823.25	844.80	846.35	867-90
2288 2 184 242-77 208 182 161-85 146-65 256.2 2 084 201-42 224 199 168-07 161-26 256.4 2 08 224-198 176-38 168-68 256.4 2 00 280-11 240 208-7 162-48 2728 1 68 289-52 248 217 199-97 178-78 2816 1 454 388-74 266-224 199-97 178-78 2806 1 454 388-74 264-231 199-97 178-39 2807 1 454 387-46 224-24 190-90 178-39 2808 1 428 386-80 280 245-21 190-90 178-30 3808 1 428 384-13 288-25 224-24 190-60 3818 1 844 384-13 388-14 186-24 180-24 382 1 844 384-15 380-24 218-64 380-3 384 1 844 384-16	121:89 126:05	130.72	135.88	140.04	144.71	149.88	154.05	158.72	163.33	168	172.67	177.34	182.05	186.72	196.05	210.06	224.06	233.70	256.74	280.5	803-42	826.76	850.10	878-44	896.77	420-11
2288 2 184 242-77 208 182 161-85 146-65 256.2 2 084 201-42 224 199 168-07 161-26 256.4 2 08 224-198 176-38 168-68 256.4 2 00 280-11 240 208-7 162-48 2728 1 68 289-52 248 217 199-97 178-78 2816 1 454 388-74 266-224 199-97 178-78 2806 1 454 388-74 264-231 199-97 178-39 2807 1 454 387-46 224-24 190-90 178-39 2808 1 428 386-80 280 245-21 190-90 178-30 3808 1 428 384-13 288-25 224-24 190-60 3818 1 844 384-13 388-14 186-24 180-24 382 1 844 384-15 380-24 218-64 380-3 384 1 844 384-16	182-42 187-62	142.63	147.74	162.85	167.98	163	168.1	172.99	177.29	182.4	187.6	192.6	197.95	203.76	214.	229.28	244.65	264.76	280.17	305.64	831-11	356.58	872.05	407-60	438.25	458-65
2288 2 184 242.77 208 189 2464 2 084 25.74 216 189 2562 2 04 270.78 22. 208 2640 2 00 280.11 240 210 2728 1 66 289.52 208 228 2804 1 458 308.52 208 217 2992 1 456 817.46 272 238 3080 1 426 817.42 286 224 2992 1 456 817.46 272 238 3080 1 426 817.42 286 252 3816 1 426 817.2 288 252 3844 1 844 864.15 816 286 3849 1 824.15 836 286 286 3840 1 20 480.15 816 386			_	_	_	_	_	_	_		_				_			_	_	_		_			_	
2288 2 184 242.77 208 189 2464 2 084 25.74 216 189 2562 2 04 270.78 22. 208 2640 2 00 280.11 240 210 2728 1 66 289.52 208 228 2804 1 458 308.52 208 217 2992 1 456 817.46 272 238 3080 1 426 817.42 286 224 2992 1 456 817.46 272 238 3080 1 426 817.42 286 252 3816 1 426 817.2 288 252 3844 1 844 864.15 816 286 3849 1 824.15 836 286 286 3840 1 20 480.15 816 386	161-85 168-07	174.3	180.52	186.74	192.97	199.20	206-42	211.64	217.18	224.09	230.33	236.54	243.77	252.72	261.44	284.30	298.79	315.90	847.49	826-62	416.67	442.19	473.85	506-50	528.38	200-53
2288 2 1843 242.77 2084 2464 2 084 255.74 216. 2562 2 044 270.78 232. 2640 2 00 280.11 240. 2728 1 66 288.52 248. 2992 1 456 817.42 286. 2992 1 456 817.42 287. 2992 1 456 817.42 287. 2806 1 426 817.42 286. 2816 1 426 817.42 286. 2806 1 426 817.42 286. 2816 1 37 846.81 804. 3842 1 387 864.15 812. 3850 1 20 420.17 860. 440 1 1 420.17 860. 440 1 1 446.85 400.			_							_		_		-			_	_		_	_	_	_	_	_	
2288 2 184 22464 2 084 22464 2 084 2640 2 004 2728 1 56 2904 1 46 2902 1 428 3000 1 428 3000 1 428 3000 1 428 3000 1 20 3000 1 20 4840 1 10 4840 1 10 5720 0 654 6600 0 48 7040 0 48																										
2288 22464 2 25454 2 25454 2 26462 2 2640 2 2004 1 2004 1 2004 1 2005 1 2006 1 2006 1 2006 1 2007 1	242-77	261.43	270.78	280.11	289.52	298.79	808.12	817-46	826.80	886.18	846.47	354.81	364.15	878.57	892.15	420.17	438.18	446.85	513.54	560.23	606.91	653.59	700.28	746.96	792.74	840.34
C4 C9	183	180	3	8	99	524	49	454	42	.0 4	£18.	843	821	30,	253	20,	16	12	054	8	554	518	84	45	423	,0 4
C4 C9	9	01	C4	61	_	-	_	_	_	_	_	_	_	_	_	_	-	_	_	_	0	0	0	0	0	0
822222222222222222222222222222222222222	2288	2464	2552	2640	2728	2816	2904	2992	3080	8168	3256	8344	3432	3520	3696	8960	4224	4400	4840	5280	5720	6160	0099	7040	7480	7920
	26	8	8	80	8	82	83	84	35	86	87	88	83	9	42	45	48	9	22	9	99	20	22	8	88	8

COMPARATIVE ELASTICITY OF WROUGHT AND CAST IRON.

An able work on tubular bridges gives the following as the comparative elasticity of wrought and cast iron:—

"The mean ultimate resistance of wrought iron to a force of compression, as useful in practice, is twelve tons per square inch, while the crushing weight of cast iron is forty-nine tons per square inch, but for a considerable range, under equal weights, the cast iron is twice as elastic, or compresses twice as much as the wrought iron.

"A remarkable illustration of the effect of intense strain on cast iron was witnessed by the author, at the works of Messrs. Easton & Amos. The subject of the experiment was a cast-iron cylinder ten and five-eighths inches thick, fourteen and a half inches high, the external diameter being eighteen inches. If requisite for a specific purpose to reduce the internal diameter three and a half inches, this was effected by the insertion of a smaller cast-iron cylinder into the centre of the large one; and to insure some initial strain, the large cylinder was expanded by heating it, and the internal cylinder being first turned too large, was thus powerfully compressed. The inner cylinder was partly filled with pewter, and a steel piston being fitted to the bore, a pressure of 972 tons was

put on the steel piston. The steel was 'upset' by the pressure, and the internal diameter of the small cylinder was increased by full three-sixteenths of an inch; i. e. the diameter became 311 of an inch! A new piston was accordingly adapted to these dimensions—and in this state the cylinder continues to be used, and to resist the pressure; the external layer of the inner cylinder was thus permanently extended 31 of its length. In fact, it can only be regarded as loose packing, giving no additional strength to the cylinder. Under these high pressures, when confined mechanically, cast iron, as well as other metals, appears, like liquids, to exert an equal pressure in every direction in which its motion is opposed."

LOSS FROM RESISTANCES AGAINST THE PISTON,


Produced by imperfect action of the Valves.

This is a branch of the subject deserving especial consideration. Its importance, as referring to the economical working of steam-engines, may be profitably illustrated by a brief historical account of the consecutive alterations and improvements in the valve arrangements and mechanism of the locomotive engine, and of the results produced in the saving of fuel.

It may be premised that the same principles have

several passages in their turn. The two extreme ones, termed steam ports, communicate with either

Fig. 53.—Old Valve, 1 Lap.

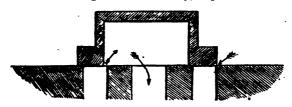

end of the cylinder. The middle one is termed the exhausting port, and its corresponding passage terminates in a pipe open to the atmosphere, and carried into the chimney. Steam is admitted freely into the steam-chest from the boiler. The valve is made of sufficient length to cover, when placed in the centre of the stroke, all the parts. In this position no steam can enter the cylinder; but as the valve moves on, one of the ports opens, and the arrangement of the valve-gearing is such, that when the piston is ready to begin its stroke, the steamport begins to open. During the forward progress of the piston, the valve not only travels to the end of its stroke, but returns to the point from whence it set out. Its continued motion in the same direction. Anally closes the valve, and prevents any further admission of steam. The steam has now done its work, and must be removed. In the middle of the valve a hollow chamber is formed, of sufficient

length to span between the ports. As soon as the edge of this chamber passes the edge of the steamport, the pent-up steam finds vent, and rushing through the chamber into the exhausting passage, escapes into the chimney.

It will be observed, by referring to fig. 53, that the exhausting port opens when the steam-port closes, and both events happen as nearly as may be at the end of the stroke. The perfection of a slide valve consists, other things being supposed equal, in the degree of nicety with which its motion is timed relatively to the motion of the piston. The functions of the piston are absolutely dependent

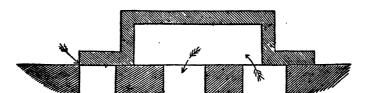


Fig. 54. 1 Lap.

upon the proper timing of the admission and release of the steam. A most slight and apparently trifling error in the adjustment produces a most serious effect upon the consumption of fuel.

If from any cause the valve should open to admit steam for a fresh stroke before the preceding stroke is finished, it opens too soon, and an unnecessary resistance to the piston is produced.

If, on the other hand, the valve should delay its

opening until the piston has begun to return, it opens too late, because then the steam has uselessly to fill the space left vacant. Hence a waste of steam and loss of power. As far, then, as the admission of steam is concerned, it is a necessary condition that the steam-ports should open neither before nor after, but at the precise moment when the stroke commences. Some engineers, indeed, have recommended giving the valve "lead," as it is termed; that is to say, setting it so as to open a little before the completion of the foregoing stroke; but it seems very questionable whether the slightest advantage is gained by doing so to a greater extent than is necessary to compensate for any slackness in the parts of the valve-gearing, or for their expansion when hot; and about it of an inch may be considered sufficient for this purpose in a well-constructed engine.

The valve shown in fig. 53 satisfies the conditions required in the admission of steam. It opens exactly at the right time. The steam begins to enter as the piston begins to move, and follows it steadily and effectively throughout its course. Whatever time the piston takes for its journey, the steam is allowed as much time to follow it. At first the opening is small; but then the motion of the piston is comparatively slow, and therefore the supply keeps pace with the demand.

As respects the release of the steam when the

stroke has been completed, the performance of this valve is altogether unsatisfactory, and here lurks the cause of the difference in the performances of the old and the late engines.

But it might be said the release does appear to take place at the right time, because it occurs just when the piston has finished the stroke; and if it were to occur before, a loss of power would ensue. This is a plausible view of the case, and one which undoubtedly delayed, for years, the saving of fuel which has since been effected.

· Sufficient attention was not bestowed upon the processes going on in the interior of the cylinder, or upon the facts which might have indicated them. Alternately to fill and empty the cylinder of its contents are operations requiring time. allowed for the first operation-that of filling the cylinder with steam-necessarily corresponds with the duration of the stroke, whatever its duration may be. But this cannot be the case as regards the second operation—the emptying of the cylinder. This ought to be performed in an instant, in the minutest fraction of the duration of the stroke; otherwise the steam continues pent up when it ought to be liberated—when it ought to assume its minimum pressure, the pressure of the atmosphereand exerts an injurious counter-pressure against the piston, tending to increase the resistance to be overcome.

To effect the free and rapid discharge, it is necessary not merely to open the communication to the exhausting pipe, but to open a wide passage, and to have this down by the time the piston recommences its motion. The valve alluded to cannot accomplish this. Its motion is gradual, not instantaneous. The passage only begins to open when the piston is in the turn, and it is not wide open until the piston has travelled through 10th of its entire stroke. The steam in the cylinder is consequently restrained from escaping, being wire-drawn in the passage out, and consequently takes considerable time to assume the pressure of the atmosphere.

In the mean while the new stroke has begun, and been partially completed; and so far the piston has had to contend with a resistance altogether illegitimate—a resistance which, in many cases, and especially at high speeds, has been nearly equal to all the other resistances put together.

In the year 1838 the extent of the disease was first suspected, and a remedy attempted. It had before been observed that the giving of an engine "lead" tended to improve its speed when travelling already at a high speed, and with a light load. The circumstance was attributed to the opening of the steam-port being wide at the time of commencing the stroke, thereby increasing the facility for

the entrance of the steam in following up the piston.

Its true explanation was found to be the earlier release of the waste steam, and consequent diminution of resistance. As sometimes \$ths of an inch, or even 1 an inch "lead" was given in passenger engines, it was decided to try the effect of opening the exhausting passage earlier by the same amount, while the steam-port should still be made to open only at the turn of the stroke. An engine was chosen for the experiment. Its original valve resembled fig. 53. Placing the valve on the ports, so as to allow the exhausting passage to be 3ths of an inch open, the steam-port would, at the same time, be 1 inch open. This space, therefore, was closed by adding to the length of the valve, at each end, 1 inch. The eccentric was, of course, shifted on the axle to correspond with the alteration, and the engine with the altered valve (Fig. 54) was again set to work. The amount by which the valve at each end overlaps the steam-ports, when placed exactly over them, is technically termed the lap. The lap of the valve being ther \$\frac{3}{2}\ths of an inch, the exhausting passage was about \$ths of an inch open when the stroke was finished. The engine was made the subject of several experiments. passenger trains the saving in fuel was very considerable, the consumption, while running, being only about 25 lbs. of coke per mile, with loads of five to eight cars, and the speed was considerably improved.

It here becomes necessary to refer to the consumption of the Liverpool and Manchester engines before and at the time we speak of, in order to form a just conception of the position arrived at.

In 1836 and 1887, larger engines were gradually introduced to replace the smaller class, which had become insufficient for maintaining the higher rate of speed then demanded; and their increased consumption of fuel was commensurate with their increase of size.

For an idea of the general effect attendant upon their introduction, the following table, showing the coke consumed in several consecutive years, may be consulted.

11,561 trips in 1836, 7,907 tons (gross) coke.

12,063 trips in 1837, 9,876 tons (gross) coke.

12,953 trips in 1838, 10,816 tons (gross) coke.

Thus, during three years, when the change went on, although the work done increased only in the proportion of 100 to 136, without material difference in the magnitude of the loads, in 1839 and 1840 the average consumption attained its maximum, being about 49 lbs. per mile, gross, with passenger trains averaging seven cars, and 54 lbs. per mile with freight trains averaging sixteen burthen cars.

40 lbs. net consumption with passenger trains,

was moderate for such an engine used for the experiment; and the performance of the engine when altered, being under 30 lbs. net, was naturally considered favourable. This result was evidently obtained from the earlier exhaustion of the steam.

Whereas previously the opening of the exhaustion passage was contemporaneous with the termination of the stroke; now it took place before, and was already \$\frac{2}{3}\$ths of an inch open at the end of the stroke. A portion of the steam could by that time escape, and the back pressure was diminished.

The valves of two engines, Nos. 10 and 12, were next altered to have \$\frac{2}{3}\$ths of an inch lap—No. 10 in January, No. 12 in June, 1841. During the last quarter of the year 1841, the gross consumption of No. 10 was 36\frac{1}{2}\$ lbs. per mile, and that of No. 12 40 lbs. per mile, and the net consumption about 30 and 33 lbs.

No. 12 Valve, with 8ths of an inch Lap.

```
Veek ending cwt. qrs. lbs.

Jan. 4, 1841, 12 trips of 30 miles, 130 0 0

Jan. 11, 1841, 12 trips of 30 miles, 127 2 0 Per Trip.

24 257 2 0 ewt. qrs. lbs. per mile.
```

Valve with 2ths of an inch Lup.

Febry 9, 1841, 10 trips of 30 miles, 88 3 6
March 7, 1841, 8 trips of 30 miles, 71 1 0
March 21, 1841, 14 trips of 30 miles, 118 3 0
March 23, 1841, 16 trips of 30 miles, 137 2 0

DIMENSIONS OF PARTS OF LOCOMOTIVES.

Diameter of Cylinder.—In locomotive engines the diameter of the cylinder varies less than in either the land or the marine engine. In few of the locomotive engines at present in use is the diameter of the cylinder greater than 18 inches, or less than 12 inches. The length of the stroke of nearly all the locomotive engines at present in use is 18 inches, and there are always two cylinders, which are generally connected to cranks upon the axle, standing at right angles with one another. Outside cylinders, operating upon pins in the driving wheels, have latterly been largely introduced.

AREA OF INDUCTION PORTS.

RULE.—To find the size of the steam-ports for the locomotive engine.—Multiply the square of the diameter of the cylinder by 068. The product is the proper size of the steam-ports in square inches.

Example.—Required the proper size of the steam-ports of a locomotive engine whose diameter is 15 inches. Here, according to the rule, size of steam-ports = $.068 \times 15 \times 15 = .068 \times 225 = 15.3$ square inches, or between $.15\frac{1}{4}$ and $.15\frac{1}{3}$ square inches.

After having determined the area of the ports, we may easily find the depth when the length is given, or, conversely, the length when the depth is given. Then, suppose we know the length was 8 inches, then we find that the depth should be $15.3 \div 8 = 1.9125$ inches, or nearly 2 inches; or suppose we knew the depth was 2 inches, then we would find that the length was $15.3 \div 2 = 7.65$ inches, or nearly $7\frac{3}{4}$ inches.

Area of eduction ports.—The proper area for the eduction ports may be found from the following rule.

Rule.—To find the area of the eduction ports.— Multiply the square of the diameter of the cylinder in inches by 128. The product is the area of the eduction ports in square inches.

Example.—Required the area of the eduction ports of a locomotive engine, when the diameter of the cylinders is 13 inches. In this example we have, according to the rule, area of eduction port $= \cdot 128 \times 13^3 = \cdot 128 \times 169 = 21 \cdot 632$ inches, or between $21\frac{1}{2}$ and $21\frac{3}{4}$ square inches.

Breadth of bridge between ports.—The breadth of the bridges between the eduction port and the induction ports is usually between $\frac{3}{4}$ inch and 1 inch.

DIAMETER OF BOILER.

RULE.—To find the inside diameter of the boiler.— Multiply the diameter of the cylinder in inches by 8.11. The product is the inside diameter of the boiler in inches.

Example.—Required the inside diameter of the boiler for a locomotive engine, the diameter of the cylinders being 15 inches.

In this example we have, according to the rule, inside diameter of boiler = $15 \times 3.11 = 46.65$ inches, or about 3 feet $10\frac{8}{5}$ inches.

Length of boiler.—In the Northern and Eastern Counties Railway the length of the boiler is 8 feet; while in the North Midland Counties Railway, in the Great Western Railway, and in the Hartlepool Railway, the length of the boiler is 8½ feet. In the Belgian railways the length of the boiler is 8 feet 2 inches. And in the Bordeaux and La Teste railway the length of the boiler is 8 feet 9 inches. In Stephenson's locomotive engines, the length of the boiler is between 11 and 12 feet. In this country the length is from 10 to 14 feet.

Diameter of steam dome inside.—It is obvious that the diameter of the steam dome may be varied considerably, according to circumstances; but the first indication is to make it large enough. It is usual, however, in practice, to proportion the diameter of the steam dome to the diameter of the cylinder; and there appears to be no great objection to this. The following rule will be found to give the diameter of the dome usually adopted in practice.

RULE.—To find the diameter of the steam dome.— Multiply the diameter of the cylinder in inches by 1.43. The product is the diameter of the dome in inches.

Height of steam dome.—The height of the steam dome may vary. Judging from practice, it appears that a uniform height of $2\frac{1}{2}$ feet would answer very well.

Diameter of safety-valve.—In practice the diameter of the safety-valve varies considerably. The following rule gives the diameter of the safety-valve usually adopted in practice.

RULE.—To find the diameter of the safety-valve.— Divide the diameter of the cylinder in inches by 4. The quotient is the diameter of the safety-valve in inches.

Example.—Required the diameter of the safety-valves for the boiler of a locomotive engine, the diameter of the cylinder being 13 inches. Here, according to the rule, diameter of safety-valve = 13 + 4 = 81 inches. A larger size, however, is preferable, as being less likely to stick.

Diameter of valve spindle.—The following rule will be found to give the correct diameter of the valve spindle. It is entirely founded on practice.

RULE.—To find the diameter of the valve spindle.—Multiply the diameter of the cylinder in inches by 076. The product is the proper diameter of the valve spindle. Example.—Required the diameter of the valve spindle for a locomotive engine whose cylinders' diameters are 13 inches.

In this example we have, according to the rule, diameter of valve spindle = $13 \times .076 = .988$ inches, or very nearly 1 inch.

Diameter of chimney.—It is usual in practice to make the diameter of the chimney equal to the diameter of the cylinder. Thus, a locomotive engine whose cylinders' diameters are 15 inches, would have the inside diameter of the chimney also 15 inches, or thereabouts. This rule has, at least, the merit of simplicity.

Area of fire-grate.—The following rule determines the area of the fire-grate usually given in practice. We may remark, that the area of the fire-grate in practice follows a more certain rule than any other part of the engine appears to do; but it is in all cases much too small, and occasions a great loss of power by the urging of the blast it renders necessary, and a rapid deterioration of the furnace plates from excessive heat. There is no good reason why the furnace should not be nearly as long as the boiler: it would then resemble the furnace of a marine boiler, and be as manageable.

RULE.—To find the area of fire-grate.—Multiply the diameter of the cylinder in inches by 77. The product is the area of the fire-grate in superficial feet.

Example.—Required the area of the fire-grate of a locomotive engine, the diameters of the cylinders being 15 inches.

In this example we have, according to the rule, area of fire-grate = $.77 \times 15 = 11.55$ square feet, or about $11\frac{1}{2}$ square feet. Though this rule, however, represents the usual practice, the area of the fire-grate should not be contingent upon the size of the cylinder, but upon the quantity of steam to be generated.

Area of heating surface.—In the construction of a locomotive engine, one great object is to obtain a boiler which will produce a sufficient quantity of steam with as little bulk and weight as possible. This object is admirably accomplished in the construction of the boiler of the locomotive engine. This little barrel of tubes generates more steam in an hour than was formerly raised from a boiler and fire occupying a considerable house. This favourable result is obtained simply by exposing the water to a greater amount of heating surface.

In the usual construction of the locomotive boiler it is obvious that we can only consider four of the six faces of the inside fire-box as effective heating surface, viz. the crown of the box, and the three perpendicular sides. The circumferences of the tubes are also effective heating surface; so that the whole effective heating surface of a locomotive boiler may be considered to be the four faces of the inside

fire-box, plus the sum of the surfaces of the tubes. Understanding this to be the effective heating surface, the following rule determines the average amount of heating surface usually given in practice.

RULE.—To find the effective heating surface.— Multiply the square of the diameter of the cylinder in inches by 5; divide the product by 2. The quotient is the area of the effective heating surface in square feet.

Example.—Required the effective heating surface of the boiler of a locomotive engine, the diameters of the cylinders being 15 inches.

In this example we have, according to the rule, effective heating surface = $15^2 \times 5 \div 2 = 225 \times 5 \div 2 = 1125 \div 2 = 562\frac{1}{2}$ square feet.

According to the rule which we have given for the fire-grate, the area of the fire-grate for this boiler would be about $11\frac{1}{2}$ square feet. We may suppose, therefore, the area of the crown of the box to be 12 square feet. The area of the three perpendicular sides of the inside fire-box is usually three times the area of the crown; so that the effective heating surface of the fire-box is 48 square feet. Hence the heating surface of the tubes = 526.5 - 48 = 478.5 square feet. The inside diameters of the tubes are generally about $1\frac{1}{4}$ inches; and therefore the circumference of a section of these tubes is 5.4978 inches. Hence, supposing the tube

to be $8\frac{1}{2}$ feet long, the surface of one = $5.4978 \times 8\frac{1}{2} \div 12 = .45815 \times 8\frac{1}{2} = 3.8943$ square feet. And, therefore, the number of tubes = $478.5 \div 3.8943 = 123$ nearly.

Area of water-level.—This of course varies with the different circumstances of the boiler. The average area may be found from the following rule.

RULE.—To find the area of the water-level.— Multiply the diameter of the cylinder in inches by 2.08. The product is the area of the water-level in square feet.

Example.—Required the area of the water-level for a locomotive engine, whose cylinders' diameters are 14 inches.

In this case we have, according to the rule, area of water-level = $14 \times 2.08 = 29.12$ square feet.

Cubical content of water in boiler.—This of course varies, not only in different boilers, but also in the same boiler at different times. The following rule is supposed to give the average quantity of water in the boiler.

RULE.—To find the cubical content of the water in the boiler.—Multiply the square of the diameter of the cylinder in inches by 9; divide the product by 40. The quotient is the cubical content of the water in the boiler in cubic feet.

Example.—Required the average cubical content of the water in the boiler of a locomotive engine, the diameters of the cylinders being 14 inches.

In this example we have, according to the rule, cubical content of water = $9 \times 14^3 + 40 = 44.1$ cubic feet.

Content of feed-pump.—In the locomotive engine the feed-pump is generally attached to the crosshead, and consequently it has the same stroke as the piston. As we have mentioned before, the stroke of the locomotive engine is generally in practice 18 inches. Hence, assuming the stroke of the feed-pump to be constantly 18 inches, it only remains for us to determine the diameter of the ram. It may be found from the following rule.

RULE.—To find the diameter of the feed-pump ram.—Multiply the square of the diameter of the cylinder in inches by 011. The product is the diameter of the ram in inches.

Example.—Required the diameter of the ram for the feed-pump for a locomotive engine whose diameter of cylinder is 14 inches.

In this example we have, according to the rule, diameter of ram = $\cdot 011 \times 14^2 = \cdot 011 \times 196 = 2 \cdot 156$ inches, or between 2 and $2\frac{1}{4}$ inches.

Cubical content of steam room.—The quantity of steam in the boiler varies not only for different boilers, but even for the same boiler in different circumstances. But when the locomotive is in motion, there is usually a certain proportion of the boiler filled with the steam. Including the dome and the steam-pipe, the content of the steam room will be

found usually to be somewhat less than the cubical content of the water. But as it is desirable that it should be increased, we give the following rule.

RULE.—To find the cubical content of the steam room.—Multiply the square of the diameter of the cylinder in inches by 9; divide the product by 40. The quotient is the cubical content of the steam room in cubic feet.

Example.—Required the cubical content of the steam room in a locomotive boiler, the diameters of the cylinders being 12 inches.

In this example we have, according to the rule, cubical content of steam room = $9 \times 12^2 \div 46 = 9 \times 144 \div 40 = 32.4$ cubic feet.

Cubical content of inside fire-box above fire-bars.— The following rule determines the cubical content of fire-box usually given in practice.

RULE.—To find the cubical content of inside firebox above fire-bars.—Divide the square of the diameter of the cylinder in inches by 4. The quotient is the content of the inside fire-box above fire-bars in cubic feet.

Example.—Required the content of inside firebox above fire-bars in a locomotive engine, when the diameters of the cylinders are each 15 inches.

In this example we have, according to the rule, content of inside fire-box above fire-bars = $15^2 \div 4$ = $225 \div 4 = 561$ cubic feet.

Thickness of the plates of boiler.—In general the

thickness of the plates of the locomotive boiler is 9.32 inch, or No. 3 wire-gage.

Inside diameter of steam-pipe.—The diameter usually given to the steam-pipe of the locomotive engine may be found from the following rule.

RULE.—To find the diameter of the steam-pipe of the locomotive engine.—Multiply the square of the diameter of the cylinder in inches by .03. The product is the diameter of the steam-pipe in inches.

Example.—Required the diameter of the steampipe of a locomotive engine, the diameter of the cylinder being 13 inches. Here, according to the rule, diameter of steam-pipe = $.03 \times 13^3 = .03 \times 169 = 5.07$ inches; or a very little more than 5 inches. The steam-pipe is usually made too small in engines intended for high speeds.

Diameter of branch steam-pipes.—The following rule gives the usual diameter of the branch steam-pipe for locomotive engines.

RULE.—To find the diameter of the branch steampipe for the locomotive engine.—Multiply the square of the diameter of the cylinder in inches by 021. The product is the diameter of the branch steampipe for the locomotive engine in inches.

Example.—Required the diameter of the branch steam-pipes for a locomotive engine, when the cylinders' diameter is 15 inches. Here, according to the rule, diameter of branch pipe = $.021 \times 15^{\circ} = .021 \times 225 = 4.725$ inches, or about 4° inches.

Diameter of top of blast-pipe.—The diameter of the top of the blast-pipe may be found from the following rule.

RULE.—To find the diameter of the top of the blast-pipe.—Multiply the square of the diameter of the cylinder in inches by 017. The product is the diameter of the top of the blast-pipe in inches.

Example.—The diameter of a locomotive engine is 13 inches; required the diameter of the blast-pipe at top. Here, according to the rule, diameter of blast-pipe at top = $\cdot 017 \times 13^2 = \cdot 017 \times 169 = 2\cdot 873$ inches, or between $2\frac{3}{4}$ and 3 inches; but the variable exhaust is now generally used.

Diameter of feed-pipes.—There appears to be no theoretical considerations which would lead us to determine exactly the proper size of the feed-pipes. Judging from practice, however, the following rule will be found to give the proper dimensions.

RULE.—To find the diameter of the feed-pipes.— Multiply the diameter of the cylinder in inches by 141. The product is the proper diameter of the feed-pipes.

Example.—Required the diameter of the feedpipes for a locomotive engine, the diameter of the cylinder being 15 inches.

In this example we have, according to the rule, diameter of feed-pipe $= 15 \times .141 = 2.115$ inches, or between 2 and 21 inches.

Diameter of piston-rod.—The diameter of the

ر ماهشو .

piston-rod for the locomotive engine is usually about one-seventh the diameter of the cylinder. Therefore,

RULE.—To find the diameter of the piston-rod for the locomotive engine.—Divide the diameter of the cylinder in inches by 7. The quotient is the diameter of the piston-rod in inches.

Example.—The diameter of the cylinder of a locomotive engine is 15 inches, required the diameter of the piston-rod. Here, according to the rule, diameter of piston-rod = $15 \div 7 = 2\frac{1}{2}$ inches.

Thickness of piston.—The thickness of the piston in locomotive engines is usually about two-sevenths of the diameter of the cylinder. Therefore,

RULE.—To find the thickness of the piston in the locomotive engine.—Multiply the diameter of the cylinder in inches by 2; divide the product by 7. The quotient is the thickness of the piston in inches.

Example.—The diameter of the cylinder of a locomotive engine is 14 inches, required the thickness of the piston. Here, according to the rule, thickness of piston $= 2 \times 14 \div 7 = 4$ inches.

Diameter of connectiny-rods at middle.—The following rule gives the diameter of the connecting-rod at middle. The rule is entirely founded on practice.

RULE.—To find the diameter of the connectingrod at middle of the locomotive engine.—Multiply the diameter of the cylinder in inches by 21. The product is the diameter of the connecting-rod at middle in inches.

Example.—Required the diameter of the connecting-rods at middle for a locomotive engine, the diameter of the cylinders being 12 inches.

For this example we have, according to the rule, diameter of connecting-rods at middle = $12 \times .21$ = 2.52 inches, or $2\frac{1}{2}$ inches.

Diameter of ball on cross-head spindle.—The diameter of the ball on the cross-head spindle may be found from the following rule.

RULE.—To find the diameter of the ball on crosshead spindle of a locomotive engine.—Multiply the diameter of the cylinder in inches by 23. The product is the diameter of the ball on the crosshead spindle.

Example.—Required the diameter of the ball on the cross-head spindle of a locomotive engine, when the diameter of the cylinder is 15 inches. Here, according to the rule, diameter of ball = 23×15 = 3.45 inches, or nearly $3\frac{1}{2}$ inches.

Diameter of the inside bearings of the crank-axle.—It is obvious that the inside bearings of the crank-axle of the locomotive engine correspond to the paddle-shaft journal of the marine engine, and to the fly-wheel shaft journal of the land engine. We may conclude, therefore, that the proper diameter of these bearings ought to depend jointly upon the length of the stroke and the diameter of the

cylinder. In the locomotive engine the stroke is usually 18 inches, so that we may consider that the diameter of the bearing depends solely upon the diameter of the cylinder. The following rule will give the diameter of the inside bearing.

RULE.—To find the diameter of the inside bearing for the locomotive engine.—Extract the cube root of the square of the diameter of the cylinder in inches; multiply the result by 96. The product is the proper diameter of the inside bearing of the crank-axle for the locomotive engine.

Diameter of plain part of crank-axle.—It is usual to make the plain part of crank-axle of the same sectional area as the inside bearings.

RULE.—To determine the diameter of the plain part of crank-axle for the locomotive engine.—Extract the cube root of the square of the diameter of the cylinder in inches; multiply the result by 96. The product is the proper diameter of the plain part of the crank-axle of the locomotive engine in inches.

Diameter of the outside bearings of the crank-axle.—The crank-axle, in addition to resting upon the inside bearings, is sometimes also made to rest partly upon outside bearings. These outside bearings are added only for the sake of steadiness, and they do not need to be so strong as the inside bearings. The proper size of the diameter of these bearings may be found from the following rule.

RULE.—To find the diameter of outside bearings for the locomotive engine.—Multiply the square of the diameter of the cylinders in inches by 396; extract the cube root of the product. The result is the diameter of the outside bearings in inches.

Diameter of crank-pin.—The following rule gives the proper diameter of the crank-pin. It is obvious that the crank-pin of the locomotive engine is not altogether analogous to the crank-pin of the marine or land engine, and, like them, ought to depend upon the diameter of the cylinder, as it is usually formed out of the solid axle.

RULE.—To find the diameter of the crank-pin for the locomotive engine.—Multiply the diameter of the cylinder in inches by 404. The product is the diameter of the crank-pin in inches.

Example.—Required the diameter of the crankpin of a locomotive engine whose cylinders' diameters are 15 inches.

In this example we have, according to the rule, diameter of crank-pin = $15 \times 404 = 6.06$ inches, or about 6 inches.

Length of crank-pin.—The length of the crankpin usually given in practice may be found from the following rule.

RULE.—To find the length of the crank-pin.— Multiply the diameter of the cylinder in inches by 233. The product is the length of the crank-pins in inches.

·234 DIMENSIONS OF PARTS OF LOCOMOTIVES.

The part of the crank-axle answering to the crank-pin is usually rounded very much at the corners, both to give additional strength and to prevent side play.

These, then, are the chief dimensions of locomotive engines, according to the practice most generally followed. The establishment of express trains and the general exigencies of steam locomotion are daily introducing innovations, the effect of which is to make the engines of greater size and power; but it cannot be said that a plan of locomotive engine has yet been contrived that is free from grave objections. The most material of these defects is the necessity that yet exists of expending a large proportion of the power in the production of a draft; and this evil is traceable to the inadequate area of the fire-grate, which makes an enormous rush of air through the fire necessary to accomplish the combustion of the fuel requisite for the production of To gain a sufficient area of fire-grate the steam. an entirely new arrangement of engine must be adopted; the furnace must be greatly lengthened, and perhaps it may be found that short upright tubes may be introduced with advantage. tubes have been found to be more effectual in raising steam than horizontal tubes; but the tube-plate in the case of the upright tubes would be more liable to burn.

We here give the preceding rules in formulæ, in

the belief that those well acquainted with algebraic symbols prefer to have a rule expressed as a formulæ, as they can thus see at once the different operations to be performed. In the following formulæ we denote the diameter of the cylinder in inches by D.

Parts of the Cylinder.

Area of induction ports, in square inches $= .068 \times D^{2}$.

Area of eduction ports, in square inches = $128 \times D^2$.

Breadth of bridge between ports between # inch and 1 inch.

Parts of Boiler.

Diameter of boiler, in inches = $3.11 \times D$.

Length of boiler between 8 feet and 12 feet.

Diameter of steam dome inside, in inches = 1.43 × D.

Height of steam dome = $2\frac{1}{2}$ feet.

Diameter of safety-valve, in inches = $D \div 4$.

Diameter of valve-spindle, in inches = $.076 \times D$.

Diameter of chimney, in inches = D.

Area of fire-grate, in square feet $= .77 \times D$.

Area of heating-surface, in square feet = $5 \times D^2 \div 2$.

Area of water-level, in square feet $= 2.08 \times D$. Cubical content of water in boiler, in cubic feet

 $= 9 \times D^2 + 40.$

Diameter of feed-pump ram, in inches = $.011 \times D^2$.

236 DIMENSIONS OF PARTS OF LOCOMOTIVES.

Cubical content of steam room, in cubic feet = $9 \times D^{2} \div 40$.

Cubical content of inside fire-box above fire-bars, in cubic feet $= D^2 + 4$.

Thickness of the plates of boiler = 3 inch.

Dimensions of several Pipes.

Inside diameter of steam-pipe, in inches = $\cdot 03 \times D^{2}$.

Inside diameter of branch steam-pipe, in inches = .021 × D².

Inside diameter of the top of blast-pipe = $\cdot 017 \times D^2$.

Inside diameter of the feed-pipes = $\cdot 141 \times D$.

Dimensions of several moving Parts.

Diameter of piston-rod, in inches = $D \div 7$.

Thickness of piston, in inches = $2D \div 7$.

Diameter of connecting-rods at middle, in inches $= 21 \times D$.

Diameter of the ball on cross-head spindle, in inches = $\cdot 23 \times D$.

Diameter of the inside bearings of the crankaxle, in inches = $.96 \times \mathcal{Y} D^2$.

Diameter of the plain part of crank-axle, in inches = $.96 \times \sqrt[3]{D^2}$.

Diameter of the outside bearings of the crankaxle, in inches = $\sqrt[3]{\cdot 396 \times D^2}$.

Diameter of crank-pin, in inches = $\cdot 404 \times D$. Length of crank-pin, in inches = $\cdot 233 \times D$.

The following simple rules I have always made use of in the construction of locomotives, and the result of their performances proves most fully that my theory is correct, having never failed in one single instance in the performance of an engine, and having drawn the heaviest load ever drawn by a single locomotive in the world. The "Philadelphia" hauled a load of 1268 tons from Pottsville to Richmond—94 miles—158 coal cars, containing 750 tons of coal. The train was 2020 feet in length. The load was started and drawn through curves of 750 feet radius, at a rate of 10 miles per hour, the engine only weiging $15\frac{8}{10}$ tons. The engine was upon 6 wheels, with my patent flexible vibrating truck, coupled, 42 inch diameter, cylinder $14\frac{1}{4} \times 22$.

To find the capacity of boiler.—For every cubic inch of cylinder, make 13 square inches of fire surface, 4th of which must be in fire-box, 4ths in tubes.

For area of steam-ports on valve face.—Divide the area of cylinder by 12, which will be the required area, making the ports never less than 1 inch, nor more than 1‡.

For area of exhaust on valve face.—Multiply the area of steam-ports by 2.06. For steam pipe make it equal to area of steam-port. For large steam pipe, 1½ the area of steam-port. For exhaust, make it equal to area of exhaust opening on face of cylinder. For high speeds, lap one inch, lead ½ths. Slow speed freight engine, lap ½ inch, lead ½ths.

August 1

LOCOMOTIVE ENGINES.

General Features of the Boiler.

The boiler is the most important part of a locomotive engine, and the useful effect of the machine depends in a great degree on the boiler being capable of generating the requisite quantity of pure steam, without requiring the draught of air and flame through the fire and tubes to be accelerated or forced excessively. The fire-box is that part of the boiler in which the heat is generated and partially absorbed, the remaining absorption taking place in the flue tubes, which convey the products of combustion from the fire, through the water, to the smoke-box, whence they are dissipated in the atmosphere. Of course, the more nearly these products of combustion, at their entrance into the chimney, are found to have been cooled down to the temperature of the water in the boiler, the more economical in fuel the boiler will, cæteris paribus, be. To obtain the utmost economy in this way, the superficial surface of the tubes has been increased to the utmost extent, by enlarging the diameter and increasing the number and size of the tubes. The boiler of Bury's 14-inch* engine contains 92 tubes of 21 inches external diameter, and 10 feet 6

^{*} This dimension is the diameter of cylinder, by which dimension lecomotives are distinguished.

inches long; the boiler of Stephenson's 15-inch engine contains 150 tubes of 15 inch external diameter, and 13 feet 6 inches long. It will therefore be seen that the superficial surface in Bury's tubes is, comparatively, rather small, but yet the production of steam is found to be sufficiently copious, with a blast-pipe of rather more than the average diameter; on the other hand, notwithstanding its great surface, Stephenson's boiler is found to require a smaller blast-pipe than usual. It seems highly probable that the extra intensity of blast requisite in the latter case consumes so much power to produce it, as completely to countervail the economy of fuel consequent on the very complete abstraction of the heat, by the great length of tubes in proportion to their diameter.

In an experiment tried by Mr. Stephenson, the heating surface of the fire-box, where the heat is received by radiation, was found to be more effectual than the tube surface, where the heat is received by conduction, in the ratio of 1 to 3, and hence the heating surface of a locomotive is sometimes estimated as the surface of the furnace plus one-third that of the tubes.

The shell, which is cylindrical, is attached to the smoke-box and fire-box by angle-iron; the end of the shell next the smoke-box is closed entirely by the tube-plate, but at the smoke-box end the water has free access quite round the internal fire-box,

one side of which forms the tube-plate. The shell, external fire-box, and the smoke-box are always of iron, the thickness of plate being $\frac{5}{16}$ th in. in ordinary boilers of 3 feet 4 in. in diameter, though in some cases it is $\frac{2}{8}$ in.; the pitch of rivets is $1\frac{7}{8}$ in., and the diameter of rivets $\frac{11}{16}$ th in. The shell is sometimes made with flush joints, a band of iron covering the joint attached by two rows of rivets. The boiler plates should have their fibres running round the boiler instead of in the direction of its length, as the plate is somewhat stronger in that direction. The boiler is secured endwise by longitudinal stays, which are fastened by cutters to jaws attached to the end plates.

The blast-pipe is the eduction pipe diminished in area at the mouth to such a degree as to cause the steam to issue with a great velocity, whereby a powerful draught through the fire is maintained by the steam rushing up the chimney. The area of the mouth of the blast-pipe varies in different engines, but an area of 12 d of the area of the cylinder is a common proportion. A variable blast-pipe, the orifice of which may be increased or diminished in area, is now much used. One arrangement for this purpose consists of the application of a regular plate at the top of the blast-pipe, with a hole through the centre of the plate, through which the nozzle of the blast-pipe passes. When this regulator plate is closed, the whole of the steam has to ascend

through the central nozzle; but when the regulator is open, or partly open, a part of the steam escapes through the holes in it. Another plan consists in the application of a movable plug within the blastpipe, which may narrow the escape orifice to an annular space of small area, the plug being raised or lowered by a lever and rod. Stephenson's method of contracting the blast consists in making the nozzle of the pipe conical, and forming it to slide within the upright pipe, whereby an annular space is left for the escape of the steam around the nozzle when the nozzle is lowered.

The man-hole, or entrance into the boiler, consists of a circular or oval aperture of about 15 in. diameter, placed by Bury at the summit of his dome, and by Stephenson in the front part, a few inches above the cylindrical part of the boiler. The cover that closes this aperture in Bury's engine also contains the safety-valve seats, thus simplifying the construction by preventing the necessity of an independent aperture and cover for the safety-valves, as in Stephenson's engine, where the safety-valves are placed independently on the top of the dome. The steam-tight joint of the man-hole cover is made in Bury's engine by a single thickness of canvas, smeared with red-lead; and the joint is not liable to become defective or leaky, because the surfaces are turned true and smooth, both on the cover and its seat.. When these surfaces have not been made

true in this manner, it becomes requisite to use a number of thicknesses of canvas, or other material, to form the joint; and the action of the steam soon rotting away the soft substance, a leakage is caused through the joint, which makes repair indispensable. The small domes are of the same form as those used on the Grand Junction Railway, which are cylindrical vessels of about 20 in. diametamand 2 feet in height, with a semi-globular top, are generally made of plate-iron, about & in. thick, welded at the seam, and with the flange at the bottom turned out of the same piece. In some cases, domes of this form have been constructed of cast iron, about # in. thick, but they have been found objectionable from their top weight, and they cannot be considered as altogether safe from explosion.

Fire-less.—Iron fire-boxes have been extensively tried by Bury and others, and in cases where the plate-iron of which they were formed has been of a peculiarly perfect texture, and not liable to laminate or crack under the action of the heat, they have been found to answer exceedingly well, and not only to be much cheaper than copper, but also to last at least twice as long before requiring renewal. If the materials be very carefully selected, the use of iron fire-boxes will be found productive of economy, if only used in situations where pure water is obtainable. The duration of ordinary copper fire-boxes depends in a great measure upon the original tex-

٠:

ture of the copper, which ought to be rather coarsegrained than rich and soft, and also particularly free from irregularity of structure and lamination. Considerable advantages, have been found to arise from increasing the capacity of the fire-box, more especially its depth, which ought to be such as to allow of the requisite quantity of coke being placed within it whout reaching above the mouths of the lower tubes, a fault which would cause the smaller pieces of coke to enter and block up the tubes, to the manifest deterioration of the draught, and diminution of the efficacy of the engine. The heating surface in the fire-box being of an extremely valuable and efficient nature, and the extensive area of fire-bar surface being very conducive to freedom of draught, we are induced to question whether the large square fire-box is not pro tanto preferable to the round one, which must necessarily be very small, except on the 7-feet gage, in which case the round fire-box offers decided advantages. The square firebox is generally made of iron, & in. to & in. thick in every part except the tube-plate, which has been from § in. to § in.; but experience has shown considerable advantage in making the tube-plate I in. thick, as this great strength prevents the spaces between the tubes from being compressed, and the tube holes rendered oval; in the processes of drifting and feruling the tubes, however, this evil will be found to exist, even with a 7 in. tube-plate, if

the tube holes be placed in too close contiguity, as has been found the case in several of Stephenson's engines; and, from practical observation, we find that 3 in. should be the minimum distance between any two tubes. The sides, back, and front below the tubes, of the square fire-box, are stayed at intervals of 4½ in. to 5 in. with either copper or iron stays, screwed through the outer case and the firebox, and securely riveted; but, as the riveting within the fire-box is found to decay rapidly, from the action of the heat, Mr. Dewrance, of the Liverpool and Manchester Railway, has adopted, with good results, stays formed with a large square head, and screwed from within the fire-box outwards, the square head projecting 2 in. into the flame. stay-bolts for the fire-box are found to last nearly as long as copper, and, from their superior tenacity, are often considered preferable. Until lately, it had been supposed that round fire-boxes possessed such advantages in point of strength over square ones, owing to their arched form, that they were capable of resisting the pressure of the steam without the use of stays; but experience has shown that, whatever be the shape, a fire-box must be stayed more or less to render it safe, for the shell of the fire-box is liable to be wasted so much by the heat, that it is not safe to depend altogether upon the strength its form confers, especially as the form will be changed if the boiler be suffered to become short

of water. In round fire-boxes, the sides near the crown part generally suffer most from waste: these portions are now provided with stays by Messrs. Bury, Curtis, and Kennedy, who are the main supporters of round fire-boxes; and with this provision the round fire-boxes are necessarily the stronger. The roofs of all fire-boxes require to be stayed by cross-bars but the bars are required to be both stronger and more numerous for the square fireboxes, and should always be carefully made of wrought-iron, and very carefully fitted before being bolted on. Stay-bars of cast-iron have been employed, on account of their cheapness; but, having led several times to accidents from explosion, they are now discarded. These bars are only in contact with the fire-box at the part around the rivets, and in all the other parts they permit the access of the water below them. It is advisable to bring these bars to an edge on the under side, so as to facilitate the escape of the steam. In Sharp and Robert's engines, the fire-box is made of three plates; the tube-plate and front plate have their edges bent over, and to these are attached a single plate which forms the crown and two sides of the furnace. The interior fire-box is joined at foot to the exterior by a Z-shaped iron, which forms the bottom of the water-space, and is preferred, inasmuch as it leaves a wide water-space, and is easily cleaned. outer and inner fire-boxes are joined round the fur-

nace door, which is double, to prevent inconvenient radiation. The external fire-box has sometimes a semi-cylindrical top, joined by turning over the sides like an arch, and sometimes a dome-shaped top.

The fire-bars have always been a source of much expense in the locomotive engine, as they burn out very rapidly, and have to be often recoved: from the rapid combustion going on over their upper surfaces, they become heated intensely throughout, causing them to throw off scale, and to bend, under the weight of the fuel. The best remedy has been found to consist in making the bars very thin and deep, so as to keep their lower edges exposed to a cooling draught of air, and to diminish the area of metal conducting heat downwards from their heated upper edges. Thin fire-bars admit of being placed nearer together than thick ones, thus offering no increased impediment to free draught, while preventing the loss of small pieces of unburnt coke, which might otherwise drop through into the ashbox and be wasted. Fire-bars have given much satisfaction when made 4 inches deep, (parallel,) and full § inch thick on the upper edge and § inch on the lower edge. The frame carrying the fire-bars has often been made capable of being dropped on the instant, with its fire-bars and fire, into the ashbox, or upon the road, by means of catches drawn back by levers; but though the fire-bar frame is

thus left unsupported, very often it will not drop, and even cannot be forced down out of its place, owing to the clinkers and tarry products of combustion forming an adhesive binding between its edge and the fire-box: it has accordingly been found best to support the fire-box frame permanently, and when any cause requires the sudden withdrawal of the fire, to liff the fire-bars singly out of place, by means of the ordinary dart. It is necessary to place the fire-bars with their upper surface about 3 inches higher than the bottom of the water-spaces, which, by this means, will be allowed to contain quiescent water, ready to retain without injury any deposite that subsides from the water; and the water-spaces should be periodically cleansed, by means of the mud-holes placed opposite the edge of each waterspace in the lower part of the outer fire-box shell. These mud-holes are made water-tight by means of either a brass plug simply screwed in and with a slight taper, or by a door applied with a soft packing on its face, and screwed up with a bridge-piece and bolt, making the joint on the internal surface of the outer shell, the hole and door being made sufficiently oval to enable the door to be introduced into the water-space. The latter plan often gives rise to inconvenience, from the joint being found leaky when the steam is raised, rendering it necessary to drop the fire, and empty the boiler, before it can be renewed. In some very large square fire-

boxes, such as those used on the Great Western Railway, a diaphragm, or divisional 4-inch waterce, has been placed across the middle of the firebox, with the view of obtaining increased heating This diaphragm has its lower edge (in which deposite takes place) made straight, and about 2 inches below the general surface of the fire-bars, but its upper edge is of the form of an inverted arch, in order to promote the free delivery of the steam generated within it into the steam-dome. The sides of the fire-box, where the diaphragm is attached, are not cut away to form passages for the water and steam, but are pierced with a series of circular holes, 3 inches in diameter, to permit a due circulation without uselessly weakening the fire-box; but the uppermost hole of the series must be placed at the highest point of the diaphragm, otherwise an accumulation of steam, and consequent injury at that point, will ensue. The use of a diaphragm is found to be beneficial in the case of a very powerful engine, provided its upper edge be made sufficiently low to admit of the tubes being conveniently drifted over it, and to allow the dart to be used with facility in dropping the front set of fire-bars.

The ash-box consists of a plate-iron tray, placed below the fire-box, to receive the burning ashes that drop from between the fire-bars. In the earlier locomotives, no ash-boxes being used, the red-hot ashes were dispersed to a considerable distance by

coming in contact with the wheels, and conflagrations were often thereby originated. The ash-box
should be as large as convenient, and not less than
10 inches deep, otherwise it will materially impede
the draught; but if of ample dimensions, and closed
at the sides and back, it will increase the draught,
particularly when running against a head wind, at
which time a strong draught is required. A hanging shutter to open or close the front of the ash-box
forms a good damper. The bottom of the ash-box
is placed about 9 inches above the level of the rails,
and should on no account be nearer than 6 inches,
otherwise the engine cannot pass safely over stones
or similar objects lying accidentally between the
rails.

Tubes.—The tubes are generally formed of brass; the ferules by which they are secured are for the most part made of steel at the furnace end, and of malleable iron at the smoke-box end, and the holes in the tube-plates are tapered, so that the tubes bind them together. Great care should be taken in securing the tubes, as any neglect will be productive of much inconvenience. The ferules are found to be very injurious to freedom of draught, particularly in very small tubes; and to overcome this objection the methods we have mentioned, and many others, have been tried for fastening the tubes in by riveting over or screwing into the tube-plates; but hitherto no method, except that of internal tube-

rings, has been found to answer in the case of brass tubes; but we think it likely that, with wrought-iron tubes, internal tube-rings will be ultimately aban-Stephenson has frequently adopted iron tubes of late, in preference to brass, on the score of their greater cheapness and durability; and in some cases, where unusual attention has been paid to them, and pure water used, they have been found to answer very well. A common internal diameter of tubes is 15 in. If made very small, the tubes are liable to be choked by pieces of coke, and the sectional area will be inconveniently contracted, while, if made much larger, the heating surface will be unduly diminished. The number of tubes varies considerably in different boilers; in one species of locomotive in extensive use the number is 134, and the pitch 21 in. Sufficient space is left below the tubes for deposite, that it may not be in contact with the tubes and cause them to be burned: the extreme tube of the widest row is about the diameter of a tube from the boiler shell. In the long-boiler engines of Stephenson, from the volume of water contained in them, considerable time is required to get up the steam, even so much as three and a half hours where the ordinary engines take two hours, and they require great care in firing and feeding to prevent the steam running low.

Smoke-box and chimney.—The smoke-box door of many engines is hinged at the bottom, and is kept

shut by means of handles and catches; but the position of the door when open is in that case inconvenient, as it prevents ready access to the tubes. some of Stephenson's engines, the smoke-box door is in two leaves, which open like the doors of a house, overlapping at the centre, where they are closed by a bar, and at the top and bottom by handles and catches. This door admits of the easy examination of the cylinders and valves. A small door is usually left near the bottom of the smokebox, by which the accumulated cinders may be removed. The bottom of the smoke-box should not be below the ash-pan, or be much nearer the level of the rails than 18 inches, else the waste-water cocks of the cylinder projecting through it, would be liable to injury from objects lying on the line. The smoke-box is lower in freight engines than in passenger engines, on account of the driving wheels being smaller; and, being coupled with the otherwheels, the cylinder has frequently to be inclined to let the moving parts work clear of the front axle.

The chimney must not stand more than 14 feet high above the rails. The sectional area of the chimney is about 1-10th of the area of fire-grate. The chimney is usually provided with a damper, similar to the disk throttle-valve of an ordinary engine; this is generally hung off the centre, and a hole is made in it for the top of the blast-pipe, which projects through it when it is closed. Another

- 1 Aug. . .

damper has been applied by Messrs. Rennie at the smoke-box end of the tubes, consisting of a slidingplate perforated with holes, which, when opposite the ends of the tubes, will give a free current, and may be made to close them completely if required. Another kind of damper consists of an arrangement of thin bars similarly disposed to the laths of a Venetian blind; the plates being so hinged, that when placed with their edges to the tube-plate, they leave the flow of air through the tubes unimpeded, and when hanging down they close up the tubes, or they partially close the tubes in any intermediate position. By either of these arrangements, the hot air is retained for a longer period in contact with the tubes than if a simple damper were used, as each tube is virtually furnished with a hanging bridge which keeps in the hottest air and lets only the coldest flow out. An inconvenient degree of heat in the smoke-box is also prevented. smoke-box is usually made of 1th plate; the chimney of 1th plate; the blast-pipe of 1th copper, and the steam-pipe of 4th copper.

Framing.—In some engines the side-frames consist of oak, with iron plates riveted on each side. The guard-plates are in these cases of equal length, the frames being curved upwards to pass over the driving-axle. Hard cast-iron blocks are riveted between the guard-plates, to serve as guides for the axle-bushes. The side-frames are connected across

at the ends, and cross-stays are introduced beneath the boiler to stiffen the frames sidewise, and prevent the ends of the connecting or eccentric rods from falling down, if they should be broken. springs are of the ordinary carriage kind, with plates, connected at the centre, and allowed to slide on each other at their ends. The upper plate terminates in two eyes, through each of which passes a pin, which also passes through the jaws of a bridle, connected by a double-threaded screw to another bridle, which is jointed to the framing: the centre of the spring rests on the axle-box. times the springs are placed between the guardplates and below the framing, which rests upon their extremities. One species of spring which has gained a considerable introduction consists of a number of flat steel plates, with a piece of metal or other substance interposed between them at the centre, leaving the ends standing apart.

A common mode of connecting the engine and tender, is by means of a rigid bar with an eye at each end, through which pins are passed. Between the engine and tender, however, buffers should always be interposed, as their presence contributes greatly to prevent oscillation and other irregular motions of the engine. A bar is strongly attached to the front of the carriage on each side, and projects perpendicularly downwards to within a short distance of the rail, to clear away stones or other

.

4

fire-box up to the arched roof of the external firebox; and this flat surface requires to be powerfully stayed by angle-irons and tension-rods. We remember an instance in which the accidental omission of one of the numerous tension-rods led to the forcing out and partial explosion of the side of the firebox, showing how much depends on the circumstances of these rods, with their joints and pins, remaining sound and uninjured from corrosion or other source of injury or decay. In this respect the round fire-box, with its dome, has the advantage of superior strength and safety. A large steamdome is found to be the most efficacious mode yet tried for preventing the evil of priming or damp steam; but no height of dome will entirely prevent it if there be not space enough left above the tubes in the cylindrical part of the boiler to allow the free passage of the steam along to the fire-box and dome, while an excessive height of dome is also found to produce an unsteady motion of the engine, by causing the machine to be top-heavy. of about 2 feet 6 inches above the cylindrical part of the boiler is found to give satisfactory results in practice, and to lead to the production of as pure steam as any greater altitude could secure. some engines the steam is withdrawn from a dome placed at the smoke-box end of the boiler, into which the steam-pipe rises. It is thought that the ebullition being less violent at this point, the steam

The state of the s

make a the state from the lottler to the state of the makenal translation which the makenal translation with the makenal translation and the state and those with smilest translation and the state and the most part translation and the most part translations are translations and there with the most part translations are makenal translations and the out-

stretched wings of a butterfly, and being made to revolve on its central pivot, by connecting links between its outer edges or by a central spindle. some of Stephenson's engines with variable expansion geer, the regulator consists of a slide-valve covering a port on the top of the valve-chests. rod passes from this valve through the smoke-box below the boiler, and, by means of a lever parallel to the starting lever, is brought up to the engineer's reach. Cocks were at first used as regulators, but were given up, as they were found liable to stick A gridiron slide-valve has been used by Stephenson, which consists of a perforated square plate moving upon a face with an equal number of This plan of a valve with a small movement holes. gives a large area of opening. In Bury's engines a sort of conical plug is used, which is withdrawn by turning the handle in front of the fire-box; a spiral groove of very large pitch is made in the valve-spindle, in which fits a pin fixed to the boiler, and by turning the spindle an end motion is given to it which either shuts or opens the steam passage according to the direction in which it is turned. The best regulator would probably be a valve of the equilibrium description, such as is used in the Cornish engines.


Safety-valves and fusible plugs.—The safety-valves are placed upon the dome, in Bury's and Stephenson's engines; but it has been found much

- منتشة فيصل

better to place them on the cylindrical part of the boiler, because when an engine commences to prime, the water projected from the blast-pipe generally causes an unusual generation of steam, which escapes at the safety-valve, and in its passage of course accumulates and lifts the surfacewater and foam at whatever point of the boiler the safety-valves are situated; thus the further they are placed from the steam-dome the better, as they will then diminish the evil of priming, which, if placed upon the steam-dome, they would only aggravate. Indeed, if the safety-valves are properly situated, an engineman has the great advantage of being able to check or stop the priming of the boiler on the instant, by causing his safety-valves to blow off strongly. It is requisite to place the safety-valves upon a tubular pillar, of such altitude as to prevent the escaping cloud of steam from obscuring the look-out of the engineman. Bury's 14-inch engine contains a pair of safety-valves of 21 inches diameter, exclusive of the mitre; and Stephenson's 15inch engine contains a pair of 4-inch diameter. The latter dimension is preferable, as large safetyvalves are much less liable to adhere to their seats than small ones. Safety-valves require to be tested occasionally; and the best method consists in attaching the valve joint-pin to one end of an ordinary pair of scales, when the overbalancing weight at the reverse end will indicate the real pressure upon

the valve, which exceeds the nominal pressure by the weight and friction of the lever, with its joints and spring balance, and the adhesion of the valve to its seat. To bring this adhesion to a minimum, it is a good plan to make the lip of the valve-seat somewhat flatter than a mitre, that is, at a less angle than 45° with the horizon: 30° answers very well.



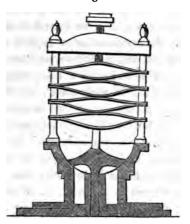

The safety-valve is pressed down by means of a lever, and a screw at its extremity is attached to a spiral spring balance. To find the pressure per square inch, multiply the weight indicated on the scale, by the ratio of the two arms of the lever, and divide the product by the number of square inches in the area of the valve; but to save the trouble of

calculation, the ratio of the arms of the lever is made so as to be expressed by the number which represents the area of the valve, so that the weight marked on the balance is the pressure per square inch upon the valve. Some allowance must be made for the weight of the valve itself, and part of that of the lever. It is expedient to put a stop upon the screw by which the lever is screwed down or the tension of the spring increased, so as to prevent the pressure from exceeding a safe amount. Lock-up valves, which were intended as a precaution against the recklessness or neglect of the engineer, have fallen into disfavour, as from such valves being inaccessible and seldom being required to act. they became fixed in their seats; but it is an easy thing to make a valve which can be raised, but cannot be forced down by the engineer, and such valves are in general use in steam vessels. In the engines of Cave, Hick, and Jackson, one of the valves is permanently loaded a little above the usual pressure, and enclosed in a chest; it is usually made with bent, flat, steel springs, pressing against one another, and guided by standards screwed to the valve-seat. One of these valves is shown by fig. 55.

A plug of lead is usually fixed in the furnace crown, which melts if the boiler becomes short of water, and gives notice of the danger. In some engines a cock is attached to the top of the steamdome, against which a small disk of fusible metal is

retained by a ring of brass bolted to the cock, and which is intended as an antidote to explosions. When the coek is opened, the steam has access to the under side of the fusible plate, which when melted is forced through the small hole in the retaining plate; and the engineer being thus warned of the undue pressure, can shut the cock and take measures to reduce the pressure. This, however, is altogether a futile expedient, for the steam would be too much cooled in passing through this cock and small pipe to melt the metal: and even if that defect were remedied, the objections still remain, as applying to all fusible plugs, and the danger is increased by leading the engineer to trust to a measure of safety that is inoperative in the hour of dan-Steam gages have not been applied hitherto to locomotives, on account of the inconvenient height of the column of mercury requisite to balance the steam. But it would be an easy thing to make a steam gage of moderate dimensions, by making the tube, whether straight or siphon, of glass, closed at the top, so that the mercury in its ascent would have to compress the air above it; and the graduations would be equal, or nearly so, if the tube were made taper.

Cylinders and valves.—The cylinders are made of cast iron, about three-quarters of an inch thick, and should be of hard metal, so as to have but little tendency to wear oval from the weight and friction

The ends of the cylinder are made of the piston. about one inch thich, and both ends are very generally made removable. At each end of the cylinder there is generally about half an inch of clearance. The valve is invariably of the three-ported description: it is made of brass, and is not pressed upon by the valve-casing, as it is necessary in the absence of cylinder escape-valves that the steam-valve should be capable of leaving the face to enable the steam or air shut within the cylinder to escape when the train is carried on by its momentum, and also to afford an escape for the water carried over by the steam when priming takes place. ration of priming upon the cylinders and valves is very injurious, as the grit and sediment then carried over with the steam wears the pistons, cylinders, and valve faces very rapidly; so that if the water be sandy and the engine addicted to priming, the pistons and valves may be worn out and the cylinders require reboring in the course of a few months.

The valve-casing is sometimes cast on the cylinder: the face of the cylinder on which the valve works is raised a little, so that any foreign matters deposited upon it may be pushed off to the less elevated parts by the valve. The area of the steamports is in some cases one-ninth, and in others one-twelfth or one-thirteenth of the area of the cylinder; and the eduction one-sixth to one-eighth of the area

of the cylinder,—proportions which allow at mean speeds of twenty-five to thirty miles per hour, a pressure little different from that of the steam in the steam-pipes; for higher speeds the ports should be larger in proportion. The valve-casing is covered with a door, which can be removed to inspect the valves or the cylinder face. Some valve-casings have covers upon their front end as well as their top, which admits of the valve and valve bridle being more readily removed.

A cock is placed at each end of the cylinder to allow the water to be discharged which accumulates there from priming and condensation. The four cocks of the two cylinders are connected, so that by working a handle the whole are opened or shut at the same time. In Stephenson's engines with variable expansion, there is but one cock, which is on the bottom of the valve chest.

The valve lever is usually longer than the eccentric lever, to increase the travel of the valve. The pins of the eccentric lever wear quickly. Stephenson puts a ferule of brass on these pins, which being loose and acting as a roller, facilitates the throwing in and out of gear, and when worn can easily be replaced; so that there need be no material derangement of the motion of the valve from play in this situation. The starting lever travels between two iron segments, and can be fixed at the dead point or for the forward or backward motions. This is done


ķ ·

by a small catch or bell crank jointed to the bottom of the handle at the end of the lever, and coming up by the side of the handle, but pressed out from it by a spring. The smaller arm of this bell crank is jointed to a bolt which shoots into notches made in one of the segments between which the lever moves. By pressing the bell crank against the handle of the lever, the bolt is withdrawn, and the lever may be shifted to any ether point; when the spring being released, the bolt flies into the nearest notch.

The pistons which consist of a single ring and tongue piece, or of two single rings set one above. the other so as to break joint, are preferable to those which consist of many pieces. In Stephenson's pistons, the screws are liable to work slack and the springs to break. The piston-rods are made of steel, the diameter being from one-seventh to one-eighth of the diameter of the cylinder. They are tapered into the piston, and secured there with a cutter. The top of the piston-rod is secured by a cutter into a socket with jaws, through the holes of which a cross-head passes, which is embraced between the jaws by the small end of the connecting-rod, while . the ends of the cross-head move in guides. Between the piston-rod clutch and the guide blocks, the feedpump rod joins the cross-head in some engines. The guides are formed of steel plates attached to the framing, between which work the guide blocks, fixed. on the ends of the cross-head, and which have

flanges bearing against the inner edges of the guides. Steel or brass guides are better than iron ones. Stephenson and Hawthorn attach their guides at one end to a cross-stay,—at the other to lugs upon the cylinder cover; and they are made stronger in the middle than at the ends. Stout guide-rods of steel encircled by stuffing-boxes on the ends of the cross-head would probably be found superior to any other arrangement. The stuffing-boxes might contain conical bushes cut spirally, in addition to the packing; and a ring cut spirally might be sprung upon the rod and fixed in advance of the stuffing-box with lateral play, to wipe the rod before entering the stuffing-box, and prevent it from being scratched by the adhesion of dust.

Feed apparatus.—The feed-pumps are made of brass, but the plungers are sometimes made of iron, and are generally attached to the piston-rod crosshead, though in Stephenson's engines they are worked by rods attached to eyes on the eccentric hoops. There is a ball valve between the pump and the tender, and two usually in the pipe leading from the pump to the boiler, besides a cock close to the boiler, by which the pump may be shut off from the boiler in the case of accident to the valves. The ball valves are guided by four branches which rise vertically and join at top in a hemispherical form, as shown in fig. 56. The shocks of the ball against this have in some cases broken it after a week's

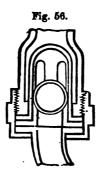

work, from the top of the cage having been made flat, and the branches not having had their junction at top properly filleted. These valve guards are attached in different ways to the pipes; when one occurs at the junction of two pieces of pipe it has a flange, which, along with the flanges of the pipes and that of the valve seat, are held together by a union joint. It is sometimes formed with a thread at the under end, and screwed into the pipe. balls are cast hollow, to lessen the shock as well as to save metal: in some cases, where the feed-pump plunger has been attached to the cross-head, the piston-rod has been bent by the strain; and that must in all cases occur if the communication between the pump and boiler be closed when the engine is started, and there be no escape valve for the water. Spindle valves have in some cases been used instead of ball valves, but they are more subject to derangement. Slide valves might easily be applied, and would probably be found preferable to either of the other expedients. The pipes connecting the tender with the pumps should allow access to the valves and free motion to the engine and tender.

The feed-pipe of many engines enters the boiler near the bottom, and about the middle of its length. In Stephenson's, the water is let in at the smoke-box end of the boiler, a little below the water level. By this means, the heat is more effectually extracted from the escaping smoke; but the arrangement is of questionable applicability to engines of which the steam-dome and steam-pipe are at the smoke-box end, as in that case the entering cold water would condense the steam.

Wheels.—The driving wheels are made large to increase the speed; the bearing wheels also are easier on the road when large. In freight engines, the driving wheels are smaller than in passenger engines, and are generally coupled together. Wheels are made in various ways; they are frequently made with cast-iron naves, and with the spokes and rim of wrought-iron. The spokes are forged out of flat bars with T-formed heads; these are arranged radially in the founder's mould, while the cast-iron centre is poured around them; the ends of the T heads are then welded together to constitute the periphery of the wheel or inner tire, and little wedge-form pieces are inserted where there is any

deficiency of iron. In some cases, the arms are hollow, though of wrought-iron, the tire of wroughtiron, and the nave of cast-iron; and the spokes are turned where they are fitted into the nave, and are secured in their sockets by means of cutters. Hawthorn makes his wheels with cast-iron naves, and wrought-iron rims and arms, but instead of welding the arms together, he makes palms on their outer end, which are attached by rivets to the rim. These rivets, however, unless very carefully formed, are apt to work loose; and we think it would be an improvement if the palms were to be slightly indented into the rim, in cases in which the palms do not meet one another at the ends. When the rim is turned, it is ready for the tire, which is now often made of steel. The materials for wheel tires are first swaged separately, and then welded together under the heavy hammer at the steel-works, after which they are bent to the circle, welded, and turned to certain gauges. The tire is now heated to redness in a circular furnace; during the time it is getting hot, the iron wheel, previously turned to the right diameter, is bolted down upon a face-plate or surface; the tire expands with the heat, and when at a cherry-red, it is dropped over the wheel, for which it was previously too small, and it is also hastily bolted down to the surface-plate; the whole load is quickly immersed by a swing crane into a tank of water about five feet deep, and hauled up and down

until nearly cold; the tires are not afterwards tempered. It is not indispensable that the whole tire should be of steel, but a dovetail groove turned out of the tire at the place where it bears most on the rail, and fitted with a band of steel, which may be put in in pieces, is sometimes adopted, though at the risk of being thrown off in working. after being introduced, is well hammered, which expands it sideways, until it fills the dovetail groove, but it has sometimes come out. The tire is attached to the rim by rivets with countersunk heads, and the wheel is then fixed on its axle. The tire is turned somewhat conical, to facilitate the passage of the engine round curves—the diameter of the outer wheel being virtually increased by the centrifugal force, and that of the inner wheel correspondingly diminished, whereby the curve is passed without the resistance which would otherwise arise from the inequality of the spaces passed over by wheels of the same diameter fixed upon the same axle. The rails, moreover, are not set quite upright, but are slightly inclined inwards, in consequence of which the wheels must either be conical or slightly dished, to bear fairly upon them. One benefit of inclining the rails in this way and coning the tires is, that the flange of the wheel is less liable to bear against the side of the rail, and with the same view the flanges of all the wheels are made with large fillets in the corners. Wheels have been tried loose

upon the axle, but they have less stability, and are not new much used.


In all locomotives there is a very material loss of power from the contraction of blast-pipe necessary to maintain the blast; at high speeds one-half of the power of the engine is lost by the inadequate area of the steam passages, of which the greatest loss is that arising from the contraction of the blast-pipe. Tenders are now made larges, to obviate the necessity of so many fuel and water stations. Tenders can be put on any number of wheels, so that inconvenience is not-likely to arise from their size and weight.

Cranked axle.—The cranked axle is made of wrought-iron; with two cranks forged upon it, towards the middle of its-length, at a distance from each other answerable to the distance between the cylinders; bosses are made on the axle for the wheels to be keyed upon, and there are bearings for the support of the framing. The stale is usually forged in two pieces, which are then welded together. Sometimes the pieces for the cranks are put on separately, but those so made are liable to give way. In engines with outside cylinders the axles are straight, the crank-pins being inserted in the naves of the wheels. The bearings to which the connecting-rods are attached are made with very large fillets in the corners, so as to strengthen te axle in that part, and to obviate side play in

the connecting-rod. In engines which have been in use for some time, however, there is generally a good deal of end play in the bearings of the axles themselves, and this slackness contributes to make the oscillation of the engine more violent.

Connecting-rods.—It is very desirable that the length of the connecting-rod should remain invariable, in spite of the wear of the brasses, for there is a danger of the piston striking against the cover of the cylinder, if it be shortened, as the clearance is left as small as possible, in order to economize steam. In some engines the strap encircling the crank-pin is fixed immovably to the connecting-rod by dovetailed keys, as shown in fig. 58, and a bolt passes through the keys, rod, and strap, to prevent the dovetail keys from working out. brass is tightened by a gib and cutter, which is kept from working loose by three pinching screws, and a cross-pin or cutter through the point. The effect of this arrangement is to lengthen the rod, but at the cross-head end of the rod the elongation is neutralized, by making the strap loose, so that in tightening the brass the rod is shortened by an amount equal to its elongation at the crank-pin end. The tightening here is also effected by a gib and cutter, which is kept from working loose by two pinching serews pressing on the side of the cutter. Both journals of the connecting-rod are furnished with oil-cups, having a small tube in the

centre, with siphon wicks. The connecting-rod, represented in figs. 58, 57, is a thick flat bar, with its edges rounded. Stephenson's connecting-rod is

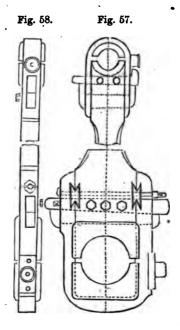


made at the crank end; a strap of round iron passes over both brasses, and is attached to the T end of the connecting-rod by means of nuts upon the ends of the bent iron, which is made thickest in the middle, to resist the strain. This plan has the effect of shortening the connecting-rod when the

brasses are screwed up, and the brasses require to be very strong and heavy. Hawthorn's connectingrod has a strap at each end, tightened by a gib and cutter; but, to obviate the tendency to shorten the rod, the piston-rod end is furnished with a cutter for tightening the brass outwards. The point of the cutter is screwed, and goes through a lug attached to the gib, and is tightened by a nut. would be preferable to attach the lug to the cutter and the screw to the gib, as the projection of the screw, when the cutter is far in, would not then be so great. In the engines on the Rouen Railway the piston-rod end of the connecting-rod has neither strap nor brass, but simply embraces the crosshead, while the crank end is hollowed out to admit brasses, which are tightened by a gib and cutter. The length of the connecting-rod varies from four times the length of the crank to seven times. long connecting-rod has the advantage of diminishing the friction upon the slides.

Eccentrics and eccentric-rod.—The eccentrics are made of cast iron; and when set on the axle between the cranks, they are put on in two pieces held together by bolts, as shown in figs. 59, 60: but in straight-axle engines they are cast in a piece, and are secured on the shaft by means of a key. The eccentric, when in two pieces, is retained at its proper angle on the shaft by a pinching-screw, which is provided with a jam-nut to prevent

it from working loose. A piece is left out of the eccentric in casting it, to allow of the screw being inserted, and the void is afterwards filled by inserting a dovetailed piece of metal. Stephenson and Hawthorn leave holes in their eccentrics on each side of the central arm, and they apply pinching-screws in each of these holes. The screws-sometimes alacken and allow the eccentric to shift, unless they are provided with jam-nuts. In the Rouen engines with straight axles, the four eccentrics are cast in one piece.

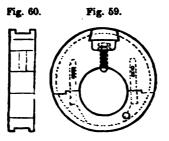

Eccentric straps are best made of wrought iron, as inconvenience arises from the frequent breakage of brass once. When made of malleable iron, one-half of the strap is forged with the rod, the other half being secured to it by bolts, nuts, and jammus. There of brass are in some cases pinned with the malicable iron hoop, but it appears to be provired to yet trasses within the strap to encircle the constant as in the case of any other bearing.


When brass straps are used, the lugs have generally nuts on both sides, so that the length of the eccentric-rod may be adjusted; but it is better for the lugs of the hoops to abut against the necks of the screws, and if any adjustment is necessary from the wear of the straps, washers can be interposed. In some engines the adjustment is effected by screwing the valve-rod, and the cross-head through which it passes has a nut on either side of it by which its position upon the valve-rod is determined. The forks of the eccentric-rod are steel. The length of the eccentric-rod is the distance between the centre of the crank axle and the centre of the valve-shaft.

Valve motions.—In locomotives the eccentrics are now always fixed upon the axle, and two are used, one for the forward, the other for the backward motion: the loose pulleys have been given up on account of their liability to get out of order from the shocks to which they were subjected by sudden change of direction when worked at a quick speed. The arrangement whereby the motion of the eccentric is transmitted to the valve, is either direct or indirect. In cases of indirect attachment the motion is given through the intervention of levers, and there is some variety in the arrangements by which the reversing is accomplished. Alcard and Buddicome use a pair of eccentrics at the end of the axle, which is straight; the reversing shaft is placed below the level of the piston-rod, and to a lever keyed


ment it are amazined links of unertial length, conment at their uner extremities with the ends of the economic-role, one of which is above and one heary the study in the lever if the valve-shaft, so must the armer especialistic in lieur in gear, gives the forward motion, and the lower gives the backvari nomm. In other engines, firsts are simated alone and leave the stud of the eccentric levers : me fareard erreaminered is lifted up out of year by s ind depending from the lever on the reversing study and by the same notvement the backing ecmarrie a little mit gear by a longer link connectme to 77 a lever, not upon the reversing shaft, but more a shall leave in Saythenson and Hawthorn many horis used a similar arrangement, but admitting of the economic-rols being both under the study of THE PARTY OF THE TRANSPORTE SO THAT THERE IS NO danger in the event of a disengaged rod falling down, to to say that to the gesting being bent or twisted IT here role being in year at the same time. The metera of the essentials is now frequently transmoned directly to the valves. In Panwel's arrangement of valve granter, the valve works on the side of the evinence, and the valve-rod is prolonged in the form of a less first blade of a lozenge section, or each sole of which a stud is fixed.—one being ar septical the the match of the forward eccentric-rod, and the other for that of the reversing eccentric. Array them is fixed the reversing shaft, from a

lever on which depend two links of unequal length, which are jointed to the ends of the eccentric-rods. By working this lever up or down, the eccentricrods will be alternately engaged and disengaged, and will communicate their respective motions to the valve; or if the lever be kept in its mid position, both eccentrics will be out of gear, and the valve of course will remain stationary. Pauwel's engines are difficult to work, and are subject to shocks from going suddenly into gear: this arises from the whole weight of levers and rods being on the front of the reversing shaft, but the evil might be remedied by attaching a counterbalance to the shaft. Valves situated upon the sides of the cylinders are in many cases more easily connected with the eccentric, but they require springs to keep them up to the face, so that it appears preferable to make the faces of the two cylinders inclined to one another rather than upright, if valves on the sides of the cylinders are preferred. Stephenson's link motion is the most elegant, and one of the most eligible modes of connecting the valve with the eccentric yet introduced. The nature of this arrangement will be made plain by a reference to fig. 61, where e is the valve-rod which is attached by a pin to an open curved link connected at the one end with the driving eccentric-rod d, and at the other with the backing eccentric-rod d'. The link with the eccentric-rods is capable of being moved up or down by the rod f and bell crank f'', situated on the shaft g, while the valve-rod remains in the same

Fig. 61.

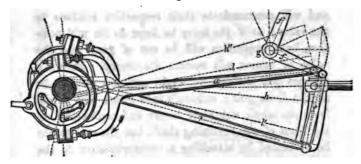

horizontal plane. It is very clear that each end of the link must acquire the motion of the eccentricrod in connection with it, whatever course the central part of the link may pursue, and the valve-rod will partake most of the motion of the eccentric-rod that is nearest to it. When the link is lowered down, the valve-rod will acquire the motion of the upper eccentric-rod, which is that proper for going ahead; when raised up, the valve-rod will acquire the motion of the reversing eccentric, while in the central position the valve-rod will have no motion, or almost none. The link motion therefore obviates the necessity of throwing the eccentric-rod out of gear; it also enables the engine to be worked to a certain extent expansively, though as a contrivance for working expansively, we cannot hold it as deserving of much commendation. The dead point of the link motion is where the line of the valve-rod bisects the angle formed by the eccentric-rods. The maximum forward motion is when the rods are as figured, and the maximum backward motion when the rods d and d' are in the position h'' and h'. The best forms of the link motions have side studs, to which the eccentric-rods are connected, and these are placed so that at the greatest throw, whether

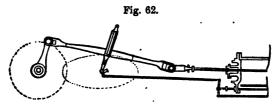

backward or forward, the valve-rod and eccentric-rod are in the same straight line, and the valve receives the full throw of the eccentric. A counter-weight is also attached to the shaft to balance the weight of the link and rods. The second eccentric and eccentric-rod of the link motion might, it appears to us, be beneficially dispensed with by placing the shaft g in the plane of the valve-rod, and attaching a pin to the centre of the link, which would work in the eye of the horizontal arm of the lever f. This lever would in the case require to be made much stronger than at present, as it would have to withstand the thrust of the eccentric, and


the link would then virtually be a double-ended lever with a movable centre. Where more convenient, the pin in the centre of the link might be moved in vertical or curved guides, instead of being attached to the lever f. The act of raising the link, and with it the eccentric-rod, would in effect alter the position of the eccentric on the shaft, and, if the eccentric-rod were properly proportioned in length, would make the lead right on the reversing aide.

How to set the valves of locomotives. - When the cylinder is horizontal, the crank is horizontal at the ends of the stroke; but it is not vertical when the piston is at the middle of its stroke, owing to the deviation from parallelism introduced from the connecting-rod being compelled to move at one of its extremities in a straight line. When the piston is at the end of the bottom stroke, and is gradually advanced towards the middle of the stroke, the end of the connecting-rod is carried round by the crank in a curve opposed to that which it would naturally describe round the cross-head as centre; but when the piston has approached the end of the top stroke, the curvature of the path in which the end of the connecting-rod is moved by the crank is in the same direction as that of the circle which it would describe round the cross-heed and these curves would coincide if the connecting-rod were equal in length to the crank: it will be easily seen, therefore, that at

the top stroke the piston-rod requires but a small movement to enable the end of the connecting-rod to traverse a large portion of the circle of the crank, while at the bottom stroke the piston has to travel farther to allow of an equal arc being described by the crank. From these considerations it follows. that the motion of the crank being nearly uniform, there must be considerable inequalities in the speed of the piston; and more than a half circle will be described by the crank during the top half of the stroke, and less than a half circle in the bottom half of the stroke. The length of the connecting-rod is the distance from the cross-head at half stroke to the centre of the shaft; and it is clear, therefore, that at mid-stroke the crank cannot be vertical. The motion of the valve partakes of the same species of irregularity; but as the eccentric-rod is much longer in proportion to the radius of the eccentric than the connecting-rod, that inequality only may be noted which arises from the relation between the circumference of a circle and its diameter. The irregularity arising from the angle of the connecting-rod also affects the valve, but not to an injurious extent in ordinary cases. In fig. 63 we have shown the direct connection, as used in some of Stephenson's locomotives, AEBF representing the crank circle, and the inner circle that of the control. Supposing, now, that the total length of the valve face were equal to the distance between the extreme edges of

and the second temperature and THE PROPERTY OF A PARTY OF A en en marine and a च्छात्र । या का का या समार्थ स्था market at the training and the second training at a A CONTRACT OF A CONTRACT OF SERVICE where the same of the same of the same of the control of the control of the control of T SOUL IS THE THINK AT MINE T 100 mm 100 mm 100 mm 100 mm 100 mm 100 mm and the second of the second of THE THE REST TO STREET to the state of th water a mit traffic i Ante sinne m क्षान्त्र, अन्तर - १ । वद्यान्त्राम् स्व अस्ति संस् and a stronger where the restore. The THE PARTY OF THE PROPERTY. क्षेत्र : : : कार्य, कार्य, व क्रम कार्य में जोर सरको m marie en un e e un en entre en the circle which the eccentric describes, it follows that, to give the requisite advance, that distance must be measured upon the diameter of the circle, and the corresponding position of the centre of the eccentric is that of which we are in search.



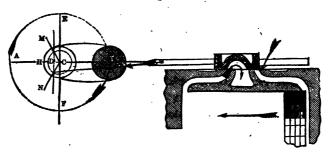

On the remote side of the centre of the crankshaft, and on the line of centres, mark off D C, the amount of overlap at each end of the valve, and draw a line parallel to E F, the vertical centre line of the crank-shaft; the arc of the eccentric circle intercepted between these parallel lines is that through which the eccentric must move, in order to draw the valve through a portion of its stroke equal to the overlap D C; and the point in which the line intersects the circle of the eccentric is, therefore, the position which the centre of the eccentric should occupy when the piston is at the end of its downstroke, and on the very point of beginning its up-

stroke. In practice, however, the valve is not so set as to open simultaneously with the commencement of the stroke of the piston, but is set so that the steam commences to flow into the cylinder a very little before the beginning of the stroke; and hence, when the piston actually commences its stroke, the valve has already partially opened the port. To make this adjustment, an additional advance must be given to the valve, and of course in the same direction; and the amount of lead, or opening, which the port has at the commencement of the stroke of the piston, must be added to the lap, their sum from C to D being treated the same in every respect as if the whole were lap; and so, for the sake of brevity, we may treat it.


Let us suppose now that it was required to find the length that the eccentric-rod should be:—Place the crank horizontal, so that it may have the piston at the bottom of its stroke; bring round the eccentric to the corresponding position which we find it should occupy, and measure the distance from that point to the centre of the joint by which the eccentric-rod is to be attached to the valve-rod; this will be the length of the eccentric-rod. When the length of the eccentric-rod is known, either the valve or eccentric may be put in its proper place, if one of them be already set: thus, if the valve be set, as in the drawing, and the eccentric-rod connected also with the eccentric, it will bring the latter into its

place, where it may be fixed; but if the valve could not be conveniently set, it would then be necessary to take the following method, which requires the knowledge of the amount of lap, and the length of the eccentric-rod. Find, as before, the position of the eccentric, attach the rod, and the valve must come into connection in the proper position. practice, the most convenient method of finding the position of the eccentric with a given lap is to draw a circle, such as H K, representing the crank-shaft, upon a board or a piece of sheet-iron, and another equal to the circle of the eccentric, and draw two diameters perpendicular to each other; mark off from the centre of the crank-shaft, and upon one diameter, the amount of lap CD; through this point draw a line parallel to E F, the other diameter; the points in which this line cuts the circle of the eccentric are the positions of the forward and backward eccentrics. Through these points, and from the centre of the crank-shaft, draw lines CM, CN, which will intersect the circumference of the crankshaft; upon this circumference measure with a pair of compasses the chord of the arc intercepted between either point of intersection and that of the. vertical diameter E F; and the lines of diameters being first drawn upon the shaft itself, then, by transferring with the compasses the distance found upon the diagram, the proper position of the eccentric at the end of the stroke of the piston is at once

Taken Taken THE CONTRACT OF LIFE LANDS age of the control of the age o The state of the s ME : : TAL E PARTY. THE AT II TO THE MANUAL TO 上 日: 第二年 2 第四次 The second of the second THE THE BETTE DIRECT TO MINE T Limite & Hear & all L and 1 THE PARTY OF THE P 生 できずない 正 海流電子 路 田に 地 THE REPORT OF THE PROPERTY VIDE A SECOND PURPLE CONTROL

shaft, are moving in the opposite direction. In the former case there were no levers, and therefore no



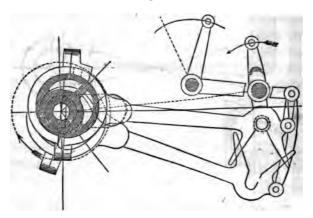

reversal of the motion. Hence, in order to give the valve the same motion as before, in relation to the crank, it is necessary to throw the eccentric to the opposite side of the crank-shaft, so that its motion may be in the reverse direction, to compensate for the reversing action of the levers. For whereas, when upon one side of the shaft they caused the valve to move in the same direction as themselves by means of the eccentric-rods, now that the levers are introduced, the eccentrics must themselves move in an opposite direction, to give the valves the same motion as heretofore. And this

me may be some by putting the eccentrics on the species some of the crank centre, round which they make make it measure, in an opposite direction.



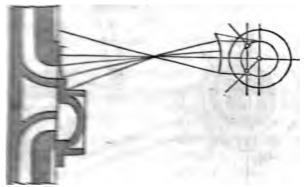


Fig. 15 is incented to illustrate the valve conmercion of the common becomotive, in which the
mercion of the eccentric is communicated through
invers to the valve, and generally with an increase
of the valve. In this figure we have the cylinder face,
with the valve upon it, at one end of its travel.
Measure of the length of the valve throw, from the
end of the valve face, in the direction of its travel.
The throw of the valve may best be found by adding
the kap to the breadth of the steam-port, and doubing their sum. If there were no levers intervening between the valve and eccentric, the line thus
measured, which is the throw of the valve, would be

the diameter also of the circle described by the centre of the eccentric pulley; but the use of levers interferes with this proportion unless the levers be made of equal length. The effect of levers of unequal length, in making a proportional inequality between the throw of the valve and of the eccentric. will be readily seen by reference to a diagram. From the centre A of the diameter, representing the throw of the valve, draw a line perpendicular to the valve face; and from the same point measure off, upon that line, the length of the lever A B. which is to be attached to the valve-rod, and which, for distinction, we shall call the valve lever. From the point B thus found as a centre with the radius B A, describe a portion of a circle intersecting perpendiculars drawn from C and D, the extremities of the line which represents the throw of the valve; from those points in the circumference of the circle produce lines through the centre B. On either side of the centre line A E, and at a distance from it equal to the radius of the eccentric, draw a parallel line. From B as a centre, with the distance from the centre B to the points H K,-in which the parallels intersect the produced lines of the lever, as radius,—describe an arc of a circle; the radius of this circle is the length which the eccentric lever must be, in order to give the requisite throw to the valve. It will be evident from the inspection of this diagram, that if it be desired to give a smaller throw to the valve than that of the eccentric, it is necessary to make the valve lever shorter than the eccentric lever; and if it were desired to make the valve throw greater than the eccentric throw, it is indispensable that the valve lever should be made proportionally longer than the eccentric lever. If, for example, the throw of the valve is to be made twice the throw of the eccentric, then this can only be accomplished by making the valve lever twice the length of the eccentric lever. Hence the relations between these quantities are expressed by simple proportion; and any three being given, we can readily find the remaining one. For the sake of clearness, we shall state the various forms which the proportion will assume.

First.—Given the throw of the valve, the throw of the eccentric, and the length of the lever attached to the valve-rod, to find the length of the eccentric lever; we have then the proportion:—

RULE.—As the throw of the valve is to the throw of the eccentric, so is the length of the valve lever to the length of the eccentric lever.

If we represent the throw of the valve by T, that of the eccentric by t, the valve lever by L, and the eccentric lever by l, we will have the proportion in a condensed algebraic form, thus,—T:t::L:l; or taking the actual dimensions in inches of the engine before us, 4.5:3::9:6.

Secondly.—Given the throw of the valve, the throw of the eccentric, and the length of the eccentric lever, to find the length of the valve lever. Then,

RULE.—As the throw of the eccentric is to the throw of the valve, so is the length of the eccentric lever to the length of the valve lever:

Or, algebraically, t:T::l:L; or, as before in actual dimensions, 3:4.5::6:9.

Thirdly.—Given the throw of the valve and the lengths of the levers, to find the throw of the eccentric.

RULE.—As the valve lever is to the eccentric lever, so is the valve throw to the eccentric throw;

Or thus, L:l::T:t; or, 9:6::4.5:3.

Fourthly.—Given the eccentric lever, the valve lever, and the eccentric throw, to find the valve throw.

RULE.—As the eccentric lever is to the valve lever, so is the eccentric throw to the valve throw;

Or, l: L:: t: T; or, 6:9::3:4:5.

We formerly explained how the reversing action of the levers rendered it necessary to set the eccentric on that side of the crank-shaft centre nearest to the cylinder; whereas, in the case of the direct valve connection, it was set on the side remote from the cylinder. Having now found the means of ascer-

*

taining the lengths of the levers to be employed with a given throw of valve and eccentric, the next step necessary is to determine the true position of the eccentric upon the shaft, in reference to the crank.

Place the crank-pin in the dead point nearest the cylinder; that is, place the centres of the crankshaft and crank-pin in a line with the centre line of the piston-rod. Upon this line of centres A G, raise a perpendicular L M, through the point F. From F draw a circle, the diameter of which is equal to the throw of the eccentric, and another equal to the cranked axle. If the levers are equal, mark off from F, upon the line of centres and on the cylinder side, the amount of lap, and draw a line parallel to L M, cutting the eccentric circle in From F draw lines through N and the points NO. O to the circumference of the cranked axle. points N and O are the positions of the centres of the eccentric pulleys for the forward and backward gear, only one of which is necessary for going one In practice it is convenient to make marks at P R, as the points N and O are inaccessible. there were no lap upon the valve, there would be nothing to set off from the centre line L M, and therefore that line would give the positions of the eccentrics.

The intersections of the perpendicular A G would give the positions of the eccentrics on the shaft if

the connecting-rod were infinitely long; but inasmuch as the shortness of the connecting-rod introduces irregularity, the true position of the crank at the middle of the stroke of the piston must be taken.

If the lengths of the levers be unequal, the throws of the eccentric and valve will also be unequal; and if the valve lever be the longer, as in the case we have taken, the eccentric throw is less than the valve throw in the same proportion as the eccentric lever is less than the valve lever; and therefore, since the eccentric throw is thus less than the valve throw, by reason of the levers, it follows that the lap, which we set off from F, and which is part of the valve throw, must also be diminished in the same proportion as the whole throw, in order to set off the proper quantity from F. The simplest way of accomplishing this is, by marking off the lap from the line of centres, fig. 65, at the point A, at the same end as we formerly marked off half the valve throw. This distance will be from A to the edge of the port, that being the overlap; then from the edge of the port draw a parallel to A G; and from the point in which this parallel cuts the are of the longer lever, draw a line through the centre B, and produce it till it cuts the. arc K H; the perpendicular from this point to the line E A is the reduced amount of lap, which is to be set off from point F.

Another useful problem is the method of finding the length of the eccentric-rod, the positions of the crank-shaft, and the weigh-bar shaft, and the length of the eccentric lever being given. From the centre of the weigh-bar shaft, with the length of the eccentric lever as radius, describe an arc; draw a tangent from this to the centre of the crank-shaft; from the centre of the weigh-bar shaft drop a perpendicular to the tangential line; the distance from the point of intersection to the centre of the crankshaft is the length of the eccentric-rod, and the perpendicular is the line of the eccentric lever, when the valve lever is perpendicular to the line of the valve-rod: this gives, therefore, the positions in which these levers must be keyed upon the weighbar shaft.

In fig. 65 the mid-line of the eccentric-rod was the same as the line of the piston-rod; but in fig. 64 it is thrown down below that of the piston-rod, forming an angle with it, the vertex of which is the centre of the crank-shaft. In this case the centres of the eccentric pulleys must, consequently, be moved downwards as many degrees as the central line. In order to facilitate this adjustment, we may briefly explain, that every circle is supposed to have its circumference divided into 360 equal parts, called degrees; and if two diameters be drawn in it at right angles to each other, they will divide the circumference into four equal parts, each

of which contains 90 degrees. This, therefore, is the means by which the angle is measured; nor will it matter, although the circle be of any size whatever, for it is still equally divided by the two diameters. Hence, if the number of degrees contained in the angle which the mid-line of the eccentric-rod makes with the line of the piston-rod, be measured upon any circle described from the centre of the crankshaft, and the angle be laid down upon a board, and if from the vertex of the angle a circle be described equal to the diameter of the crank-shaft, the chord of the arc of this circle intercepted between the lines containing the angle, is the distance to be transferred upon the crank-shaft, and through which the eccentric pulley must be moved round, in order to compensate for the obliquity of the eccentric-rod. In the example, fig. 64, the mid-line of the eccentric-rod, when in gear, lies at an angle of five degrees with the line of the piston-rod; and in all such cases this line is to be taken when reference is made to the valve motion; and the pistonrod line is to be taken when reference is made to the motion of the piston. In the case of fig. 65, these lines were made to coincide, for the sake of simplicity.

Miscellaneous remarks respecting locomotives.—
The tractive force requisite for drawing carriages over well-formed and level common roads is about to force the load, at low speeds. On railways, the

tractive force has generally been rated at about $\frac{1}{100}$ of the load, or $7\frac{1}{2}$ pounds per ton, at low speeds; but in well-formed railways the tractive force is probably less than this, to keep the train moving slowly. The resistance of railway trains, however, increases rapidly with the speed, on account of the resistance of the atmosphere; and the resistance occasioned by the atmosphere may be taken at 15 pounds per ton, with an ordinary passenger train moving at the rate of 30 miles an hour. The friction of the engine and the resistance of the rails vary simply as the velocity, if the power of the engine remains the same; but the resistance of the atmosphere varies as the square of the velocity, and the power requisite for overcoming that resistance as the cube of the velocity: so that by doubling the speed of a train, by diminishing the load without increasing the power, the friction is doubled, the atmospheric resistance is made four times greater than before, and the power requisite to overcome that resistance eight times greater. This shows the extravagance of high speeds, even if the power were as economically produced at high speeds, which is by no means the case. In moderately light trains, upwards of 50 per cent. of the power is expended in overcoming atmospheric resistance, in speeds of about 35 miles per hour; and the loss will be greater if the trains be very light, and present a large frontage.

We have already stated that in low-pressure condensing engines the evaporation of one cubic foot of water from the boiler may be taken to represent a horse power. In high-pressure engines, working without expansion, the mechanical efficacy of a cubic foot of water raised into steam will be somewhat less, on account of the resistance to the motion of the piston, occasioned by the pressure of the atmosphere; but in locomotive engines, where the working pressure is very high, the resistance due to the pressure of the atmosphere becomes relatively nearly as small as the resistance due to the rare vapor within the condenser of a condensing-engine; and it will not, therefore, be a material deviation from the truth if, in locomotive engines, working without priming, we reckon a cubic foot of water evaporated per hour as equivalent to a horse power. An engine evaporating 200 cubic feet of water per hour, and therefore exerting about 200-horse power, draws about 110 tons at thirty miles an hour; but if there were no loss from the resistance of the atmosphere, or of the blast-pipe, and no increased friction upon the engine from the increased power requisite for high speeds, the tractive force, if taken at 8 pounds per ton, would only require to be 70.4-horse power for $110 \times 8 \times 2640$, the number of feet travelled per minute at 30 miles an hour, \div 33000 = 70.4horse power. The friction of the train, however, at 30 miles an hour, including that of an engine of

200-horse power, cannot be taken at much less than 10 pounds per ton; for the friction of an engine increases with the power exerted, which determines the pressure upon its moving parts; and the friction of the carriages is also increased at high speeds, in consequence of the draw-bars being attached below the centre of effort of the frontage exposed to the wind, whereby the carriages are pressed down more firmly on the rails. If the traction be taken at 10 pounds per ton, then the power requisite for propulsion of a train, setting aside the resistance of the atmosphere, will be about 90-horse power, and the remaining \$10-horse power is absorbed in overcoming the resistance of the atmosphere and of the blast-pipe. If the speed be increased from 30 to 60 miles an hour, about 200-horse power will be required for overcoming the friction of the train, and 880-horse power will be required to overcome the atmospheric resistance; making 1080-horse power, which will be necessary to propel a train of 110 tons at 60 miles an hour. The evaporation of a locomotive boiler is greatest when the speed is at its maximum, as the blast-pipe then produces its greatest effect; and the power of the engine varies nearly as the rate of evaporation, provided the blastpipe be not unduly contracted. At ordinary railway speeds, the power of the boiler is seven or eight times greater than it would be without the blast, though, indeed, such a comparison hardly holds, as

without the blast the fire of a locomotive boiler would not draw at all. At a speed of 20 miles an hour, a locomotive boiler boils off from 10 pounds to 14 pounds of water per square foot of heating-surface, and the rate of evaporation varies nearly as the \checkmark of the speed.

The adhesion of the wheels upon the rails is about one-fifth of the weight when the rails are clean, and either perfectly wet or perfectly dry; but when the rails are half wet or greasy, the adhesion is not more than one-tenth or one-twelfth of the weight. The weight of locomotive engines varies from 15 to 20 tons. A powerful locomotive engine and tender, such as is suitable for high speeds, will weigh about The consumption of power by the locomotive itself is very great at high speeds, chiefly in consequence of the resistance occasioned by the blast-pipe to the free escape of the steam. Mr. Stephenson considers that, at ordinary railway speeds, a locomotive engine will absorb as much power as 15 loaded carriages, weighing 60 tons; so that in a train of 15 carriages, half the power is consumed by the engine. These determinations, however, are all very indefinite, and experiments are yet wanting to show the power produced and consumed by locomotives under different circumstances. Locomotive engines in England cost from \$9,000 to \$11,000 each. They run, on an average, about 130 miles a day, at a cost for repairs of about

5 cents per mile; and the cost of locomotive power, including repairs, wages, oil, and tallow, and coke, may be taken at 12 cents per mile, on economically managed railways. This does not include a sinking fund for the renewal of engines which may be worn out, and which may be taken at 10 per cent. on the original cost of the locomotives. On second class railways, the expense of locomotives, and workshops, and tools for repairing them, may be set down at \$10,000 per mile.

Economy of fuel in locomotives is materially promoted by working expansively; but all attempts at economizing fuel in locomotives should begin with an increase in the area of the fire-grate, so that the power of the engine may not suffer so large a diminution by the creation of the necessary draft.

Every locomotive engine should be furnished with efficient expansion apparatus of some kind or other; as, setting aside the economy of fuel accomplishable by expansion, it is clear that expansion acts beneficially by diminishing the weight of the boiler, which may be made smaller at every increase of the efficiency of the steam. When the draft is strong, a great loss of effect is caused by opening the furnace door, from the refrigeration due to the large volume of air admitted; and it would be a material improvement if the furnace could be fed by some such mechanism as the revolving grate. The use of sediment-collectors in locomotive boilers

PUBLICATIONS

OI

HENRY CAREY BAIRD,

SUCCESSOR TO E. L. CAREY,

S. E. CORNER OF MARKET AND FIFTH STREETS,

PHILADELPHIA.

SCIENTIFIC AND PRACTICAL.

THE PRACTICAL MODEL CALCULATOR,

FOR the Engineer, Machinist, Manufacturer of Engine Work, Naval Architect, Miner, and Millwright. By OLIVER BYRNE, Compiler and Editor of the Dictionary of Machines, Mechanics, Engine Work and Engineering, and Auther of various Mathematical and Mechanical Works. Illustrated by numerous Engravings. To be published in Twelve Parts, at Twenty-five Cents each, forming, when completed, One large Volume, Octavo, of nearly six hundred pages.

It will contain such calculations as are met with and required in the Mechanical Arts, and cetablish models or standards to guide practical men. The Tables that are introduced, many of which are new, will greatly economies labour, and render the every-day calculations of the practical man comprehensive and easy. From every single calculation given in this work numerous other calculations are readily modelled, so that each may be considered the head of a numerous family of practical results.

of a numerous family of practical results.

The examples selected will be found appropriate, and in all cases taken from the actual practice of the present time. Every rule has been tested by the unerring results of mathematical research, and confirmed by experiment, when

erring results of mathematical research, and commune by capramise, when such was necessary.

The Practical Model Calculator will be found to fill a vacancy in the library of the practical working-man long considered a requirement. It will be found to excel all other works of a similar nature, from the great extent of its range, the exemplary nature of its well-selected examples, and from the easy, simple, and systematic manner in which the model calculations are established.

NORRIS'S HAND-BOOK FOR LOCOMOTIVE ENGINEERS AND MACHINISTS:

المتعملات

1

A COMPLETE TREATISE ON TAXBING, CURRYING AND EVERY BRANCH OF LEATHER-DRESSING.

From the French and from original sources. By CAMPBELL N. 4.17 one of the Litture of the "Encyclopedia of Chemistry," Author of "Them.stry Applied to the Manufacture of Scap and Candles," and other Scientific Breatises. Einstrated with several honorest Engravaires. Composite in the Vol., royal Sco., (In press.)

The movement reside will be issued from the press at as early a day as the number of the editor will permut and it is believed that in no other branch of article, scenar result more signal service be readered to American Manufacture.

The runtheser is not sware that it any other work heretofter issued in this results. Here one has been neverted it thus subject that a simple chapter; and in offering this vicinity it is mayor and it is inject a class as American Faumers and American its months and their substantial support and convergenment.

THE PRACTICAL COTTON-SPINNER AND MANU-FACTURER: Or. The Manager's and Overseer's Companies.

This works remains a Comprehensive System of Calculations for Mill bearing and Machinery, from the first moving power introduct to liferent processes of Carding, Drawing, Slabbing, L. vilg. Spilling, and Weaving, a layers to American Machinery, Practice, and Peages. Comprehiens Tables of Yarns and Beeds are about Thistrated by large Working-frawings of the most spice, ved American Coma Machinery. Complete in One Volume, 23,50

This service of Section I form-Stommer, by Jurean Braze, is designed for the American Jeremites. If will be froming increasely generated and will be of the present possesse value at the Australia (Pressent and Workman).

THE PRACTICAL METAL-WORKER'S ASSISTANT,

Fire Tim-Plate Wireless, Reasters, Coppersmiths, Zine-Plate dynamenters and Wireless, Wire Workers, Whitesmiths, Blacksmiths, Rell Hangers, Jewellers, Silver and Gold Smiths, Electropyters, and all other Wireless in Alloys and Metals. By Charles Highesters. Edited with important additions by Chiver Press. Complete in the Volume, octavo..........\$4.00

It will treat if Casting Franching and Franching of Times and other Tools; largers if Breat and Namarement of Fires: Weiling; of Hending and Sware 1 as if Parathes and Artis of Harden and and Tempering; of Mendels here assessed to the Sandard of Malleable Incomparing the Malleable Incomparing the Malleable Incomparing the Mandard and Marine, The management of many manual of North's and Alleys Weiling and Mixing. The management of Health Mendels Jeining and Working Sheet North. Incompare if the Information Mendels Mendels Jeining and Working Sheet North. In the American of North Engagement of North Casting and Parathesis and overy other known Mend-Worker's Tool. To the works of Molangook Lewis Franchise added all that is useful and peculiar to the American Mend-Worker.

THE MANUFACTURE OF IRON IN ALL JTS VARIOUS BRANCHES:

We have now to announce the appearance of another valuable work on the subject which, in our humble opinion, supplies any deficiency which late improvements and discoveries may have caused, from the lapse of time since the date of "Mushet" and "Schrivenor." It is the production of one of our transatiantic livethren, Mr. Frederick Overman, Mining Engineer; and we do not hesitate to set it down as a work of great importance to all connected with the iron interest; one which, while it is sufficiently technological fully to explain chemical analysis, and the various phenomens of iron under different circumstances, to the satisfaction of the most fastidious, is written in that clear and comprehendve style as to be available to the capacity of the humblest mind, and consequently will be of much advantage to those works where the proprietors may see the desirability of placing it in the hands of their operatives.—
London Morning Journal.

A TREATISE ON THE AMERICAN STEAM-ENGINE.

Illustrated by numerous Wood Cuts and other Engravings. By OLIVER BYENE. In One Volume, royal 8vo. (In press.)

PROPELLERS AND STEAM NAVIGATION:

The object of this "History of Propellers and Steam Navigation" is twofold. One is the arrangement and description of many devices which have been invented to propel vessels, in order to prevent many ingenious men from wasting their time, talents, and money on such projects. The immense amount of time, study, and money thrown away on such contrivances is beyond calculation. In this respect, it is hoped that it will be the means of doing some good.—

Preface.

MATHEMATICS FOR PRACTICAL MEN:

Only let men awake, and fix their eye, one while on the nature of things, another while on the application of them to the use and service of mankind.—

Lord Bacon.

. 1

PRACTICAL SERIES.

THE volumes in this series are published in duodecimo form. and the design is to furnish to Artisans, for a moderate sum, Hand-books of the different Arts and Manufactures, in order that they may be enabled to keep pace with the improvements of the age.

There have already appeared-

THE AMERICAN MILLER AND MILLWRIGHT'S ASSIST-ANT. \$1. THE TURNER'S COMPANION. 75 cts.

THE PAINTER, GILDER, AND VARNISHER'S COMPA-NION. 75 cts.

THE DYER AND COLOUR-MAKER'S COMPANION. 75 cts. THE BUILDER'S COMPANION. \$1.

THE CABINET-MAKER'S COMPANION. 75 cts.

The following, among others, are in preparation:-

A TREATISE ON A BOX OF INSTRUMENTS. By THOMAS

THE PAPER-HANGER'S COMPANION. By J. Abrowsmith.

THE AMERICAN MILLER AND MILLWRIGHT'S ASSISTANT:

By WILLIAM CARTER HUGHES, Editor of "The American Miller," (newspaper,) Buffalo, N. Y. Illustrated by Drawings of the most approved Machinery. In One Volume, 12mo......\$1

The author offers it as a substantial reference, instead of speculative theories, which belong only to those not immediately attached to the business. Special notice is also given of most of the essential improvements which have of late been introduced for the benefit of the Miller.—Strannah Republican.

The whole business of making flour is most thoroughly treated by him .-Bulletin.

A very comprehensive view of the Millwright's business .- Southern Literary Messenger.

THE TURNER'S COMPANION:

Containing Instructions in Concentric, Elliptic, and Eccentric Turning. Also, various Plates of Chucks, Tools, and Instruments, and Directions for using the Eccentric Cutter, Drill, Vertical Cutter, and Circular Rest; with Patterns and Instructions for working them. Illustrated by numerous Engravings. In One Volume, 12mo......75 cts.

The object of the Turner's Companion is to explain in a clear, concise, and intelligible manner, the rudiments of this beautiful art.—Savannah Republicon.
There is no description of turning or lathe-work that this elegant little treatise does not describe and illustrate.—Western Lit. Messenger.

THE PAINTER, GILDER, AND VARNISHER'S COMPANION:

Containing Rules and Regulations for every thing relating to the arts of Painting, Gilding, Varnishing, and Glass Staining; numerous useful and aluable Receipts: Tests for the detection of Adulterations in Oils, Colours, &c., and a Statement of the Diseases and Accidents to which Painters, Gilders, and Varnishers are particularly liable; with the simplest methods of Prevention and Remedy. In one vol. small 12mo., cloth. 75cts.

Rejecting all that appeared foreign to the subject, the compiler has omitted nothing of real practical worth.—Hunt's Merchant's Magazine.

An excellent practical work, and one which the practical man cannot afford to be without.—Farmer and Mechanic.

It contains every thing that is of interest to persons engaged in this trade. -Rulletin

This book will prove valuable to all whose business is in any way connected with painting.—Sout's Weekly.

Cannot fail to be useful.—N. F. Commercial.

THE BUILDER'S POCKET COMPANION:

Containing the Elements of Building, Surveying, and Architecture; with Practical Rules and Instructions connected with the subject. By A. C. SMEATON, Civil Engineer, &c. In one volume, 12mo. \$1.

CONTENTS: - The Builder, Carpenter, Joiner, Mason, Plasterer, Plumber, Painter, Smith, Practical Geometry, Surveyor, Cohesive Strength of Bodies, Architect.

It gives, in a small space, the most thorough directions to the builder, from the laying of a brick, or the felling of a tree, up to the most elaborate production of ornamental architecture. It is scientific, without being obscure and unintelligible, and every house-carpenter, master, journeyman, or apprentice, should have a copy at hand always.—Evening Bulletin.

Complete on the subjects of which it treats. A most useful practical work.

–Balt. American.

It must be of great practical utility.—Savannah Republican.

To whatever branch of the art of building the reader may belong he will find in this something valuable and calculated to assist his progress.—Furmer

This is a valuable little volume, designed to assist the student in the acquisition of elementary knowledge, and will be found highly advantageous to every young man who has devoted himself to the interesting pursuits of which it treats.-Va. Herald.



Containing upwards of two hundred Beceipts for making Colers, on the most approved principles, for all the various styles and fabrics now in existence; with the flouring Process, and plain Directions for Preparing, Washing-off, and Finishing the Goods. In one volume, small 12mo., cloth. 75 cts.

This is another of that most excellent class of practical books, which the publisher is giving to the public. Indeed we believe there is not, for manufacturers, a more valuable work, having been prepared for, and expressly adapted to their business.—Permer and Richamic.

If it a variance soot.—Coups Aspanness.

We have shown it to some practical men, who all prenounced it the completest
thing of the bind they had seen—N. T. Netice.

THE CABINET-MAKER AND UPHOLSTERER'S COMPANION:

Comprising the Budiments and Principles of Cabinet Making and Upholstery, with familiar instructions, illustrated by Examples, for attaining a proficiency in the Art of Drawing, as applicable to Cabinet Work; the processes of Veneering, Inlaying, and Buhl Work; the art of Dyeing and Staining Wood, Ivory, Bone, Tortoise-shell, etc. Directions for Lackering, Japanning, and Varnishing; to make French Polish; to prepare the best Glues, Cements, and Compositions, and a number of Receipts particularly useful for Workmen generally, with Explanatory and Illustrative Engravings. By J. Stokes. In one volume, 12mo., with illustrations. 75 cts.

THE PAPER-HANGER'S -COMPANION:

In which the Practical Operations of the Trade are systematically laid down; with copious Directions Preparatory to Papering; Preventions against the effect of Damp in Walls; the various Cements and Pastes adapted to the several purposes of the Trade; Observations and Directions for the Panelling and Ornamenting of Rooms, &c. &c. By James Arrowsmith. In One Volume, 12mo. (In press.)

THE FRUIT, FLOWER, AND KITCHEN GARDEN.

By PATRICK NEILL, L.L.D.

Thoroughly revised, and adapted to the climate and seasons of the United States, by a Practical Horticulturist. Illustrated by numerous Engravings. In one volume, 12mo. \$1.25.

HOUSEHOLD SURGERY; OR, HINTS ON EMER-GENCIES.

By J. F. South, one of the Surgeons of St. Thomas's Hospital. In one volume, 12mo. Illustrated by nearly fifty Engravings. \$1.25.


CONTENTS:

The Doctor's Shop.—Poultices, Fomentations, Lotions, Liniments, Ointments, Plasters.

Surgery.—Blood-letting, Blistering, Vaccination, Tooth-drawing, How to put on a Roller, Lancing the Gums, Swollen Veins, Bruises, Wounds, Torn or Cut Achilles Tendon, What is to be done in cases of sudden Bleeding from various causes, Scalds and Burns, Frost-bite, Chilblains, Sprains, Broken Bones, Bent Bones, Dislocations, Ruptures, Piles, Protruding Bowels, Wetting the Bed, Whitlow, Boils, Black-heads, Ingrowing Nails, Bunions, Corns, Sty in the Eye, Blight in the Eye, Tumours in the Eyelids, Inflammation on the Surface of the Eye, Pustules on the Eye, Milk Abscesses, Sore Nipples, Irritable Breast, Breathing, Stifling, Choking, Things in the Eye, On Dress, Exercise and Diet of Children, Bathing, Infections, Observations on Ventilation.

HOUSEHOLD MEDICINE.

In one volume, 12mo. Uniform with, and a companion to, the above. (In immediate preparation.)

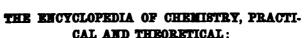

Embracing its application to the Arts, Metallurgy, Mineralogy, Geology, Medicine, and Pharmacy. By JAMES C. BOOTH, Melter and Refiner in the United States Mint; Professor of Applied Chemistry in the Franklin Institute, etc.; assisted by CAMPBELL MORFIT, author of "Chemical Manipulations," etc. Complete in one volume, royal octavo, 978 pages, with numerous wood cuts and other illustrations. \$5.

It covers the whole field of Chemistry as applied to Arts and Sciences. * * * As no library is complete without a common dictionary, it is also our opinion that none can be without this Encyclopedia of Chemistry.—Scientific American.

A work of time and labour, and a treasury of chemical information.—North

By far the best manual of the kind which has been presented to the American public.—Boston Courier.

An invaluable work for the dissemination of sound practical knowledge.-

A treasury of chemical information, including all the latest and most import-

At treasury of comment information, including an two most and most important discoveries.—Bultimore American.

At the first glance at this massive volume, one is amased at the amount of reading furnished in its compact double pages, about one thousand in number. A further examination shows that every page is richly stored with information, and that while the labours of the authors have covered a wide field, they have neglected or slighted nothing. Every chemical term, substance, and process is elaborately, but intelligibly, described. The whole science of Chemistry is placed before the reader as fully as is practicable, with a science continually progressing. * * Unlike most American works of this class, the authors have not depended upon any one European work of this class, the authors have not depended upon any one European work for their materials. They have gathered theirs from works on Chemistry in all languages, and in all parts of Europe and America; their own experience, as practical chemists, being ever ready to settle doubts or reconcile conflicting authorities. The fruit of so much toil is a work that must ever be an honour to American Science.—Evening Bulletin.

PERFUMERY: ITS MANUFACTURE AND USE:

With Instructions in every branch of the Art, and Receipts for all the Fashionable Preparations; the whole forming a valuable aid to the Perfumer, Druggist, and Soap Manufacturer. Illustrated by numerous Wood-cuts. From the French of Celnart, and other late authorities. With Additions and Improvements by CAMPBELL MORFIT, one of the Editors of the "Encyclopedia of Chemistry." In one volume, 12mo., cloth. \$1.

A TREATISE ON A BOX OF INSTRUMENTS,

And the SLIDE RULE, with the Theory of Trigonometry and Logarithms, including Practical Geometry, Surveying, Measuring of Timber, Cask and Malt Gauging, Heights and Distances. By Thomas Kentish. In One Volume, 12mo. (In press.)

STEAM FOR THE MILLION.

An Elementary Outline Treatise on the Nature and Management of Steam, and the Principles and Arrangement of the Engine. Adapted for Popular Instruction, for Apprentices, and for the use of the Navigator. With an Appendix containing Notes on Expansive Steam, &c. In One Volume, 8vo...37 ots.

SYLLABUS OF A COMPLETE COURSE OF LEC-TURES ON CHEMISTRY:

. Including its Application to the Arts, Agriculture, and Mining, prepared for the use of the Gentlemen Cadets at the Hon. E. I. Co.'s Military Seminary, Addiscombe. By Professor E. Solly, Lecturer on Chemistry in the Hon. E. I. Co.'s Military Seminary. Revised by the Author of "Chemical Manipulations." In one volume, octavo, cloth. \$1.25.

The present work is designed to occupy a vacant place in the libraries of Chemical text-books. It is admirably adapted to the wants of both TRACHER and PUPL; and will be found especially convenient to the latter, either as companion in the class-room, or as a remembrancer in the study. It gives, at a glance, under appropriate headings, a classified view of the whole science, which is at the same time compendious and minutely accurate; and its wide margins afford sufficient blank space for such manuscript notes as the student may wish to add during lectures or recitations.

may wish to add during lectures or recitations.

The almost indispensable advantages of such an impressive aid to memory are evident to every student who has used one in other branches of study. Therefore, as there is now no Chemical Syllabus, we have been induced by the excellencies of this work to recommend its republication in this country; confident that an examination of the contents will produce full conviction of its intrinsic worth and usefulness.—Editor's Preface.

Land . . .

ELECTROTYPE MANIPULATION:

Being the Theory and Plain Instructions in the Art of Working in Metals, by Precipitating them from their Solutions, through the agency of Galvanic er Voltaic Electricity. By CHARLES V. WALKER, Hon. Secretary to the London Electrical Society, etc. Illustrated by Wood-cuts. In one volume, 24mo., cloth. From the thirteenth London edition. 62 cts.

PHOTOGENIC MANIPULATION:

Containing the Theory and Plain Instructions in the Art of Photography, or the Productions of Pictures through the Agency of Light; including Calotype, Chrysotype, Cyanotype, Chromatype, Energiatype, Anthotype, Amphitype, Daguerreotype, Thermography, Electrical and Galvanic Impressions. By GRORGE THOMAS FISHER, Jr., Assistant in the Laboratory of the London Institution. Illustrated by wood-cuts. In one volume, 24mo., cloth. 62 cts.

MATHEMATICS FOR PRACTICAL MEN:

Being a Common-Place Book of Principles, Theorems, Rules, and Tables, in various departments of Pure and Mixed Mathematics, with their Applications; especially to the pursuits of Surveyors, Architects, Mechanics, and Civil Engineers, with numerous Engravings. By OLINTHUS GREGORY, L. L. D. \$1.50.

Only let men awake, and fix their eyes, one while on the nature of things, another while on the application of them to the use and service of mankind.—Lord Bucos.

AN ELEMENTARY COURSE OF INSTRUCTION ON ORDNANCE AND GUNNERY:

Prepared for the use of the Midshipmen at the Naval School. By James H. Ward, U. S. N. In one volume, octavo. \$1.50.

and the first in the same of t

100

SHEEP-HUSBANDRY IN THE SOUTH:

ELWOOD'S GRAIN TABLES:

To Millers and Produce Dealers this work is pronounced by all who have it in use, to be superior in arrangement to any work of the kind published—and uncerving accuracy in every calculation may be relied upon in every instance.

APP A reward of Twenty-five Dollars is offered for an error of one cent found in the work.

MISS LESLIE'S COMPLETE COOKERY.

In preparing a new and carefully revised edition of this my first work on cockery, I have introduced improvements, corrected errors, and added new receipts, that I trust will on trial be found satisfactory. The success of the book (proved by its immense and increasing circulation) affords conclusive evidence that it has obtained the approbation of a large number of my country-women; many of whom have informed me that it has made practical housewives of young ladies who have entered into married life with no other acquirements than a few showy accompliahments. Gentlemen, also, have told me of great improvements in the family table, after presenting their wives with this manual of domestic cookery, and that, after a morning devoted to the fatigues of business, they no longer find themselves subjected to the annoyance of an ill-dressed dinner.—Prepace.

MISS LESLIE'S TWO HUNDRED RECEIPTS IN FRENCH COOKERY.

TABLES OF LOGARITHMS FOR ENGINEERS AND MACHINISTS:

TWO HUNDRED DESIGNS FOR COTTAGES AND VILLAS. &c. &c.

ELEMENTARY PRINCIPLES OF CARPENTRY.

A TREATISE ON BREWING AND DISTILLING.

In One Volume, 8vo. (In press.)

FAMILY ENCYCLOPEDIA

SYSTEMATIC ARRANGEMENT OF COKE'S FIRST INSTITUTES OF THE LAWS OF ENGLAND.

By J. H. Thomas. Three Volumes, 8vo, law sheep.......\$12

AN ACCOUNT OF SOME OF THE MOST IMPORT-ANT DISEASES OF WOMEN.

By ROBERT GOOCH, M. D. In One Volume, 8vo, sheep...\$1.50

STANDARD ILLUSTRATED POETRY.

Illustrated by Heney Warren. In One Volume, royal 8vo. with 10 Plates, scarlet cloth, gilt edges	THE TALES AND POEMS OF LORD BYRON:
CHILDE HAROLD; A ROMAUNT BY LORD BYRON: Illustrated by 12 Splendid Plates, by Warren and others. In One Volume, royal 8vo., cloth extra, gilt edges	with 10 Plates, scarlet cloth, gilt edges
Illustrated by 12 Splendid Plates, by Warren and others. In One Volume, royal 8vo., cloth extra, gilt edges	It is illustrated by several elegant engravings, from original designs by WARREN, and is a most splendid work for the parlour or study.—Boston Evening Gasette.
One Volume, royal 8vo., cloth extra, gilt edges	CHILDE HAROLD; A ROMAUNT BY LORD BYRON:
THE FEMALE POETS OF AMERICA. By Rufus W. Griswold. A new Edition. In One Volume, royal 8vo. Cloth, gilt	One Volume, royal 8vo., cloth extra, gilt edges
By Rufus W. Griswold. A new Edition. In One Volume, royal 8vo. Cloth, gilt	Printed in elegant style, with splendid pictures, far superior to any thing of the sort usually found in books of this kind.—N. Y. Courter.
By Rufus W. Griswold. A new Edition. In One Volume, royal 8vo. Cloth, gilt	
royal 8vo. Cloth, gilt	THE FEMALE POETS OF AMERICA.
By SIR WALTER SCOTT. Illustrated with 10 Plates, by Corbould and Meadows. In One Volume, royal 8vo. Bound in cloth extra, gilt edges	royal 8vo. Cloth, gilt
Cloth extra, gilt edges	THE LADY OF THE LAKE:
Illustrated by 18 Plates, from Designs by CORBOULD, MEADOWS, and STEPHANOFF. In One Volume, royal Syo. Bound in	cloth extra, gilt edges
Illustrated by 18 Plates, from Designs by CORBOULD, MEADOWS, and STEPHANOFF. In One Volume, royal Syo. Bound in	TATTA DOODIT. A DOMANCE DV MICHAE MOODE.
Dows, and Stephanors. In One Volume, royal 8vo. Bound in	·
This is published in a style uniform with the "Lady of the Late."	Dows, and Stephanoff. In One Volume, royal 8vo. Bound in cloth extra, gilt edges

THE POETICAL WORKS OF THOMAS GRAY:

With Illustrations by C. W. RADCLIFF. Edited with a Memoir, by HENRY REED, Professor of English Literature in the University of Pennsylvania. In One Volume, 8vo. Bound in cloth Turkey morocco super extra.....\$5.50

It is many a day since we have seen issued from the press of our country a

It is many a day since we have seen issued from the press of our country avolume so complete and truly elegant in every respect. The typography is faultless, the illustrations superior, and the binding superb.—Troy Whig.

We have not seen a specimen of typographical luxury from the American press which can surpass this volume in choice elegance.—Busion Churier.

It is eminently calculated to consecrate among American readers, (if they have not been consecrated already in their hearts,) the pure, the elegant, the refined, and, in many respects, the sublime imaginings of Thomas Gran.—Richmond Whig.

THE POETICAL WORKS OF HENRY WADSWORTH LONGFELLOW:

Illustrated by 10 Plates, after Designs by D. Huntingdon, with a Portrait. Ninth Edition. In One Volume, royal 8vo. Bound in cloth extra, gilt edges......\$5 Morocco super extra......\$7

This is the very luxury of literature—Longration's charming poems presented in a form of unsurpassed beauty.—Neal's Gazette.

POETS AND POETRY OF ENGLAND IN THE NINE-TEENTH CENTURY.

By Rufus W. Griswold. Illustrated. In One Volume, royal 8vo. Bound in cloth......\$3 Cloth extra, gilt edges......\$3.50 Morocco super extra......\$5

Such is the critical acumen discovered in these selections, that scarcely a page is to be found but is redolent with beauties, and the volume itself may be regarded as a galaxy of literary pearls.-Democratic Review.

THE TASK, AND OTHER POEMS.

By WILLIAM COWPER. Illustrated by 10 Steel Engravings. In One Volume, 12mo. Cloth extra, gilt edges.....\$2 Morocco extra.....\$2 "The illustrations in this edition of Cowper are most exquisitely designed and

ongraved."

. - 14 .

THE FEMALE POETS OF GREAT BRITAIN.

Mr. Rowron has presented us with admirably selected specimens of nearly one hundred of the most celebrated female poets of Great Britain, from the time of Lady Juliana Bernes, the first of whom there is any record, to the Mitfords, the Hewitts, the Cooks, the Barretts, and others of the present day.—
Hunt's Mcrchants' Magazine.

SPECIMENS OF THE BRITISH POETS.

From the time of Chaucer to the end of the Eighteenth Century. By THOMAS CAMPBELL. In One Volume, royal 8vo. (In press.)

THE POETS AND POETRY OF THE ANCIENTS:

By WILLIAM PETER, A. M. Comprising Translations and Specimens of the Poets of Greece and Rome, with an elegant engraved View of the Coliseum at Rome. Bound in cloth.....\$3.50 Turkey morocco super extra.......\$5.50

It is without fear that we say that no such excellent or complete collection has ever been made. It is made with skill, taste, and judgment.—Charleston Putriot.

THE POETICAL WORKS OF N. PARKER WILLIS.

This is one of the most beautiful works ever published in this country.—Courier and Inquirer.

Pure and perfect in sentiment, often in expression, and many a heart has been won from sorrow or roused from apathy by his earlier melodies. The illustrations are by LEUTER,—a sufficient guarantee for their beauty and grace. As for the typographical execution of the volume, it will bear comparison with any English book, and quite surpasses most issues in America.—Neal's Gazette.

The admirers of the poet could not have his gems in a better form for holi day presents.—W. Continent.



MISCELLANEOUS.

ADVESTURES OF CAPTAIN SIMON SUGGE; And other Stretches. By Jegusous J. Hooren. With Illustra- fices. 12ms, paper50 etc. Cloth62 etc.
AUST PATTY'S SCRAP-RAG. By Mrs. Canouse Lee Herrs, Author of "Linds." 12mo. Paper overs
And other Western Sketches. Edited by W. T. PORTER. In One Volume, 12ms, paper
COMIC BLACKSTOME. By GILBERT ARROY A' BROKET. Illustrated. Complete in One Volume. Cloth
GHOST STORIES. Mustrated by Designs by Darkey. In One Volume, 12mo,
MODERN CHIVALRY; OR, THE ADVENTURES OF CAPTAIN FARRAGO AND TRAGUE O'REGAN. By H. H. Brackeringe. Second Edition since the Author's death. With a Biographical Notice, a Critical Disquisition on the Work, and Explanatory Notes. With Illustrations, from Original Designs by Darley. Two volumes, paper covers \$1.00 Cloth or sheep.

COMPLETE WORKS OF LORD BOLINGBROKE:
With a Life, prepared expressly for this Edition, containing Additional Information relative to his Personal and Public Character, selected from the best authorities. In Four Volumes, 8vo. Bound in cloth
CHRONICLES OF PINEVILLE.
By the Author of "Major Jones's Courtship." Illustrated by DARLEY. 12mo, paper
GILBERT GURNEY.
By THEODORE HOOK. With Illustrations. In One Volume, 8vo., paper50 cts.
MEMOIRS OF THE GENERALS, COMMODORES, AND OTHER COMMANDERS,
Who distinguished themselves in the American Army and Navy, during the War of the Revolution, the War with France, that with Tripoli, and the War of 1812, and who were presented with Medals, by Congress, for their gallant services. By Thomas WYATT, A. M., Author of "History of the Kings of France." Illustrated with Eighty-two Engravings from the Medals. 8vo. Cloth gilt
ATILE AN MINT TO THE AT
GEMS OF THE BRITISH POETS.
By S. C. Hall. In One Volume, 12mo., cloth
VISITS TO DEWARKE PLACES.

WARRATIVE OF THE ARCTIC LAND EXPEDITION. By Captain Back, R. N. In One Volume, 8vo, boards...\$1.50 THE MISCELLANEOUS WORKS OF WILLIAM HAZLITT. Including Table-talk; Opinions of Books, Men, and Things; Lectures on Dramatic Literature of the Age of Elizabeth; Lectures on the English Comic Writers; The Spirit of the Age, or Contemporary Portraits. Five Volumes, 12mo., cloth.....\$5.00 Half calf......\$6,25 FLORAL OFFERING. A Token of Friendship. Edited by Frances S. Osgood. Illustrated by 10 beautiful Bouquets of Flowers. In One Volume, 4to, muslin, gilt edges......\$8.50 Turkey morocco super extra......\$5.50 THE HISTORICAL ESSAYS, Published under the title of "Dix Ans D'Etude Historique," and Narratives of the Merovingian Era; or, Scenes in the Sixth Century. With an Autobiographical Preface. By Augustus Thierry, Author of the "History of the Conquest of England by the Normans." 8vo., paper......75 cts. Cloth\$1.00 BOOK OF THE SEASONS: Or, The Calendar of Nature. By WILLIAM HOWITT. One Volume, 12mo, cloth......\$1 Calf extra......\$2 PICKINGS FROM THE "PORTFOLIO OF THE RE-

3.

NOTES OF A TRAVELLER On the Social and Political State of France, Prussia, Switzerland, Italy, and other parts of Europe, during the present Century. By SAMUEL LAING. In One Volume, 8vo., cloth\$1 HISTORY OF THE CAPTIVITY OF NAPOLEON AT ST. HELENA. By GENERAL COUNT MONTHOLON, the Emperor's Companion in Exile and Testamentary Executor. One Volume, 8vo., cloth, \$2.50 Half morocco......\$3.00 MY SHOOTING BOX. MYSTERIES OF THE BACKWOODS: Or, Sketches of the South-west—including Character, Scenery, and Rural Sports. By T. B. Thorpe, Author of "Tom Owen, the Bee-Hunter," &c. Illustrated by Darley. 12mo, cloth, 62 cts. Paper...... 50 cts. NARRATIVE OF THE LATE EXPEDITION TO THE DEAD SEA. From a Diary by one of the Party. Edited by EDWARD P. MONTAGUE. 12mo, cloth.....\$1 MY DREAMS: A Collection of Poems. By Mrs. Louisa S. McCord. 22mo. AMERICAN COMEDIES. By James K. Paulding and Wm. Inving Paulding. Volume, 16mo, boards......50 cts.

RAMBLES IN YUCATAN;

THE AMERICAN IN PARIS.

This is the most animated, graceful, and intelligent aketch of French manners, or any other, that we have had for these twenty years.—London Monthly Magazine.

ROBINSON CRUSOE.

SCENES IN THE ROCKY MOUNTAINS,

THE PUBLIC MEN OF THE REVOLUTION:

Including Events from the Peace of 1783 to the Peace of 1815. In a Series of Letters. By the late Hon. WM. SULLIVAN, LL. D. With a Biographical Sketch of the Author, by his son, JOHN T. S. SULLIVAN. With a Portrait. In One Volume, 8vo, cloth...\$2

ACHIEVEMENTS OF THE KNIGHTS OF MALTA.

ATALANTIS.

A Poem. By William Gilmorn Simms. 12mo, boards, 87 cts.

LIVES OF MEN OF LETTERS AND SCIENCE.
By Henry Lord Brougham. Two Volumes, 12mo, cloth, \$1.50
-
THE LIFE, LETTERS, AND JOURNALS OF LORD BYRON.
By Thomas Moore. Two Volumes, 12mo, cloth\$2
THE BOWL OF PUNCH.
Illustrated by Numerous Plates. 12mo, paper50 cts.
CHILDREN IN THE WOOD.
Illustrated by Harvey. 12mo, cloth, gilt

CHARCOAL SKETCHES.
By Joseph C. Neal. With Illustrations. 12mo, paper, 25 cts.
THE POEMS OF C. P. CRANCH.
In One Volume, 12mo, boards87 cts.
THE WORKS OF BENJ. DISRAELL.
Two Volumes, 8vo, cloth
NATURE DISPLAYED IN HER MODE OF TEACH- ING FRENCH.
By N. G. Dufief. Two Volumes, 8vo, boards
NATURE DISPLAYED IN HER MODE OF TEACH- ING SPANISH.
By N. G. Duffer. In Two Volumes, 8vo, boards

FRENCH AND ENGLISH DICTIONARY.
By N. G. Dufier. In One Volume, 8vo, sheep\$5
FROISSART BALLADS AND OTHER POEMS.
By PHILIP PENDLETON COOKS. In One Volume, 12mo, boards
·
THE LIFE OF RICHARD THE THIRD.
By Miss Halsten. In One Volume, 8vo, cloth\$1.50
THE LIFE OF NAPOLEON BONAPARTE.
By William Hazlitt. In Three Volumes, 12mo, cloth\$3 Half calf\$4
TRAVELS IN GERMANY, BY W. HOWITT.
EYRE'S WARRATIVE. BURNE'S CABOOL.
In One Volume, 8vo, cloth\$1.25
STUDENT-LIFE IN GERMANY.
By William Howitt. In One Volume, 8vo, cloth\$2
IMAGE OF HIS FATHER.
By MAYHEW. Complete in One Volume, 8vo, paper25 cts.
SPECIMENS OF THE BRITISH CRITICS.
By Christopher North (Professor Wilson). 12mo, cloth.75 cts.
A TOUR TO THE RIVER SAUGENAY, IN LOWER CANADA.
By CHARLES LANMAN. In One Volume, 16mo, cloth62 cts. Paper
•

TRAVELS IN AUSTRIA, RUSSIA, SCOTLAND, ENGLAND AND WALES.
Ву J. G. Конд. One Volume, 8vo. cloth\$1.25
LIFE OF OLIVER GOLDSMITH.
By James Prior. In One Volume, 8vo, boards
OUR ARMY AT MONTEREY.
By T. B. Thorpe. 16mo, cloth
OUR ARMY ON THE RIO GRANDE.
By T. B. THORPE. 16mo, cloth
LIFE OF LORENZO DE MEDICI.
By WILLIAM ROSCOE. In Two Volumes, 8vo, cloth\$8
MISCELLANEOUS ESSAYS OF SIR WALTER SCOTT.
In Three Volumes, 12mo, cloth
SERMON ON THE MOUNT.
Illuminated Boards \$1.50 \$2.00 \$3.00 \$3.00
MISCELLANEOUS ESSAYS OF THE REV.SYDNEY SMITH.
In Three Volumes, 12mo, cloth\$3.50 Half morocco\$4.25
MRS. CAUDLE'S CURTAIN LECTURES12½ cts.

<u>.</u>

The second second second second

.



.


.

•

•

.

.



•





NEW AMERICAN BOOKS,

DELF AND TRÜBNER,

12, PATERNOSTER ROW.

Æronautics.

A SYSTEM OF ÆRONAUTICS; comprehending its Earliest Investigations and Modern Practice and Art, designed as a History for the Common Reader, and Guide to the Student of the Art. With a Brief History of the Author's Fifteen Years' Experience. By JOHN WISE, Æronaut. 8vo, 14s. cloth.

Africa.

NOTES ON NORTHERN AFRICA, the Sahara, and Soudan. By WM. B. Hodgson. 8vo, 4s.

Alphabet.

SIGNIFICANCE of the ALPHABET. By C. KRAITSIR, M.D. 12mo, 3s. America.

AMERICAN ALMANAC and Repository of Useful Knowledge for 1852.

12mo, sewed.

COLTON'S TRAVELLERS' AND TOURISTS' GUIDE-BOOK through the United States of America and the Canadas; containing the Routes and Distances on the Great Lines of Travel by Railroads, Canals, Stage Roads, and Steam-Boats; together with Descriptions of the several States, and of the Principal Cities, Towns, and Villages in each. Accompanied with a Large and Accurate Map. 18mo, 78 6d. cloth.

THE ILLUSTRATED HANDBOOK: a New Guide for Travellers through the United States of America; containing a Description of the States, Cities, Towns, Villages, Watering-Places, Colleges, &c.; with the Railroad, Stage, and Steam-Boat Routes, the Distances from Place to Place, and the Fares on the Great Travelling Routes. Embellished with 125 Engravings and a Large and Accurate Map. By J. CALVIN SMITH. 18mo, 7s. 6d. cloth.

GUIDE-BOOK TO THE UNITED STATES, CANADA, &c. By W. WILLIAMS. Illustrated with Maps, Plans, &c., showing the Distance, Time, and Fare, between every Place of Importance in the Union, British Colonies in America, &c. &c. 12mo, 6s. moroceo.

The Power and Progress of the United States. By Guillaume

TELL POUSSIN. Translated from the French by E. L. Du Barry. 8vo, 14s. cloth.

WESTERN PORTRAITURE, and Emigrant's Guide: a Description of Wisconsin, Illinois, and Iowa, with Remarks on Minnesota, and other Territories. By D. S. Curtiss. 12mo, Map, 6s.

MITCHELL'S NEW TRAVELLER'S GUIDE through the United States, containing the Principal Cities, Towns, &c., Alphabetically arranged; together with the Railroad, Steam-Boat, Canal and Stage Routes, with the Distances, in miles, from place to place. Illustrated

by an accurate Map. 6s.
COLTON'S WESTERN TOURIST AND EMIGRANT'S GUIDE through the States of Ohio, Michigan, Indiana, Illinois, Missouri, Iowa, and Wisconsin, and the Territories of Minnesota, Missouri, and Nebrasca; being an accurate and concise Description of each State and Territory, and containing the Routes and Distances on the great Lines of Travel: with a Map. 4s. 6d.

(a) The Align Control of Decay of English Section (1995). The Letter Control of Section (1995) and the Alignest Control of Section (1995) and the Alignest Control of Section (1995). The Alignest Control of Section (1995) and the Alignest Control of Section (1995).

The first of the Albertan Team in three to the second of t

The state of the s

The strain and the strain of t

and the second of the second

The Control of the Co

The first communication and Africation of the Africation of the Africation of the Africa-Afri

re La Grand and Tables (1994) and a common of the following section of the common of t

The second of th

The second secon

EF & Communication of the comm

The State of States of the Control o

The second secon

American Maps.

CENTRAL AMERICA.—New Map, from the most recent and authentic Sources; showing the Lines of Communication between the Atlantic and Pacific Oceans. In Case. 2s. 6d.

DELAWARE.—Township Map. Compiled from the Original United States Surveys, and other Authentic Sources. Size, 29 by 32 inches. Mounted, 7s. 6d.; in Case, 4s.

EUROPE, carefully compiled from the latest Geographical Sources. 58 by 44 inches, mounted on rollers, 25s.

ILLINOIS.—A New Sectional Map of the State of Illinois, compiled from the United States Surveys, exhibiting the Internal Improvements, Distances between Towns, Villages, and Post Offices, the Outlines of Prairies, Woodlands, Marshes, and the Lands donated to the State by the General Government, for the purpose of Internal Improvements. By J. M. PECK, JOHN MESSINGER, and A. J. MATHEWSON. 43 inches by 32 inches. Coloured, and folded in a Case, 7s. 6d.; mounted, 12s. 6d.

INDIANA.—Map of the State of Indiana, compiled from the United States' Surveys. By S. D. King. Exhibiting the Sections, Fractional Sections, Situations and Boundaries of Counties, the Location of Cities, Villages and Post Offices, Canals, Railroads, and other internal improvements, &c. Size, 66 in. by 48 in. Mounted, 30s.

INDIANA.—Map of the State, reduced from the above. Size, 43 inches by 32 inches. Mounted, 15s.

INDIANA.—Map of the State, reduced from the Large Map. Size, 15 inches by 12 inches. In Case, 2s. 6d.

Iowa.—Colton's Township Map of the State of Iowa, compiled from the United States Surveys, and other Authorities.
29 inches by 32 inches. Coloured, and mounted in a Case.

MARYLAND.—Township Map. Compiled from the Original United States Surveys and other Authentic Sources. Size, 29 by 32 inches. Price, mounted, 7s. 6d.; in Case, 4s.

MEXICO.—Map of the Republic of Mexico, compiled from official and authentic Sources; to which is appended a corner Map of the State of Central America. Size, 42 by 32 inches. Mounted, 10s.; in case, 7s. 6d.

MICHIGAN.—Map of the Surveyed Part of the State of Michigan. By JOHN FARMER. Size, 35 inches by 25 inches. Mounted, 10s.; in Case, 7s. 6d.

MISSIONARY MAP of the World, on a Hemispherical Projection, each Hemisphere being 6 feet in diameter, and both printed on one piece of cloth at one impression. Size, 160 by 80 inches. £2. 10s.

MISSOURI.—Township Map. Compiled from the Original United States Surveys, and other Authentic Sources. Size, 29 by 32 inches. Mounted, 7s. 6d.; in Case, 4s.

NEW ENGLAND STATES.—Showing the Railroads, Canals, and Stage roads, with Distances from place to place. In Case, 2s. 6d.

NEW ENGLAND and NEW YOEK; with parts of Pennsylvania, New Jersey, the Canadas, &c., showing the Railroads, Canals, and Stage roads with Distances from place to place. Size, 30 inches by 23 inches. Mounted. 6s. 6d.

NEW YORK.—Map of the State of New York, showing the Boundaries of the Counties and Townships, Cities, Towns, and Villages; the Courses of Railroads, Camals, and Stage-Roads. By J. C. SMITH. Coloured, and mounted in Case.

New York.—A Map of the State of New York, with parts of the Adjacent Country, embracing plans of the Principal Cities, and of the Larger Villages. 60 in. by 50 in. Mounted on Rollers. 20s.

Baths and Bathing.

A TREATISE ON BATHS, including Cold, Sea, Warm, Hot, Vapour, Gas, and Mud Baths; also, on the Watery Regimen, Hydropathy, and Pulmonary Inhalation; with a Description of Bathing in Ancient and Modern Times. By JOHN BELL, M.D. 12s. cloth.

Bibliography.

The LIBRARY MANUAL: containing a Catalogue Raisonnée of upwards of 12,000 of the most important Works in every department of knowledge in all Modern Languages: in Two Parts. Part I. Subjects alphabetically arranged. Part II. Biography, Classics, Mis-

cellanies, and Index to Part I. 12s.

The LIBRARIAN'S MANUAL; or a Complete Guide for the Formation, Arrangement, Preservation, and Management of Public and Private Libraries, embracing the Principles of Bibliography, Typography, Lists of Bibliographical Works, Plans for the Classification of Books, Statistics, Statistics of Libraries, &c. By R. A. GUILD. (In press).

An INDEX to Periodical Literature; comprising all the Prominent Subjects in the Reviews and Periodicals in Alphabetical Order. Together with the Names of the Writers, when known.

A. B. POOLE. Second Edition. (In press). 8vo. 600 pp.

NORTON'S LITERARY ALMANAC for 1852: containing important Literary Information, Accounts of American Libraries, Literary

Necrology, &c. &c. 6d.

NORTON'S LITERARY GAZETTE, and Publisher's Circular; comprising complete Lists of American and European Publications, &c. Monthly. 7s. 6d. per annum.

THE LITERARY WORLD; a Journal of American and Foreign Lite-

rature, Science and Art. Weekly. 18s. per annum.

LEGAL BIOGRAPHY; or a Thesaurus of American, English, Irish, and Scotch Law Books, together with some Continental Treatises, interspersed with Critical Observations upon their Various Editions and Authority, to which is prefixed a Copious List of Abbreviations. By J. G. MARVIN, Counsellor at Law. 8vo, bound, 30s.

Botany.

The BOTANICAL TEXT-BOOK: an Introduction to Scientific Botany, both Structural and Systematic; for Colleges, Schools, and Private Students. Third Edition, re-written and enlarged. Illustrated with 1200 Woodcuts. By ASA GRAY, M.D. 8vo, 10s. 6d. cloth.

The POPULAR NOMENCLATURE of the AMERICAN FLORA.

BERTHOLD SEEMANN. 8vo, 3s. 6d.

The GENERA of the PLANTS of the UNITED STATES, illustrated by Figures and Analyses from Nature, by ISAAC SPRAGUE, with Descriptions by ASA GRAY, M.D. 8vo. Vols. 1 and 2. Each 31s. 6d. The FLORA of NORTH AMERICA.—By Drs. Torrey and Gray. vol. 1 and vol. 2, 36s., parts I, II, and III, 7s. 6d. each; and part IV, 5s.

Brazil.

SKETCHES of a Residence and Travels in Brazil. By D. P. Kidder. 2 vols. post 8vo, with engravings. 18s.

ridges.

General History of Bridge Construction: containing Demonstrations of the Principles of their Art and their application to Practice; furnishing the means of calculating the strains upon the chords, ties, braces, counter-braces, and other parts of a Bridge or Krams of any description. With Practical Illustration. By Herman Haupt, A.M. 8vo, 18s.

California.

Sights in the Gold Regions, and Somes by the Way. By T. T. JOHNSON. With Illustrations. 12mo, 7s. 6d.

The Geology and Industrial Resources of California. By P. T. TYBON. Maps. 8vo, 7s. 6d.

Life, Adventures and Travels in California. By T. J. Farnham. To which are added the Conquest of California, Travels in Orogon, and History of the Gold Regions. 8vo, 12s.

Carpentry.

The American House Carpenter. Fourth Edition. 8vo, 300 Engravings, 12s.

Chemical Manipulation.

The Mechanical and Chemico-Mechanical Operations of the Laboratory; being a complete Description of the most approved Apparatus, with Instructions as to their Management and Application, both in Manufacturing Processes and in the more exact details of Analytical Research. By CAMPBELL MORFIT. 8vo, with 420 Illustrations, 14s. cloth.

Chemistry.

The Encyclopsedia of Chemistry, Practical and Theoretical: embracing its Application to the Arts, Medicine, and Pharmacy. By JOHN C. BOOTH and CAMPBELL MORFIT. Imp. 8vo, 30s. cloth.

China.

THE MIDDLE KINGDOM.—A Survey of the Geography, Government, Education, Social Life, Arts, Religion, &c., of the Chinese Empire, and its Inhabitants. With a new Map of the Empire. By S. W. Williams. Third Edition. 2 vols, 8vo.

Civil Engineering.

ELEMENTS of CIVIL ENGINEERING; being an attempt to consolidate the Principles of the various Operations of the Civil Engineer into one point of view, for the Use of Students. By John Millington. 8vo, with 273 Illustrations, 21s. cloth.

MAHAN'S CIVIL ENGINEERING, for the Use of the United State's Military Academy. 4th edition, 8vo, 16s. cloth.

Civilization.

LECTURES on the Progress of Civilization and Government, and other subjects. By JOHN C. LORD, D.D. 12mo, 4s. 6d.

Classical Literature.

Manual of Classical Literature: from the German of ENCHENBURG.
With Additions by N. W. FISKE, of Amhorst College. Royal
Svo, cloth, 20s.

Code, New.

CIVIL CODE of the STATE of LOUISIANA.—With Annotations by Wheelock S. Upton, LL.B., and Needler B. Jennings. In 2 vol 8vo. 3l. 3s. By Authority.

8vo, 3l. 3s. By Authority.

The Code of Procedure of the State of New York, as Am July 10, 1851. With Copious Notes to each Section, the mentary Act, and an Appendix, containing the Rules of Courts. By a Member of the New York Bur. 8vo, 21s.

CODE of the CIVIL of the CIVIL and CRIMINAL PROCEDUR.

STATE OF NEW YORK.—Reported complete by the Common on Practice and Pleadings. 2 vols. 8vo, Law call, 21. 18.

Coal.

The Geographical and Geographical Distribution of Fossil Fuel: its Production, Consumption, and Commercial Distribution in all Parts of the World: the Prices, Tariffs, Duties, and International Regulations: with 400 Statistical Tables, and 1100 Analyses of Mineral Combustibles. By R. C. TAYLOR. 8vo, Maps and Diagrams, 30s. cloth.

Commerce.

COMMERCE of the PRAIRIES; or, the Journal of a Santa Fé Trader, during Eight Expeditions across the Great Western Prairies, and a Residence of nearly Nine Years in Northern Mexico. By J. Gregg. 2 vols. post 8vo, illustrated with Maps and Engravings, 9s. cloth.

Hunt's Merchant's Magazine and Commercial Review. Monthly,

2s. 6d. per Number.

PROTECTION.—The Harmony of Interests.—Agricultural, Manufacturing, and Commercial. By HENEY C. CAREY. 1 vol. 8vo, 8s. 6d.

TARIFF of the Duties charged by the Customs of the United States,

with Laws and Regulations of Imports. 8vo, 5s.

Conchology.

CONTRIBUTIONS to CONCHOLOGY. By Professor C. B. Adams. Nos. 1 to 10.

Conduct in Life.

A FEW THOUGHTS for a Young Man upon Entering Life. A Lecture delivered before the Boston Mercantile Library Association, on its Twenty-ninth Anniversary. By Horace Mann, the First Secretary of the Massachusetts Board of Education. 12mo, 6d.

Cotton Spinning.

The AMERICAN COTTON SPINNER and MANAGERS' and CARDEES' GUIDE: a Practical Treatise on Cotton Spinning. Compiled from the Papers of the late ROBERT H. BAIRD. 12mo, 6s.

Craniology.

CRANIA AMERICANA; or Comparative View of the Skulls of various Nations of North and South America, with an Essay on the Varieties of the Human Species. Imp. folio, 78 Plates, and Map, 6l. 6s.

Chania Egyptica; or Observations on Egyptian Ethnography, derived from Anatomy, History, and the Monuments. 4to, Plates, 21s.

Discourses on Life.

By HENRY GILES, Author of "Lectures and Essays." Second Edition. 12mo, 5s. cloth.

Education, American.

Theory and Practice of TEACHING; or the Motives and Methods of Good Schoolkeeping. By David P. Page, late Principal of the Normal School, Albany, New York. Fourteenth Edition, 8vo, 7s.

The School and the Schoolmaster; a Manual for the use of Teachers, Employers, Trustees, Inspectors, &c. of Common Schools. By A. Potter and C. B. Emerson. 8vo, 7s.

The Common School System of the State of New York, with a Historical Sketch of the Origin, Progress, and Present Outline of the System. By S. S. RANDALL. 8vo, 7s. 6d.

he Massachusett's System of Common Schools; being an enlarged and revised Edition of the Tenth Annual Report of the First Secretary of the Massachusett's Board of Education. 840, sewed, 7s.

TENT EGYPT.—Her Monuments, Hieroglyphics, History, Archae. ogy, &c., with numerous Illustrations. By G. R. Guddon. 440, 22.

Electric Telegraph.

BOOK of the TELEGRAPH; with numerous Illustrations. By DANIEL DAVIS. 12mo, sewed, 1s. 6d.

Encyclopædia Americana.

Translated from the German Conversations Lexicon, with Additions. 14 vols. 8vo, 6l. 6s.

Engineer's Pocket Companion.

The Pocket Companion for Machinists, Mechanics, and Engineers. By Oliver Byrne. 12mo, roan tuck, 6s. 6d.

English Dictionary.

A UNIVERSAL AND CRITICAL DICTIONARY of the ENGLISH LANGUAGE: to which are added, Walker's Key to the Pronunciation of Classical and Scripture Proper Names, much enlarged and improved, and a Pronouncing Vocabulary of Modern Geographical Names. By E. J. WORCESTER. Imp. 8vo, sheep, £1. 4s.

A DICTIONARY of the ENGLISH LANGUAGE, containing three times the Matter found in any other English Dictionary, a Geographical Table of 12,000 Names, Illustrative Quotations, &c. &c. By NOAH

WEBSTER, LL.D. 4to, 31s. 6d. cloth.

English Grammar.

The Geammar of English Grammaes; with an Introduction, Historical and Critical: the whole Methodically Arranged and amply Illustrated; with Forms of Correcting and of Parsing, Improprieties for Correction, Examples for Parsing, Questions for Examination, Exercises for Writing, Observations for the Advanced Student, Decisions and Proofs for the Settlement of Disputed Points, Occasional Strictures and Defences, and Exhibition of the several Methods of Analysis, and a Key to the Oral Exercises: to which are added, Four Appendixes, pertaining separately to the Four Parts of Grammar. By GOOLD Brown, Author of the "Institutes of English Grammar," &c. &c. 1 vol. 8vo, pp. 1028, 21s. cloth.

ENGLISH GRAMMAR in Familiar Lectures, and a System of Philosophical Grammar. To which are added an Appendix and a Key to

the Exercises. By S. KIRKHAM. 12mo, sheep, 3s. 6d.

Essays and Reviews.

By EDWIN P. WHIPPLE. Second Edition. 2 vols. 12mo, 14s. cloth. Ethics.

Manual of Political Ethics. By F. Lieber. 2 vols. 8vo., 28s. An Introduction to Ethics, from the French of Jouffrey. By W. H. Channing. 2 vols. 8vo, 14s.

Ethnology and Ethnography.

ETHNOGRAPHY and Philology of the United States Exploring Expedition. By II. Hale. Vol. 1. containing the Languages of the Pacific Islands, and the Western Coast of America. Imp. 4to, 31. 3s.

An Investigation of the Theories of the Natural History of Man, By Lawrence, Pritchard and others, founded upon Anunal Analogies, and an outline of a new History of Man, founded upon History, Anatomy, Physiology, and Human Analogies. By William F. Van Amringe. 8vo. 21s.

The Progress of Ethnology.—An account of recent Archeological, Philological and Geographical Researches in various parts of the Globe, tending to elucidate the Physical History of Man. By John

Russell Bartlett. 8vo, 6s.

Thoughts on the Original Unity of the Human Race. By C. Carr. Well, M.D. 2d edition, revised. 12mo, 4s. 6d.

Founding and Moulding.

The MOULDER'S and FOUNDER'S POCKET GUIDE: a Treatise on Moulding and Founding in Green Sand, Dry Sand, Loam, and Cement, &c.; with an Appendix. By F. OVERMAN. With 42 Wood Engravings, 12mo, 6s.

Geography.

ANCIENT and MEDIEVAL GEOGRAPHY; for the Use of Schools and Colleges. By C. Anthon, LL.D. 8vo, cloth, 10s. 6d.

MORSE'S NORTH AMERICAN ATLAS. 46 Maps. Imp. 4to, £1. 4c. MITCHELL'S NEW UNIVERSAL ATLAS of the WORLD. 122 Maps.

- A PRONOUNCING GAZETTEER; containing Topographical, Statistical, and other Information, of all the more important Places in the known World, from the most recent and authentic Sources. By Thos. Baldwin. Ninth Edition. 8vo, 9s.
- A VOCABULARY OF GEOGRAPHICAL PRONUNCIATION, for the Use of Schools, being the Supplement to Baldwin's Pronouncing Gazetteer. 12mo, 2s.

MORSE'S SCHOOL GEOGRAPHY: illustrated with Geographical Maps

and numerous Woodcuts. 4to, boards, 8s. 6d.

An HISTORICAL GEOGRAPHY of the BIBLE: illustrated by Maps, from the Latest and most Authentic Sources, of various Countries mentioned in the Scriptures. By L. Coleman. New Edition, 12mo, half-bound, 8s.

Geology.

ELEMENTARY GROLOGY. By E. HITCHCOCK, LL.D. With an Introduction by the Rev. JOHN PYE SMITH. 12mo, sheep, 7s. 6d. GEOLOGY and INDUSTRIAL RESOURCES of CALIFORNIA. By PHILIP

T. Tyson. Maps. 8vo, 7s. 6d.

Government.

A DISQUISITION on Government, and a Discourse on the Constitution and Government of the United States. By JOHN C. CALHOUN, Esq. 8vo, 21s.

Greek Grammar.

An ELEMENTARY GRAMMAR of the GREEK LANGUAGE: containing a Series of Greek and English Exercises for Translation, with the requisite Vocabularies, and an Appendix on the Homeric Verse and Dialect. From the German of Kühner. By SAMUEL H. TAYLOR. Post 8vo, cloth, 9s.

GRAMMAR of the GREEK LANGUAGE, for the Use of High Schools

and Colleges. By R. Kühner. 8vo, sheep, 18s.

GREEK OLLENDORFF: being a Progressive Exhibition of the Principles of the Greek Grammar. Designed for Beginners in Greek, and as a Book of Exercises for Academies and Colleges. By A. C. KENDRICK. 1 vol. post 8vo, 6s.

A ROMAIC Grammar and Chrestomathy. By E. Sophocles. 12mo, 6s.6d.

Gunnery.

An Elementary Course of Instruction on Ordnance and Gunnery; prepared for the use of the Midshipmen at the Naval School. By James H. Ward. 8vo, 10s.

A Concise THEATISE on the Theory and Practice of Naval Gunnery.

By WILLIAM N. JEFFERS, Jun. 8vo, 16s.

Gunpowder.

Experiments in Gunpowder, made at Washington Arsenal. By Captain Mordecai. 8vo, 12s.

i

Horticulture.

The FRUIT and FRUIT TREES of AMERICA; or, the Culture, Propagation, and Management, in the Garden and Orchard, of Fruit Trees Generally; with Descriptions of all the Finest Varieties of Fruit, Native and Foreign, Cultivated in that Country. By A. J. DOWNING. 9th Edition. 8vo, 9s. cloth.

The Horticulturist, and Journal of Rural Art and Rural Taste, devoted to Horticulture, Landscape Gardening, Rural Architecture, Botany, Pomology, Entomology, Rural Economy. Edited by A. J. Downing. Published Monthly, at 18s. per annum.

Hydraulics.

An Account of Hydraulic and other Machines for Raising WATER. By T. EWBANK. 8vo, with numerous Illustrations, 18s. cloth.

Iron Manufacture.

The Manufacture of Iron in all its Branches; including a Description of Forge-Hammers, Rolling-Mills, Blast Machines, Hot Blast, &c.; and an Essay on the Manufacture of Steel. By FREDERICK OVERMAN. 2d edition enlarged, 8vo, with 150 Wood Engravings, 30s. cloth.

TRAITE, Theorique et Pratique de la Fabrication de la Fonte et du Fer, accompagné d'un exposé des Améliorations dont cette industriè est susceptible. Par B. VALERIUS. 3 vols. royal 8vo, with Atlas

of 64 plates. £4. 10s. Bruxelles.

Lake Superior.

Its Physical Character, Vegetation, and Animals, compared with those of other and similar Regions. By Louis Agassiz. With a Narrative of the Tour, by J. Elliot Cabot. 8vo, with Illustrations. 24s. cloth.

Latin Lexicon.

A New and Copious Lexicon of the Latin Language: compiled from the Lexicons of Facciolati and Forcellini, Scheller, Luene-MANN, and FREUND. By E. P. LEVERETT. Imp. 8vo, sheep, £1.16s.

Lectures and Essays.

By HENRY GILES. In 2 vols. 12mo, 9s. cloth.

Magnetism.

A MANUAL of MAGNETISM. By DANIEL DAVIS. With numerous Illustrations. 12mo, 7s. 6d.

Mathematics.

The Philosophy of Mathematics. Translated from the "Cours de Philosophie Positive" of Auguste Comtr. By W.M. GILLESPIE. 8vo, cloth, 8s.

Mechanics, Practical.

MECHANICS for the MILLWRIGHT, MACHINEST, ENGINEER, CIVIL ENGINEER, ARCHITECT, AND STUDENT, containing a clear Elementary Exposition of the Principles and Practice of Building Machines. By F. OVERMAN. With Illustrations, 12mo, 7s.

PHILOSOPHY of the MECHANICS of Nature, and the Source and Modes of Action of Natural Motive Power. By Z. Allen, illustrated with

numerous Woodcuts. 8vo, 24s.

Medical Jurisprudence.

Designed for the Professions of Law and Medicine. By AMOS DEAR, Counseller at Law, and Professor of Medical Jurisprudence in the Albany Medical College. 8vo, 30s. calf.

ELEMENTS OF MEDICAL JURISPEUDENCE. By T. R. BROK, M.D., and JOHN B. BECK, M.D. 10th American Edition (1851), revised. and enlarged. 2 vols. 8vo. £4 calf

Meteorology.

ELEMENTS of METEOROLOGY; with Questions for Examination. Designed for Schools and Families. By J. BROCKLESBY. 12mo, cloth, 5s.

Mexico.

MEXICO: Aztec, Spanish and Republican. By Brantz Mayer. 2 vols.

8vo, numerous plates.

The OTHER SIDE; or, Notes for the History of the War between Mexico and the United States. Written in Mexico; translated from the Spanish, and Edited with Notes, by Col. Albert C. Ramsay. 1 vol. sm. 8vo, 8s. Maps, Plans, &c.

History of Mexico, from Documents made while resident in that Country as American Minister. By M. Thompson. 8vo, 10s.6d. cloth.

The Microscopist; or, a Complete Manual on the Use of the Microscope, for Physicians, Students, and all lovers of Natural Science, with Illustrations. By Joseph H. Wythes, M.D. 12mo, 6s.

VIEWS of the MICROSCOPIC WORLD; designed for General Reading, and as a Hand-Book for Classes in Natural Science. By J. Brocklesby. Square 12mo, 6s. cloth.

Millwright's Guide.

The American Miller and Millwright's Companion. By W. C. HUGHES. Illustrated by numerous Cuts of Machinery, &c. 12mo, 6s. cloth.

Mining.

A COMPILATION of Spanish and Mexican Law in Relation to Mines, Titles to Real Estate, in force in California, Texas, and New Mexico, and in the Territories acquired under the Louisiana and Florida Treaties, when annexed to the United States. By JOHN A. ROCKWELL. Vol. I, 8vo, 2l. 12s. 6d.

Mineralogy.

A MANUAL of Mineralogy, including Observations on Mines, Rocks, Reductions of Ores, and the Applications of the Science to the Arts; designed for the Use of Schools and Colleges. By JAMES D. DANA. 12mo, with 260 Illustrations. 7s. 6d.

A SYSTEM of MINERALOGY; comprising the most recent Discoveries. By JAMES D. DANA. 3d Edition. Re-written, rearranged, and enlarged. With numerous Woodcuts and Steel Engravings. 8vo, 24s. cloth.

PRACTICAL MINERALOGY.—Mining and Assaying, Instructions for Assaying and Mining, Description of Useful Minerals, &c. By F. OVERMAN. 12mo, 4s. 6d.

Mississippi

HISTORY of the Discovery and Settlement of the Valley of the Mississippi. By J. W. Monette. 2 vols. 8vo, 28s.

Mormonism.

The History of the SAINTS; or, an Exposure of Joe Smith and Mormonism. By John C. Bennett, 12mo. Third Edition. The History of the MORMONS. By Henry Caswall. 12mo, 7s. 6d.

The Mormons, or Latter Day Saints; with Memoirs of the Life and Death of Joseph Smith, "the American Mahomet." Illustrated with 40 Engravings. 2s. 6d.

The Book of MORMON. 12mo, 3s. 6d.

The BOOK of MORMON Doctrines and Covenants. 12mo. 2s. 6d. REPORT of the Commission of the United States' Government on the 8vo. Mormons.

Music.

THEORY and PRACTICE of Musical Composition. By A. B. MARX.
Translated from 3d German Edit. By II. L. SARONI. 8vo. 18s.

RUDIMENTAL LESSONS in Music; containing the Primary Instruction requisite for all Beginners in the Art, whether Vocal or Instrumental. By James F. Warner, translator of Weber's "Theory of Musical Composition." 18mo, 3s.

Napoleon.

The Imperial Guard of Napoleon; from Marengo to Waterloo. By J. T. Headley. 12mo, 7s. 6d.

Natural History.

A LEXICON of Terms used in Natural History: prepared for Schools, Colleges, and Families. By W. S. W. RUSCHENBERGER. 12mo, boards, 2s. 6d.

HERPETOLOGY of North Amerca, or a Description of the Reptiles inhabiting the United States. By J. E. HOLBROOK. 5 vols. 4to, plates.

Newton's Principia.

The Mathematical Principles of Natural Philosophy. By Sir ISAAC NEWTON. Translated by MOTTE. With Life by CHITTENDEN. 8vo, sheep, £1. 1s.

New Mexico.

REPORT of the U.S. TOPOGRAPHICAL ENGINEERS, viz .-

 Report of a Reconnaissance of a Route for a Road from San Antonio to El Paso. By Lieut. W. F. Smith, Corps of Topographical Engineers.

Report of Reconnaissance of the Country between Corpus Christi and the Military Post on the Leona. By Lieut. N. Michler.

 Report of a Reconnaissance of the Sacramento Mountains. By Lieut. W. F. Smith.

 Report of a Reconnaissance of a Route from San Antonio, via Fredericksburg, to El Paso, to obtain information in reference to a permanent Military Road from the Gulf of Mexico to El Paso. By Lieut. F. T. Bryan.

5. Report of Brevet Lieut.-Col. Johnson, descriptive of the Country

between San Antonio and El Paso.

 Report of a Recommissance of a Route from the Upper Valley of the South Branch of Red River to the Rio Pecos. By Lieut. N. Michler.

7. Report from Lt.-Col. Johnson on Condition of the Rio Colorado. One Volume, 8vo. Numerous Maps and Illustrations, on Stone and in Chromo-Lithography. 18s.

Notes of a Military Reconnaissance from Fort Leavenworth in Missouri, to San Diego in California; including Parts of Arkansas, Del Norte, and Gila Rivers. By Brevet-Major W. H. Emory. 8vo,

Maps and Plates. 5s.

JOURNAL of a Military Reconnaissance from Santa Fé, New Mexico, to the Navaji Country, made with the Troops under the command of Brevet Lieut-Col. John M. Washington, Chief of the 9th Military Department, and Governor of New Mexico in 1849. By James H. Simpson, First Lieutenant of Corps of Topographical Engineers. One vol. 8vo, Maps and Plates, 18s.

North Carolina.

Historical Sketches of North Carolina, from 1584 to 1851. Compiled from Original Records, Official Documents, and Traditional Statements, with Biographical Sketches of her distinguished Statesmen, Jurists, Divines, Lawyers, Soldiers, &c. By John H. Wheeler, late Treasurer of the State. Illustrated with Engravings. Suo, 14s.

Orations and Speeches.

By CHARLES STRNER, Author of "The True Grandeur of Nations, &c. 2 vols. 12mo, 16s. cloth.

ORATIONS and Speeches, on Various Occasions. By EDWARD EVERETT. 2 vols. 8vo, 32s. cloth.

Owen's Classics.

HOMER.—The Iliad of Homer, according to the Text of Wolf; with Notes for Use of Schools and Colleges. By J. J. Owen, D.D. 8vo, 9s. HOMER.—The Odyssey of Homer, according to the Text of Wolf, with Notes. By John J. Owen, D.D. Seventh Edition. 8vo, 9s. THUCYDIDES.—The History of the Peloponnesian War, by Thucydides, according to the text of L. Dindorf. With Notes, for the use of Colleges. By John J. Owen, D.D. 8vo, 12s. XENOPHON.—The Anabasis of Xenophon; chiefly according to the

XENOPHON.—The Anabasis of Xenophon; chiefly according to the Text of L. Dindorf, with Notes. By J.J. Owen. Seventh Edit. 8vo, 8s. XENOPHON.—The Cyropædia of Xenophon, according to the Text of Dindorf, with Notes. By John J. Owen. 8vo, 9s.

Painting.

The THEORY of EFFECT, embracing the Contrast of Light and Shade, of Colour, and of Harmony. By an Artist. 15 Illustrations. 12mo, 3s. Patents.

PATENT OFFICE REPORTS.—Annual Reports of the Commissioner of Patents for the Years 1849 and 1850. 2 vols. 10s.

The INVENTORS' MANUAL of LEGAL PRINCIPLES, and GUIDE to the PATENT OFFICE. By GEO. T. CURTIS. 12mo, 7s. cloth.

JOURNAL of the Franklin Institute, and Record of Inventions and Discoveries. Published monthly. Subscription, 30s. per annum.

Pennsylvania.

Its GEOGRAPHY, HISTORY, &c., with an Account of its Climate, Soil, Agriculture, Resources, &c. By C. B. TREGO. 12mo, Map. 5s. 6d.

HISTORICAL COLLECTIONS of the State of Pennsylvania, containing a copious selection of the most Interesting Facts, Traditions, Biographical Sketches, Anecdotes, &c., relating to the History and Antiquities, both General and Local, with Topographical Descriptions of every County and all the larger Towns in the State. By SHERMAN DAY. 1 vol. 8vo, illustrated with 165 wood engravings, 21s. bound.

Perfumery.

Its MANUFACTURE and USE, with Instructions in every Branch of the Art, and Recipes for all Fashionable Preparations: for the Use of the Perfumer, Druggist, and Soap Maker. By C. MORFIT. 12mo, with numerous Woodcuts, 7s. 6d. cloth.

Pharmacy.

A Universal Formulary; containing the Methods of Preparing and Administering Officinal and other Medicines. The whole adapted to Physicians and Pharmaceutists. By R. E. Griffith. 8vo, 16s. cloth. United States Dispersatory. Ninth Edition, revised (1851). By Wood and Bache. 8vo, pp. 1456, 32s. cloth.

UNITED STATES PHARMACOPŒIA. A New Edition, 1851. 16s. cloth.

Philosophy.

EPITOME of the HISTORY of PHILOSOPHY. By C. S. HENRY. 2 vols. 12mo, 8s.

SKETCHES OF MODERN PHILOSOPHY. By JAS. MURDOCK. 18mo.

Political Economy.

A TREATISE ON POLITICAL ECONOMY. By G. OPDYKE. 12mo, 5s. cloth.
The HARMONY OF INTERESTS, Agricultural, Manufacturing, and and Commercial. By H. C. CARKY. 870, 3s. 6d.

Photography.

A SYSTEM OF PHOTOGRAPHY; containing an explicit Detail of the whole Process of Daguerrectype, according to the most approved Method of Operating, including all the late valuable Improvements, &c. By S. D. HUMPHREY, 18mo, 4s.

The HISTORY and PRACTICE of the Art of PHOTOGRAPHY. By H. H. SNELLING. 12mo, Cuts, 6s. cloth.

PHOTOGRAPHIC ART JOURNAL. Edited by H. H. SNELLING. Vol. II.

1851. Royal 8vo, 18s. each.

DAGUERRIAN JOURNAL.—The Daguerreian Journal, devoted to the Daguerreian and Photographic Arts; also embracing the Sciences, Arts, and Literature. S. D. HUMPHREY, Editor. Vol. I. 8vo, 18s. Vol. II. 12s.

Poetical Quotations.

A DICTIONARY OF PORTICAL QUOTATIONS: consisting of Elegant Extracts on every Subject. Compiled from various Authors, and arranged under appropriate Heads. By J. F. WATSON. 12mo, 7s. 6d.

A COMPLETE DICTIONARY OF POETICAL QUOTATIONS; comprising the most excellent and appropriate Passages from the Old British Poets; with Choice and Copious Selections from the best Modern British and American Poets. Edit. by S. J. HALE. 8vo, 10s. 6d. bnd.

SACRED QUOTATIONS.—Dictionary of Sacred Quotations, or Scripture Themes and Thoughts, as Paraphrased by the Poets. Selected and Arranged by Rev. H. H. Weld. Sm. 8vo, 7s. 6d.

Poetry.

BUCHANAN READ'S POEMS.—Illustrated with 14 Woodcuts from Designs by KENNY MEADOWS. Fcp. 8vo, 7s. 6d. cloth.

Lowell's Poems.—Poems of James Russell Lowell, Author of the "Bigelow Papers." 2 vols. 12mo, 14s. cloth.

HOLMES'S POEMS.—POEMS OF OLIVER WENDELL HOLMES, Author of

"Urania, a Rhymed Lesson," &c. &c. 12mo, 7s. cloth.

LONGFELLOW'S POEMS.—Complete Edition, in 2 vols. 12mo, 12s. cloth.
LONGFELLOW'S POEMS.—Illustrated Edit. complete in 1 vol. 24s. bnd.
The Female Poets of America, with Portraits, Biographical Notices, and Specimens of their Writings. By Thomas Buchanan Read.
Third Edition. 8vo, morocco.

Poultry.

THE AMERICAN POULTRY-BOOK: being a Practical Treatise on the Management of Domestic Poultry. By M. R. Cock. 18mo, 3s.

THE POULTRY-BOOK: a Treatise on Breeding and General Management of Domestic Fowls, with numerous Original Descriptions, and Portraits from Life. By JOHN C. BENNETT, M.D. 12mo, 6s.

Psychology.

Bational PSYCHOLOGY; or the subjective Idea and the objective Law of all Intelligence. By LAURENS P. HICKOCK, D.D. Svo, 16s.

Elements of PSYCHOLOGY contained in a Critical Examination of "Locke's Essay on the Understanding," by VICTOR COUSIN. Translated from the French by S. C. HENRY. 12mo, 5s.; with the Appendix, 5s. 6d.

Road Making.

A MANUAL of the PRINCIPLES and PRACTICE of ROAD-MAKING: tomprising the Location, Construction, and Improvement of Roads, Common, Macadam, Paved, Plank, &c. By W. M. GYLLESPLE, A.M., 3d Edition. 8vo, 9s. cloth.

History, Structure, and Statistics of Plank Roads in the United States and Canada, by W. Kingspord, C.E. With Remarks on

Roads in general, by F. G. SKINNER. 8vo, 3s.

Scientific Annual, 1852;

Or, Year Book of Facts in Science and Art; exhibiting the most i portant Discoveries and Improvements, List of Scientific Publi tions, Patents, Obituaries, &c. Post 8vo, 12mo, 7s. 6d.

Silliman's Journal

Of Sciences and Arts. Published every alternate Month. 5s. ex

Soap and Candles.

The Chemistry of the Manufacture of Soap and Candles. By CAN BELL MORFIT. 8vo, numerous Illustrations, 30s. cloth.

Spanish Language.

OLLENDORFF'S New Method of learning to Read, Write, and Speak t Spanish Language. By M. Velasquez and T. Simonne. Po Svo, half-bound, 10s. 6d.—Key to the Same. 12mo, 6s.

An Ollendorff's Method for Spaniards to Learn English.
RAMON PALENGUELA. 12mo, 12s.
A New Spanish Reader; being a Sequel to Ollendorff's New Meth of Learning to Read, Write, and Speak the Spanish Languag.
M. Velasquez de la Cadena. 12mc, 7s. 6d.
An Easy Introduction to Spanish Conversation; containing

that is necessary to make a rapid Progress in it. By M. VELASOT DE LA CADENA. 18mo, 2s. 6d.

Steam Engine.

A TREATISE on the MARINE BOILERS of the UNITED STATES. B. H. BARTOL, Engineer. Svo, Plates, 10s. cloth.

Steel.

The MANUFACTURE of STEEL, containing the Practice and Princi of Working and Making Steel: a Handbook for Blacksmiths Workers in Steel and Iron, &c. By F. OVERMAN. 12mo, 4s. 6

Story's Works.

The Miscellaneous Writings of JOSEPH STORY. Edited by his & WILLIAM W. STORY. 8vo, 21s.

Tanning and Currying.

A COMPLETE TREATISE on Tanning, Currying, and Every Brand Leather Dressing. By CAMPBELL MORFIT. 1 vol. roy. 8vo, many hundreds of Engravings. 25s.

United States' Exploring Expedition.

By CHARLES WILKES, Commander, U.S.N. 5 vols. imp. 8vo, £4 New Edit. embellished with 111 Steel Plates, 248 Woodcuts, 13 M

Voyage round the World.

Embracing the Principal Events of the Narrative of the United Sta Exploring Expedition. By CHARLES WILKES, U.S.N. 8vo,-178 Engravings on Wood. 18s. cloth.

Weights and Measures.

Universal Dictionary of Weights and Measures, Ancient and Mod reduced to the English Standard. By J. H. ALEXANDER. Svo.

A REVIEW of Edwards's "Inquiry into the Freedom of the Will." H. P. TAPPAN. 3 vols. 12mo, 18s.

Zoophytes.

The ZOOPHYTES of the United States' Exploring Expediti JAMES D. DANA, Geologist of the Expedition. 1 vol. 4to, 14 and folio Atlas of Plates, £10. 10s.

